



**Simple, Strong,
Quick & Easy.**

ASSEMBLY INSTRUCTIONS - F52 - S

REVISION 06/26

SCAN THIS FOR
HOW TO BUILD VIDEO.



Outside base frame dimensions: W1760mm x D720mm x H1800mm

BEFORE COMMENCING SHED ASSEMBLY, CHECK ALL PARTS.

IF THERE IS A DISCREPANCY, PLEASE CALL STEEL SHEDS AUSTRALIA (SEE REAR OF INSTRUCTION BOOK).

DO NOT ASSEMBLE IN WINDY CONDITIONS	READ INSTRUCTIONS FIRST	2 PERSONS ASSEMBLY

THE MANUFACTURERS CANNOT BE HELD RESPONSIBLE FOR ANY CONSEQUENCES DUE TO SHEDS THAT ARE NOT INSTALLED PER INSTRUCTIONS OR FOR DAMAGE DUE TO WEATHER CONDITIONS, ACTS OF GOD OR FOR SHEDS THAT ARE LEFT PARTIALLY ASSEMBLED OVERNIGHT. PARTS MAY CONTAIN SHARP EDGES & CORNERS. CARE MUST BE TAKEN WHEN HANDLING VARIOUS PIECES TO AVOID A MISHAP, FOR SAFETY SAKE, PLEASE USE A PAIR OF WORK GLOVES, EYE PROTECTION & PROTECTIVE CLOTHING WHEN ASSEMBLING OR PERFORMING ANY MAINTENANCE ON THE BUILDING.

TABLE OF CONTENT

TOOLS REQUIRED.....	3
HANDY HINTS FOR CONSTRUCTION	3
BRACKETS	4
HARDWARES.....	4
SHEET IDENTIFICATION	5
SECTIONS.....	6
FOUNDATION.....	7
TYPICAL SHEET FIXING DETAILS	8
REAR WALL PANEL	9
FRONT WALL PANEL	10
SIDE WALL SHEET LAYING PROCEEDURE	13
STAND AND JOIN WALL PANELS	14
TYPICAL CORNER OVER LAPPING	15
ROOF SHEETING & TRIMS	16
DOOR ASSEMBLY	18
DOOR FITTING	22
ANCHORING SHED TO SLAB	23
BRACKET FIXING TO SLAB LAYOU	23
CARE AND MAINTENANCE (15 YEARS WARRANTY)	24
NOTES.....	26

TOOLS REQUIRED



Electric Drill



Cordless Drill



Measuring Tape



Screwdrivers



8mm Masonry Drill Bit



Shifting Spanner



Builders Pencil



Tin Snips
(some models only)



Rubber Mallet



Sturdy Ladder
(two if possible)



Gloves



Protective Eyewear

HANDY HINTS FOR CONSTRUCTION



Read instructions and check parts carefully before assembling the shed.



Please wear safety gloves and glasses at all times to protect against sharp metal edges.



Do not assemble in windy conditions as panels may be difficult to handle and damage may result.



Do not back fill against the shed as this will result in corrosion. Allow drainage from the site.





MOST PILOT HOLES ARE PRE-PUNCHED AND IN THIS CASE DRILLING HOLES IS NOT NECESSARY, HOWEVER SOME PILOT HOLES NEED TO BE DRILLED WITH THE INCLUDED 2.5MM DRILL BIT WHERE INDICATED

F52-S ASSEMBLY MANUAL

FASTTRAK


BRACKETS

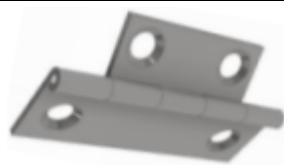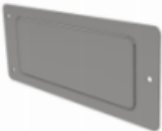CORNER BRACKET X 4	
HINGES X 2	
PADBOLT & KEEPER X 1	
DOOR PLATE X 1	

CORNER CAP X 4	
55mm BRACKET x 2	

HARDWARES

M8x40 MASONRY ANCHOR X 6	
SELF TAPPING SCREW X 200	
2.5mm DRILL BIT X 1	
NUT & BOLT 3/16" x 4	

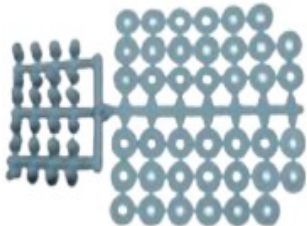PLASTIC WASHER & SCREW CAP SHEET X 1	
PHILIPS HEAD DRIVE BIT X 1	
CLIP NUT x 2	

F52-S ASSEMBLY MANUAL


FASTTRAK

SHEET IDENTIFICATION

SHEET	C
DESCRIPTION	WALL PANEL
LENGTH "X"	1800mm
QTY	7

SHEET	E
DESCRIPTION	ROOF PANEL
LENGTH "X"	803mm
QTY	4



SHEET IDENTIFICATION	D
DESCRIPTION	WALL CORNER PANEL
LENGTH "X"	1800mm
QTY	5

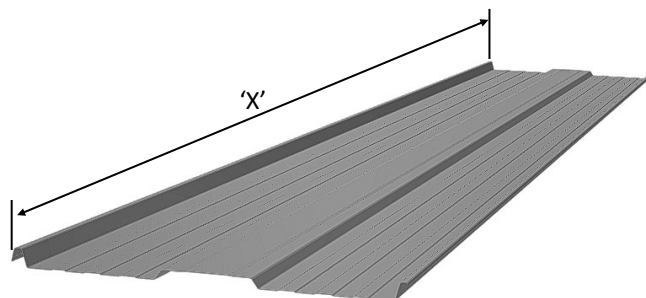

SHEET	F
DESCRIPTION	DOOR PANEL SIDE (PARTIALLY SLIT)
LENGTH "X"	1738
QTY	2

SHEET	G
DESCRIPTION	DOOR PANEL CENTRE
LENGTH "X"	1738mm
QTY	1

NB: F Door panels come partially Slit

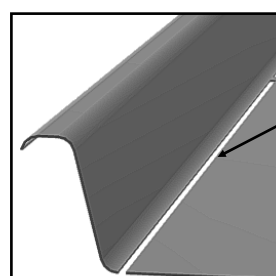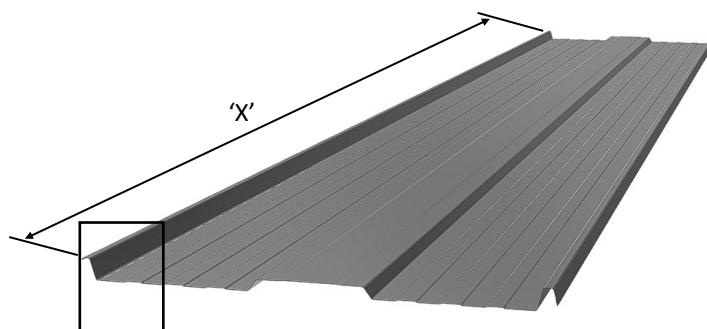

SPLIT CUT ALONG
SHEET LENGTH
—SMALL RIB SIDE

F52-S ASSEMBLY MANUAL

FASTTRAK

SECTIONS

CHANNEL	H	
DESCRIPTION	DOOR FRAME, TOP & BOTTOM CHANNEL	
OVERALL LENGTH	1008mm	
QTY	2	


CHANNEL	I	
DESCRIPTION	DOOR FRAME, SIDE CHANNEL	
OVERALL LENGTH	1742mm	
QTY	2	

CHANNEL	J	
DESCRIPTION	DOOR SIDE BOXING CHANNEL	
OVERALL LENGTH	1706mm	
QTY	2	


CHANNEL	K	
DESCRIPTION	DOOR BRACING CHANNEL	
OVERALL LENGTH	1280mm	
QTY	2	


CHANNEL	M	
DESCRIPTION	TOP / BOTTOM FRONT / REAR SIDE CHANNEL	
OVERALL LENGTH	1753mm	
QTY	4	

CHANNEL	N	
DESCRIPTION	SIDE CHANNEL TOP/ BOTTOM CHANNEL	
OVERALL LENGTH	715mm	
QTY	4	

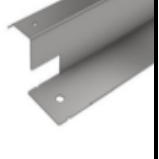CHANNEL	Q	
DESCRIPTION	DOOR JAMB CHANNEL	
OVERALL LENGTH	1800mm	
QTY	2	

CHANNEL	R	
DESCRIPTION	BOTTOM DOOR SPACER CHANNEL	
OVERALL LENGTH	1021mm	
QTY	1	

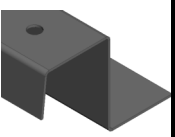CHANNEL	S	
DESCRIPTION	TOP DOOR SPACER CHANNEL	
OVERALL LENGTH	1021mm	
QTY	1	

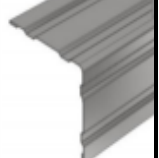CHANNEL	V	
DESCRIPTION	GUTTER TRIM	
OVERALL LENGTH	1750mm	
QTY	2	


CHANNEL	W	
DESCRIPTION	ROOF ANGLE TRIM	
OVERALL LENGTH	795mm	
QTY	2	

F52-S ASSEMBLY MANUAL

FASTTRAK

FOUNDATION


RECOMMENDED SLAB REBATE DETAILS

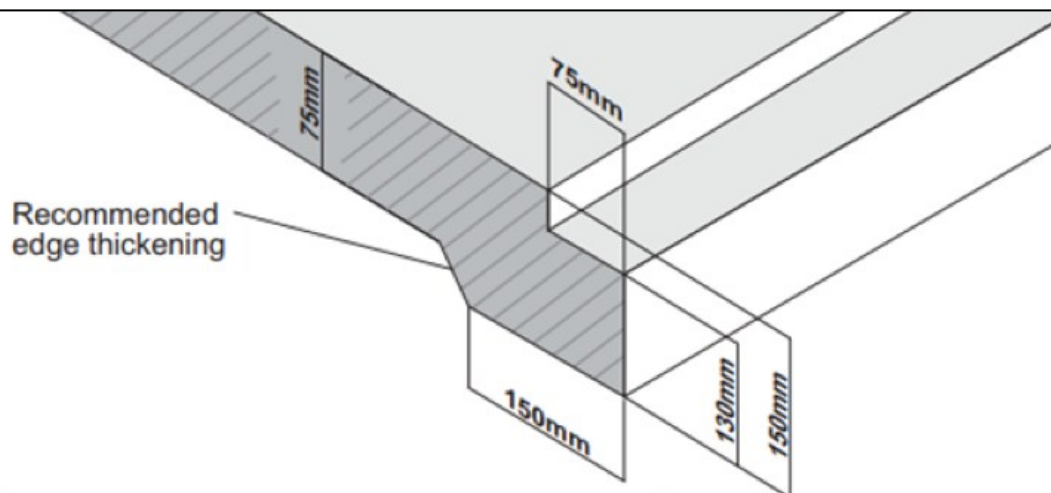

Recommended slab rebate detail

Although not required, it is strongly recommended that, to avoid water leakage around the base of your shed, a rebate be cast into the slab. This will allow the shed to sit below the slab level and prevent water from reaching the upper level of the slab.

If you planning a rebated slab make sure to cut the 4 corners at 60 x 45 degree as shown in detail below

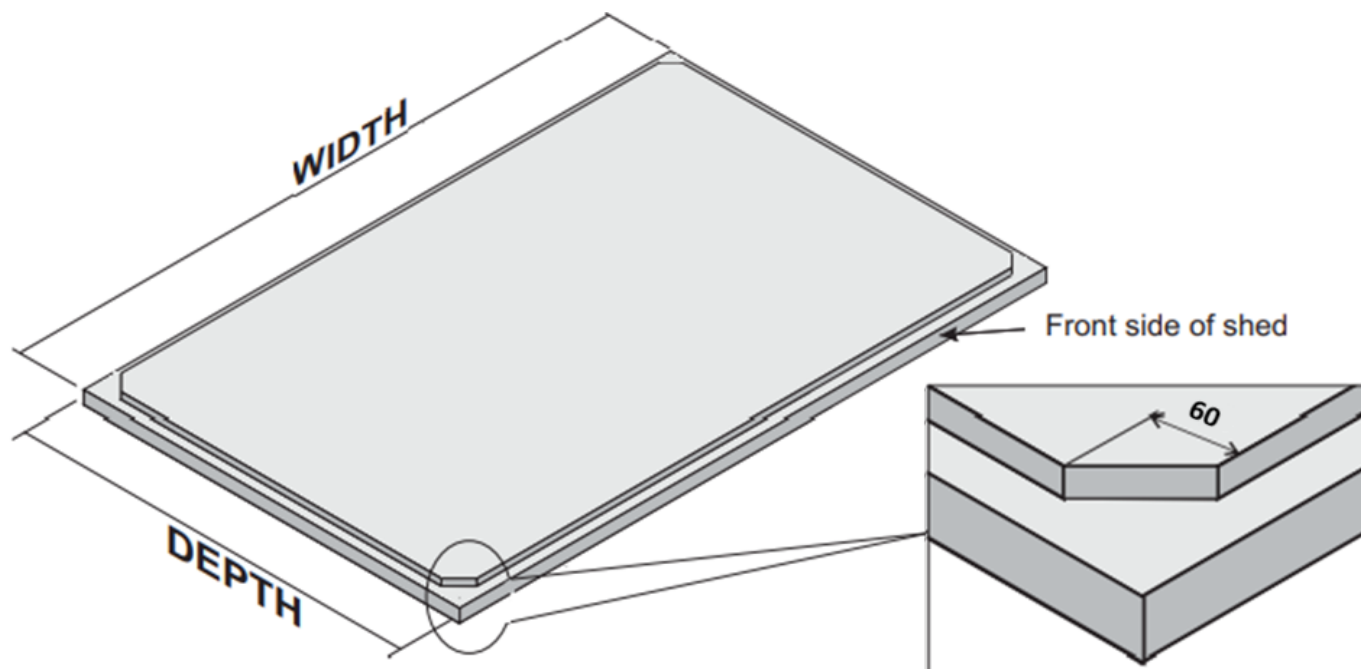



Slab Details Your garden shed must be erected on a solid, level and square foundation. We strongly recommend you pour a concrete slab 75mm thick, reinforced with SL62 mesh (minimum) using dimensions from the table below.

SHED CODE	OUTER SLAB DESIGN (WIDTH x DEPTH)	ANCHORS M8 x 40mm
F52-S	1860mm x 820mm	6


F52-S ASSEMBLY MANUAL

FASTTRAK

TYPICAL SHEET FIXING DETAILS

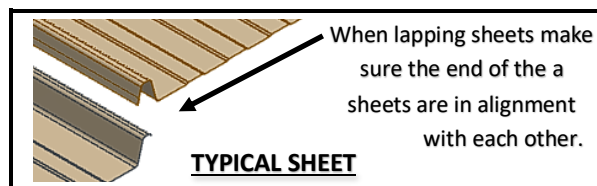
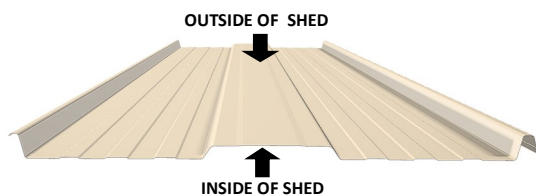


TYPICAL SHEET LAP AT CORNER

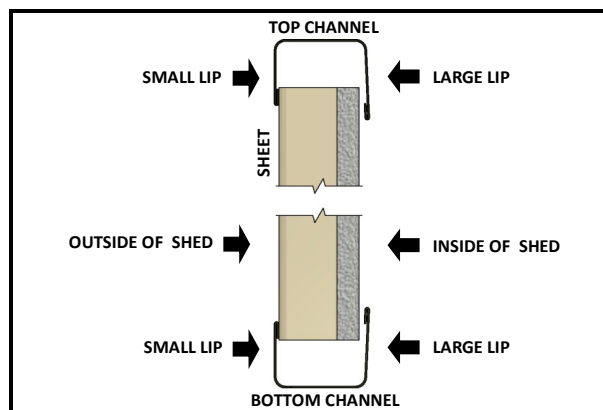


On a clean and uninterrupted work area, we recommend lay suitable wood lengths or work trestles to support the panels off the ground. **DO NOT PUT ANY WEIGHT ON THE SHEETS BETWEEN THE WOOD LENGTHS AS THIS WILL DAMAGE THE SHEETING.**


Locate the required panels and assemble them as shown above. Lay the next sheet on top of the first one making sure the **LARGE RIB** covers the **SMALL RIB**. Lightly tap the bottom of the sheet to make the bottom edge in alignment if required.

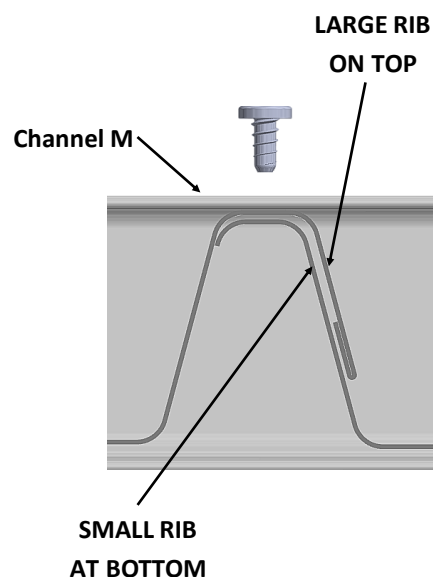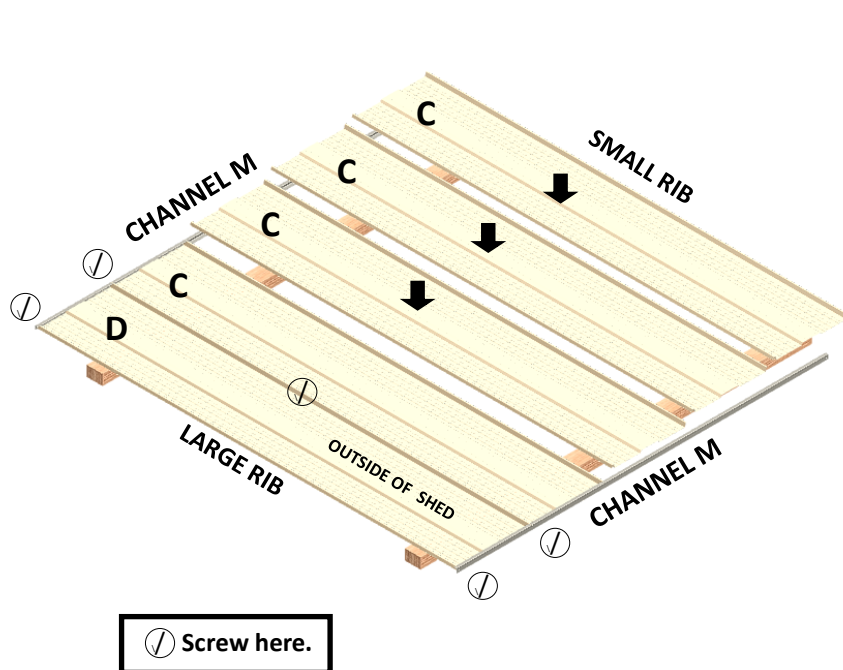

REAR WALL PANEL

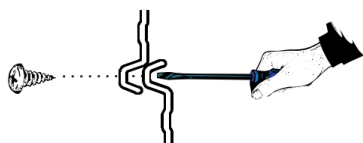

If you are having trouble screwing the channel to the sheets, chock behind the hole .

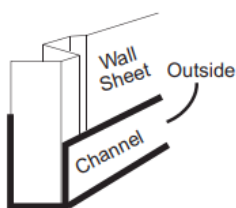


Ensure that the small lip of the chan-
nel is to the outside of the shed.

Large Rib


Small Rib




⌚ = Screw here

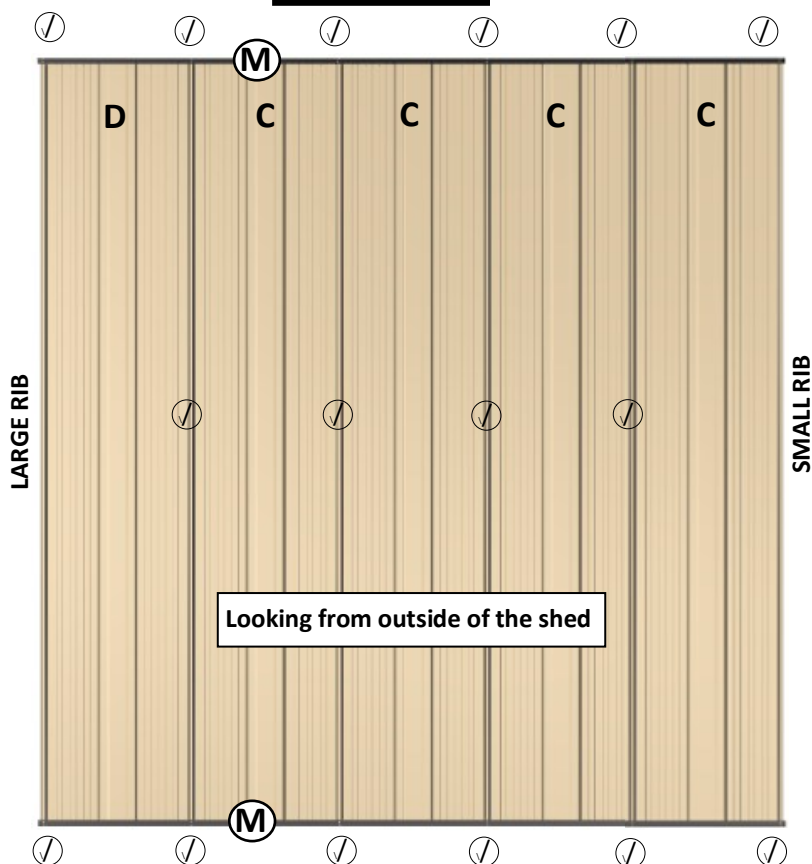

Fit the top and bottom channel to the wall panels. Ensure the channel is flush with the edge of the sheets.

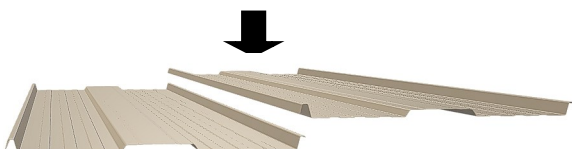


Lay the wall panels (large rib overlapping the
small rib).

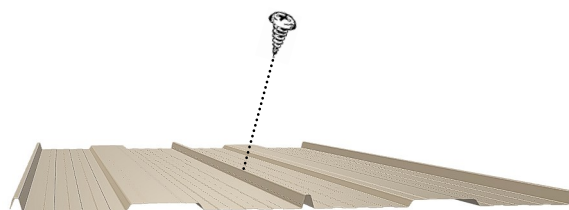


Screw the wall panels at centre of the rib as shown.

Channel ends are orientated to the
outer edges of the panel

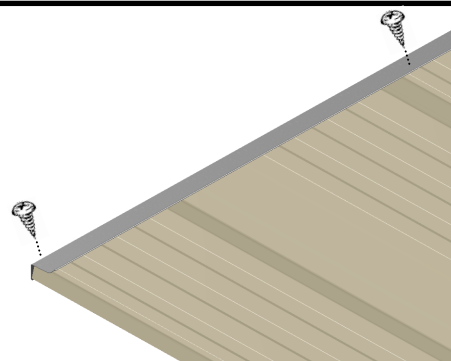


NB: Some channel holes may not align perfectly when the sheets are laid out.
They can be easily manipulated into position and screw to the channel.

FRONT WALL PANEL

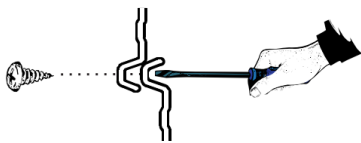


If you are having trouble screwing the channel to the sheets, chock behind the hole .

⌚ = Screw here


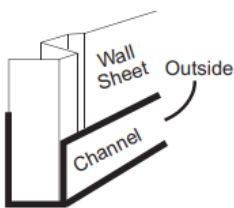


Ensure that the small lip of the channel is to the outside of the shed.


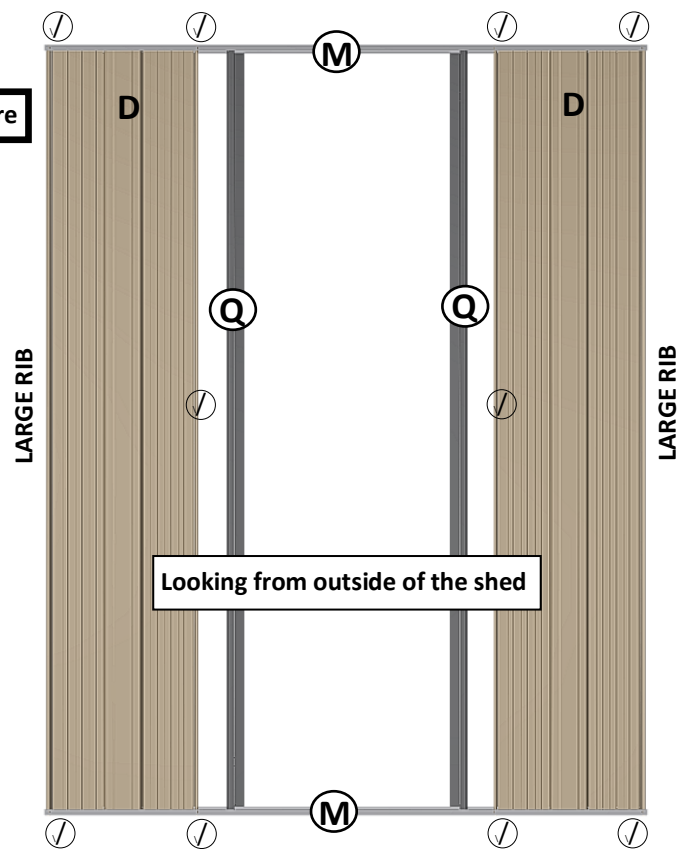


Fit the top and bottom channel to the wall panels. Ensure the channel is flush with the edge of the sheets.

Channel ends are orientated to the outer edges of the panel

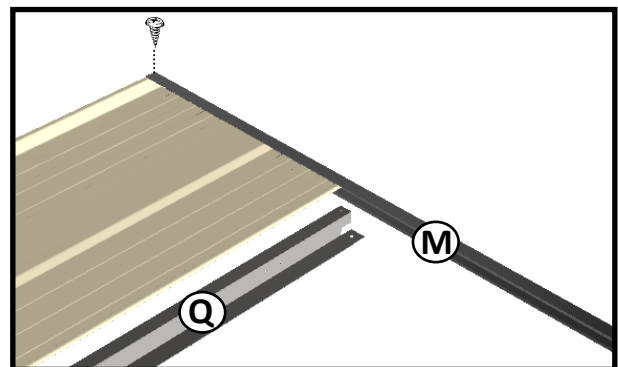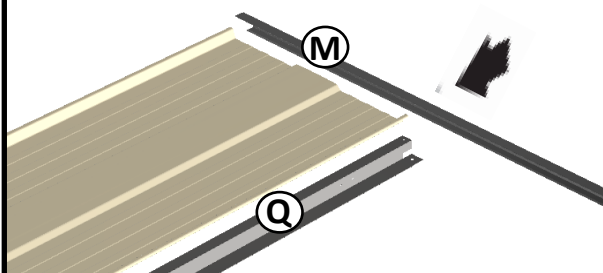


Top and bottom door jamb connection.



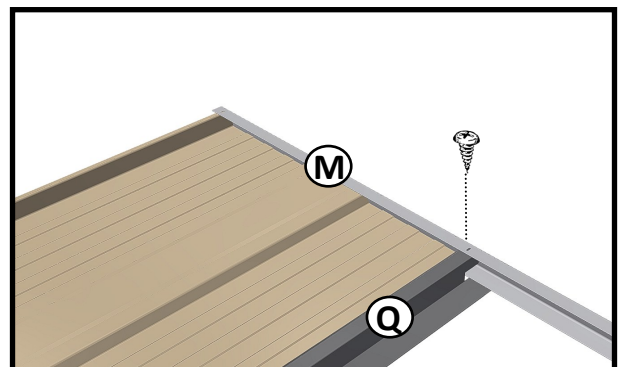
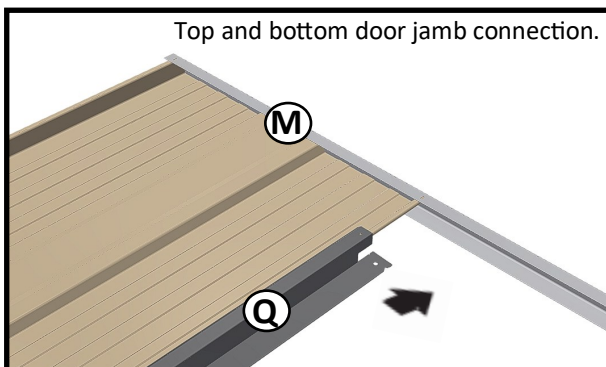


NB: Some channel holes may not align perfectly when the sheets are laid out.
They can be easily manipulated into position and screw to the channel.

FRONT WALL PANEL

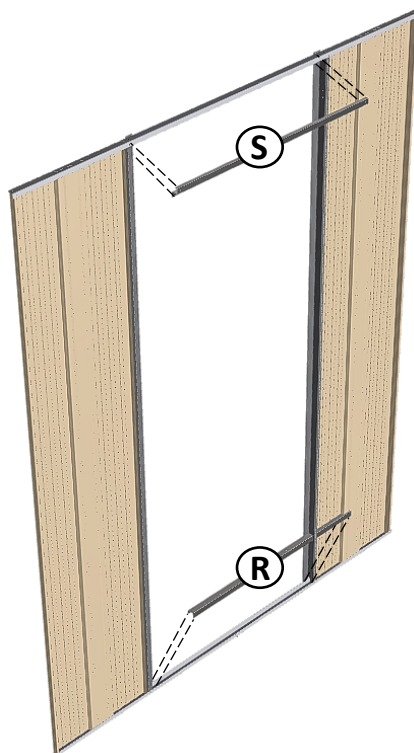

Fit the top door spacer and the bottom door spacer to the front wall panel as shown. Some pilot holes may need to be drilled with the included 2.5mm drill bit

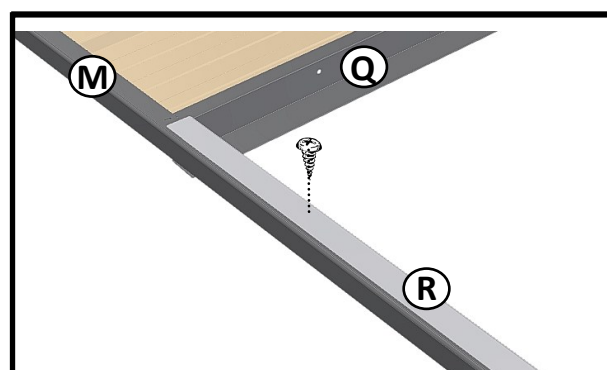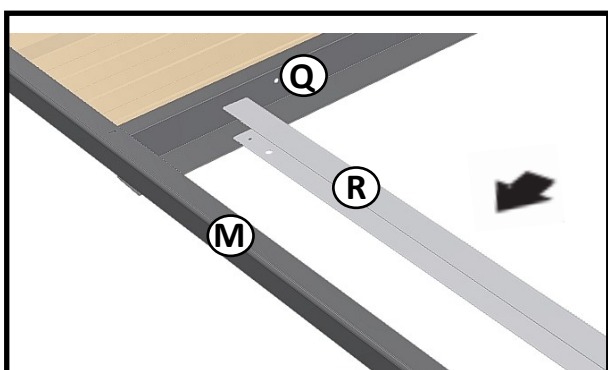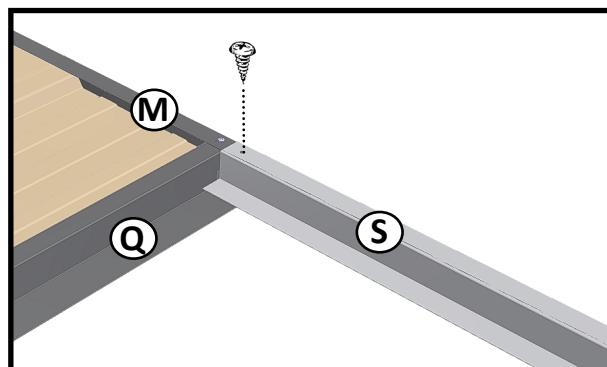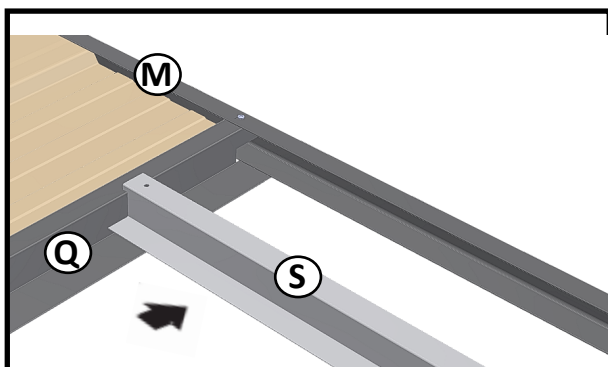


NB: Some channel holes may not align perfectly when the sheets are laid out.
They can be easily manipulated into position and screw to the channel.


F52-S ASSEMBLY MANUAL

FASTTRAK


FRONT WALL PANEL

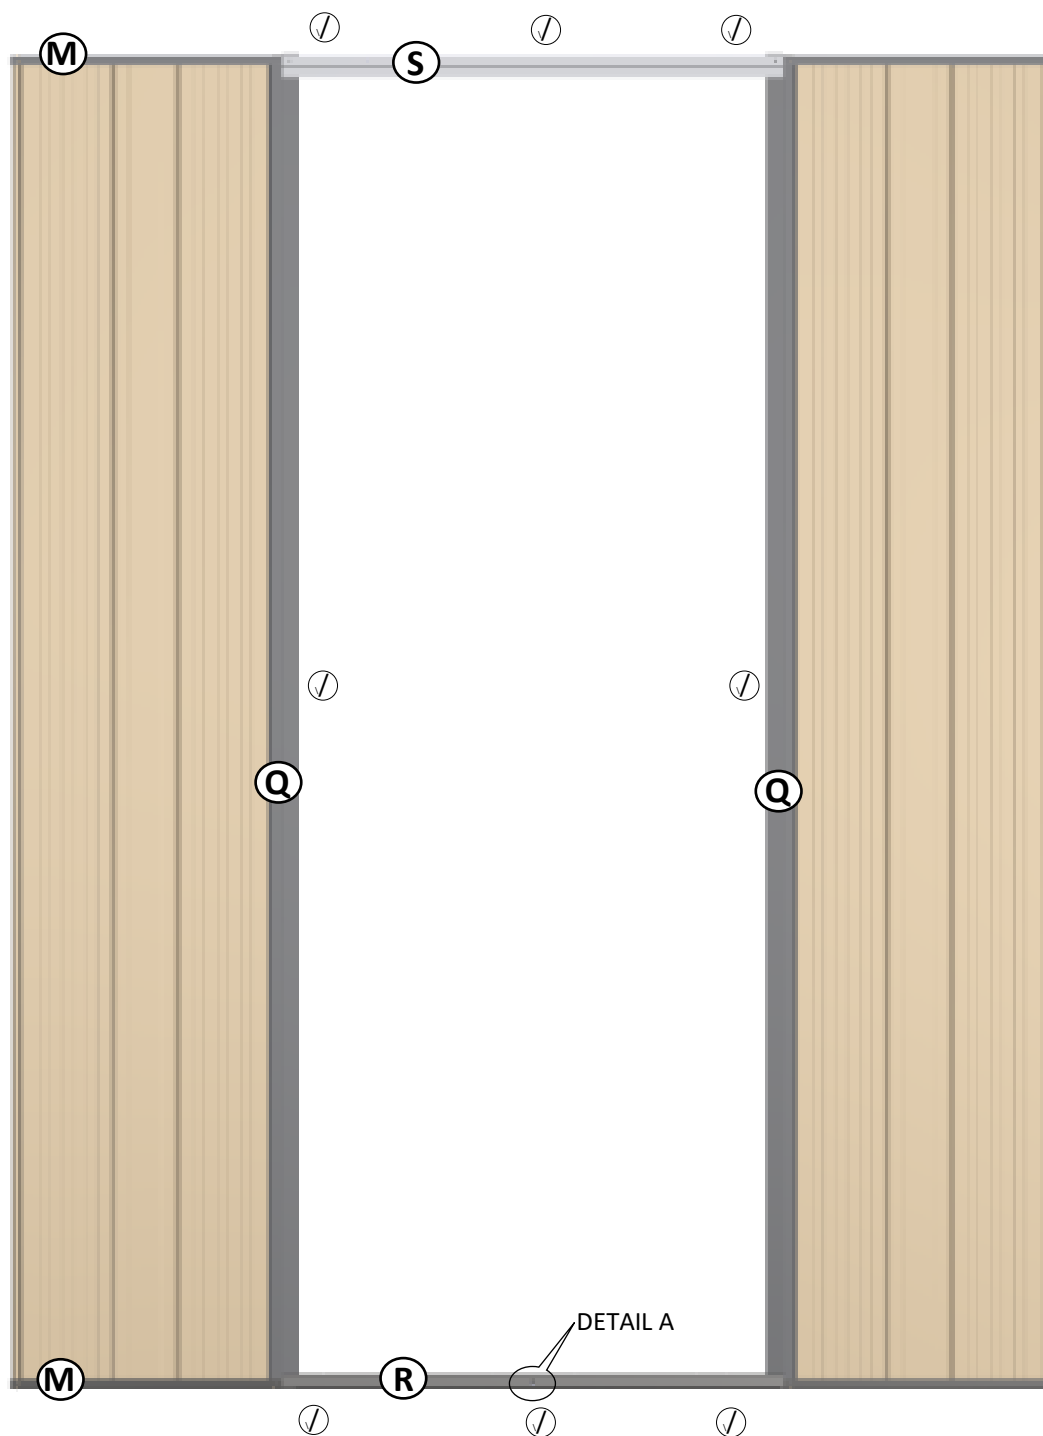


⌈ = Screw here

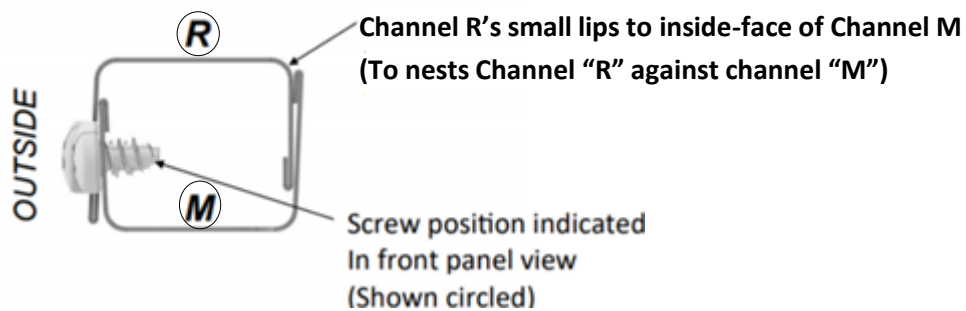



SIDE WALL SHEET LAYING PROCEEDURE

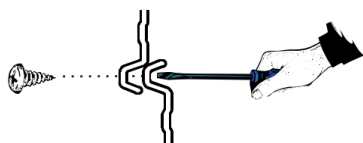


If you are having trouble screwing the channel to the sheets, chock behind the hole .

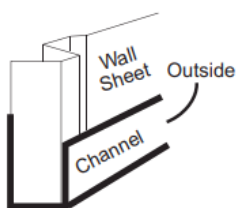

Ensure that the small lip of the chan-
Ensure that the small lip of the chan-

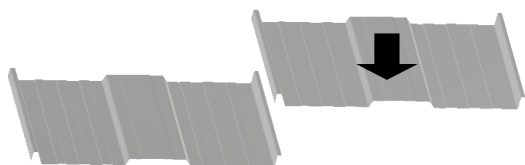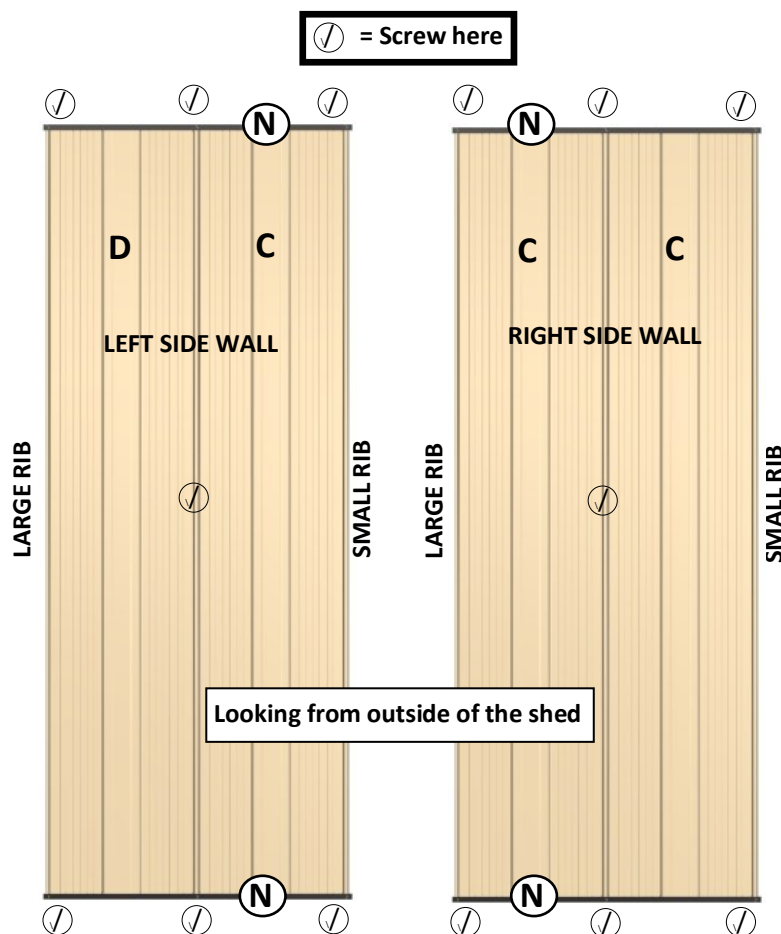


Lay the wall panels out with the large rib overlapping the small.

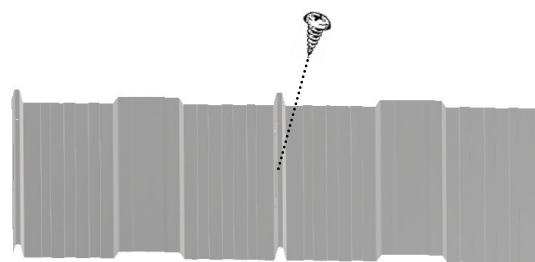

Screw the wall panels at centre of the rib as shown.


Channel ends are orientated to the outer edges of the panel

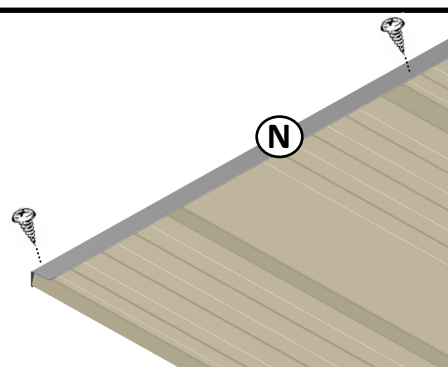


NB: Some channel holes may not align perfectly when the sheets are laid out.
They can be easily manipulated into position and screw to the channel.

STAND AND JOIN WALL PANELS


Once the four wall panels are assembled, they can now be stood and fixed together.

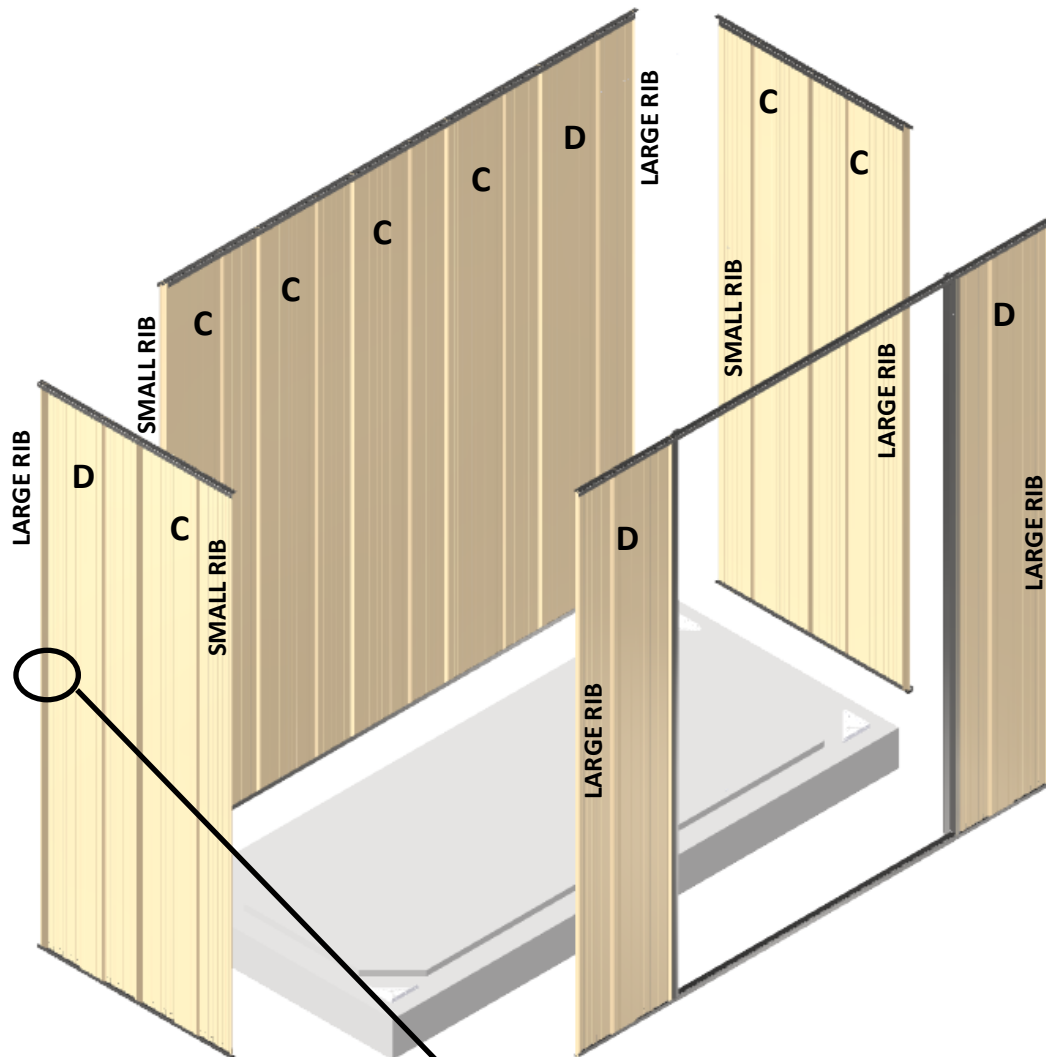

TYPICAL CORNER SCREW FIXING


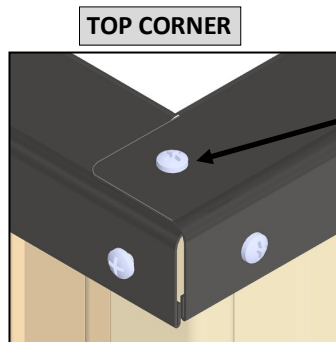


Place channel such a way the large hole on top of small holes.

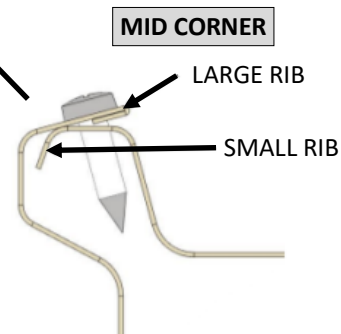

Overlap sheeting ribs and fix panels as shown.
Use 3 screws to fix both panels.

Fix the bottom corners using the corner brackets and screws as shown below. Fix the front panel last. N.B when assembling large wall models, eg. 7 panels width and above, extra care should be taken, with person two providing adequate support to stop the wall from distorting.

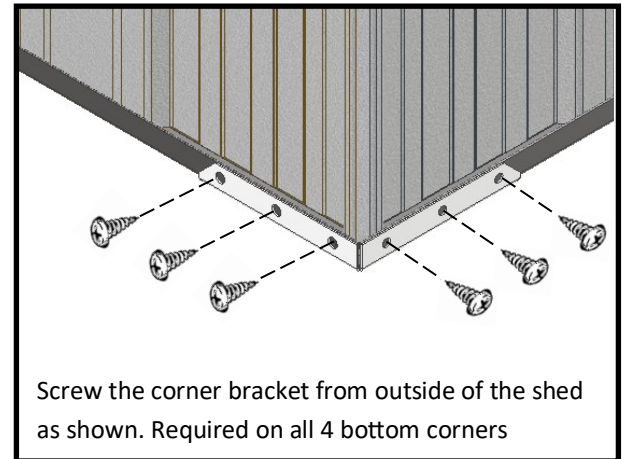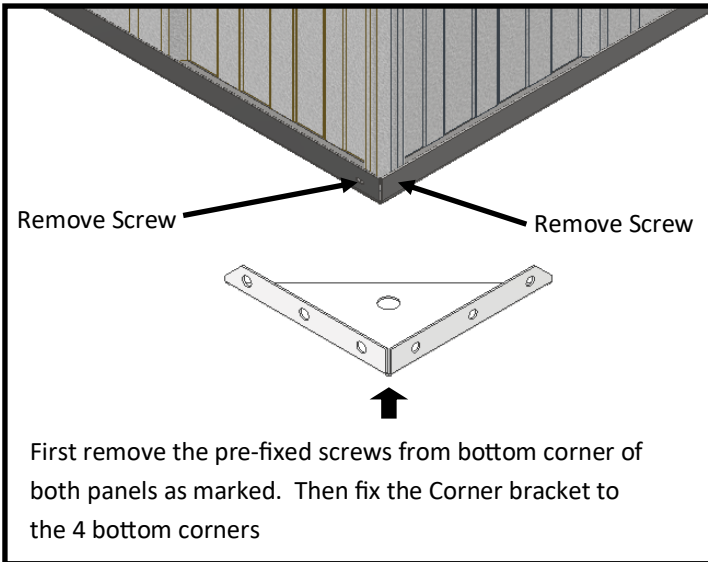


F52-S ASSEMBLY MANUAL

FASTTRAK

ROOF SHEETING & TRIMS

Picture shown a smaller shed. Procedure is same for the F52

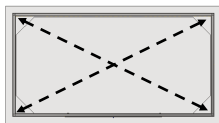

Before fitting the roof sheets

make sure the diagonals are equal




TWO HOLES AT REAR

ONE HOLE AT FRONT


Do not screw this first hole now



Fit plastic washers

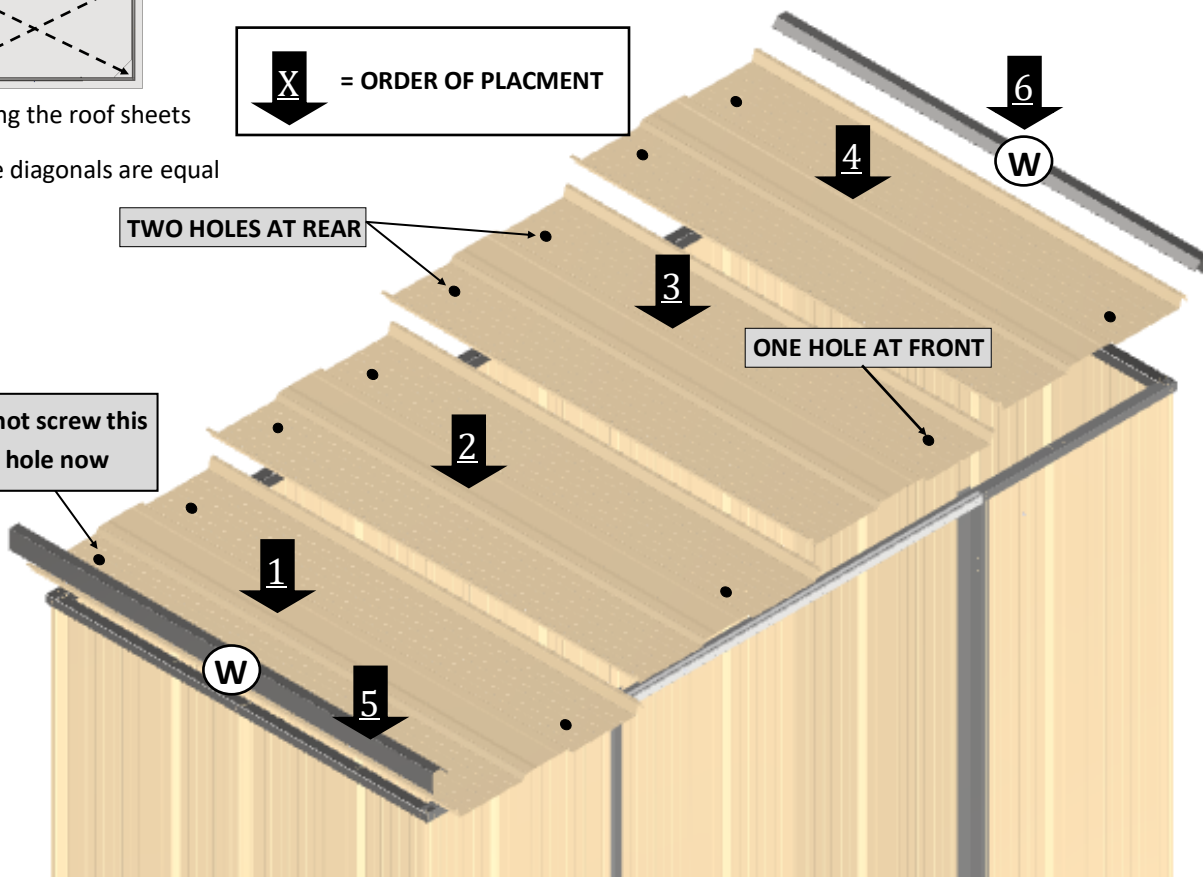


Once the four wall panels are fixed together, the roof Sheets can now be placed one by one as shown to the shed (1 to 5). Be sure to check again that the shed is in square then lift the roof sheets into place and fix with screws as shown below. The holes on the roof sheets align with the "M" channels pilot holes on top of the front and rear wall.

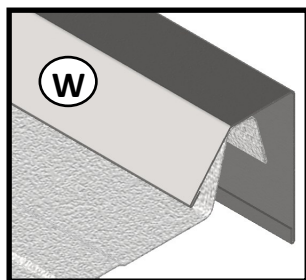


Screw rear side first
Leaving first hole for the last

Pre Drill and
screw here at
last


Remove existing screw from
the side panels and refix it with
side trim "W" on both sides.

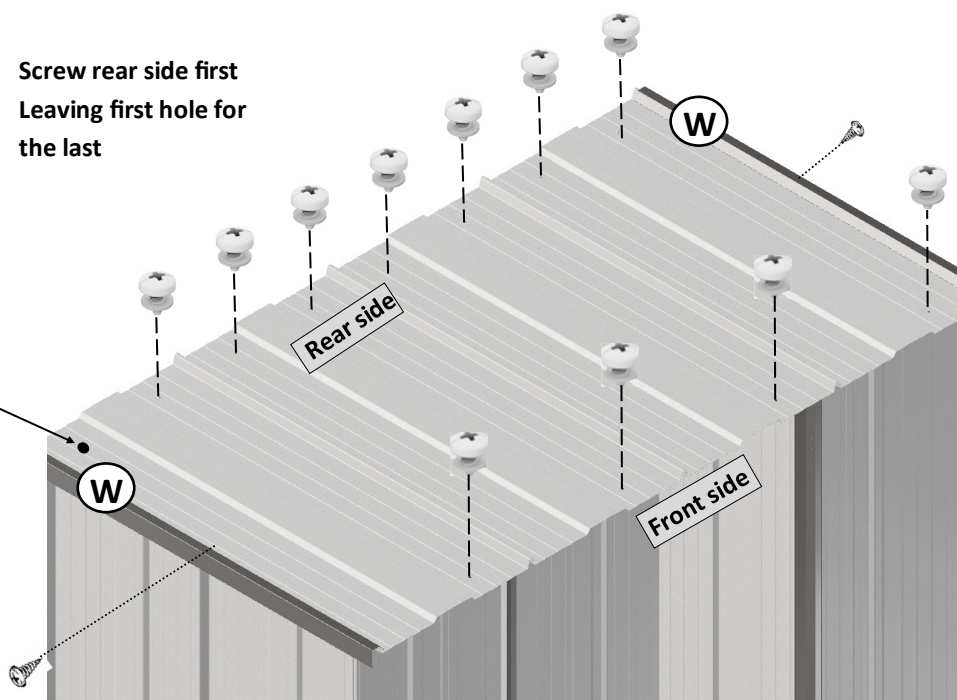


ROOF SHEETING & TRIMS

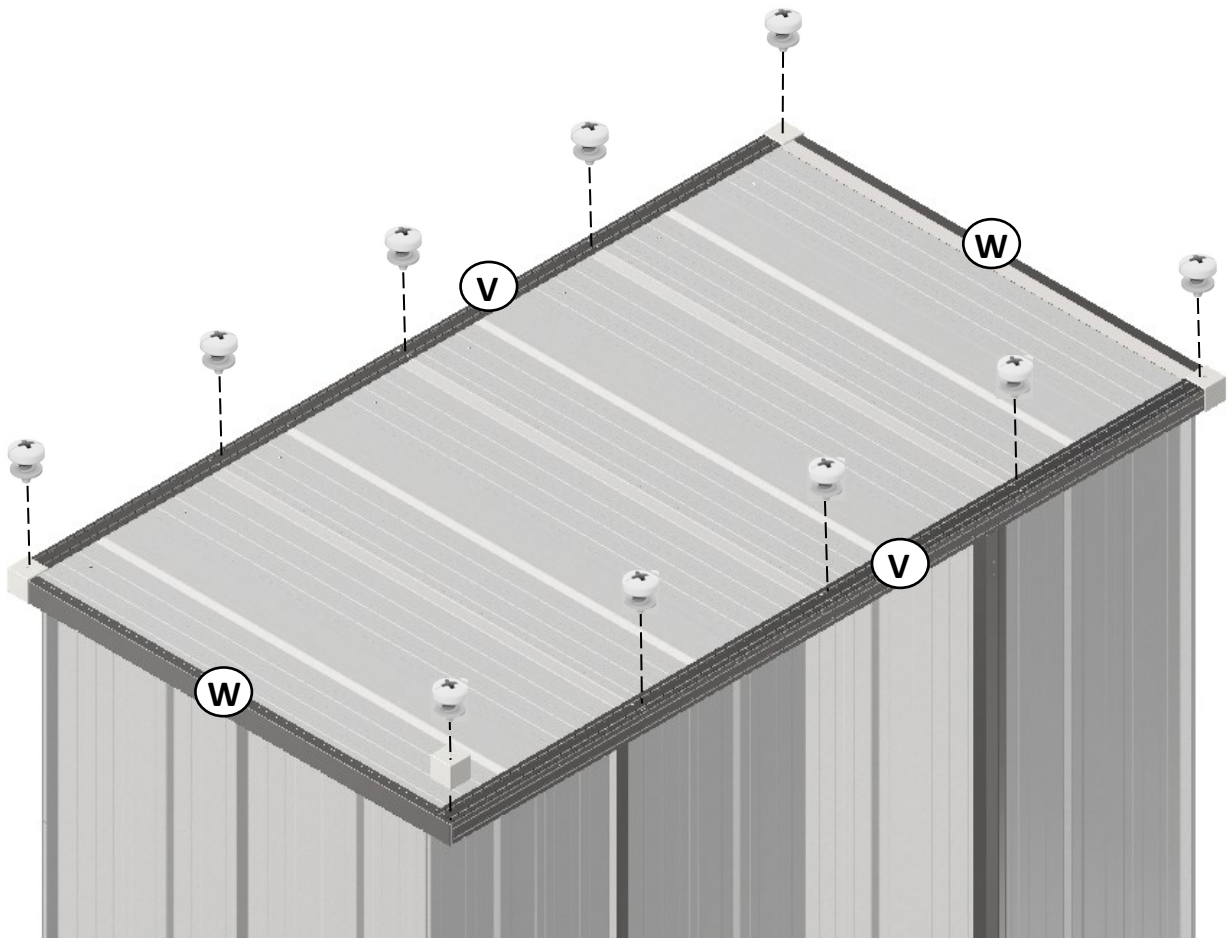



Fix Trim "V" on front and back of the shed. Trim "V" should position on top of Trim "W". Screw the trim "W" on every rib through pre-punched holes.

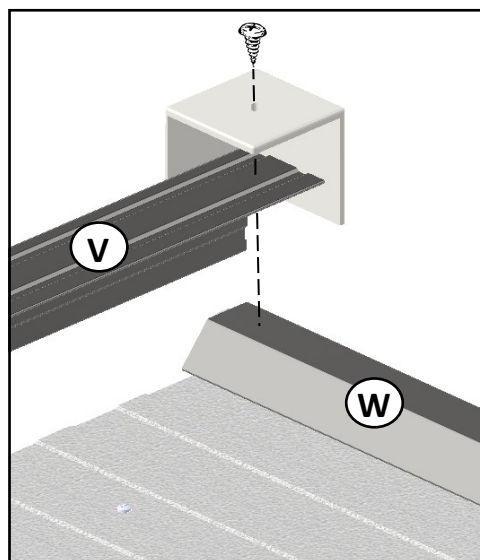



DOOR ASSEMBLY

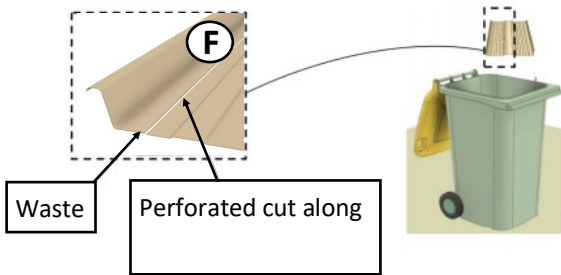

To remove the SMALL lip of the door sheet F, fold back and forth along the perforated pre-cut line. When removed put the waste section into the recycle bin. If too large carefully fold it in half.

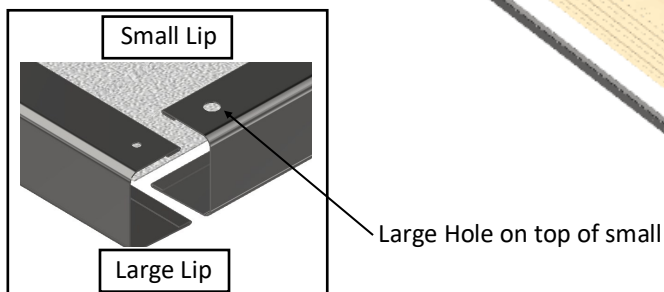
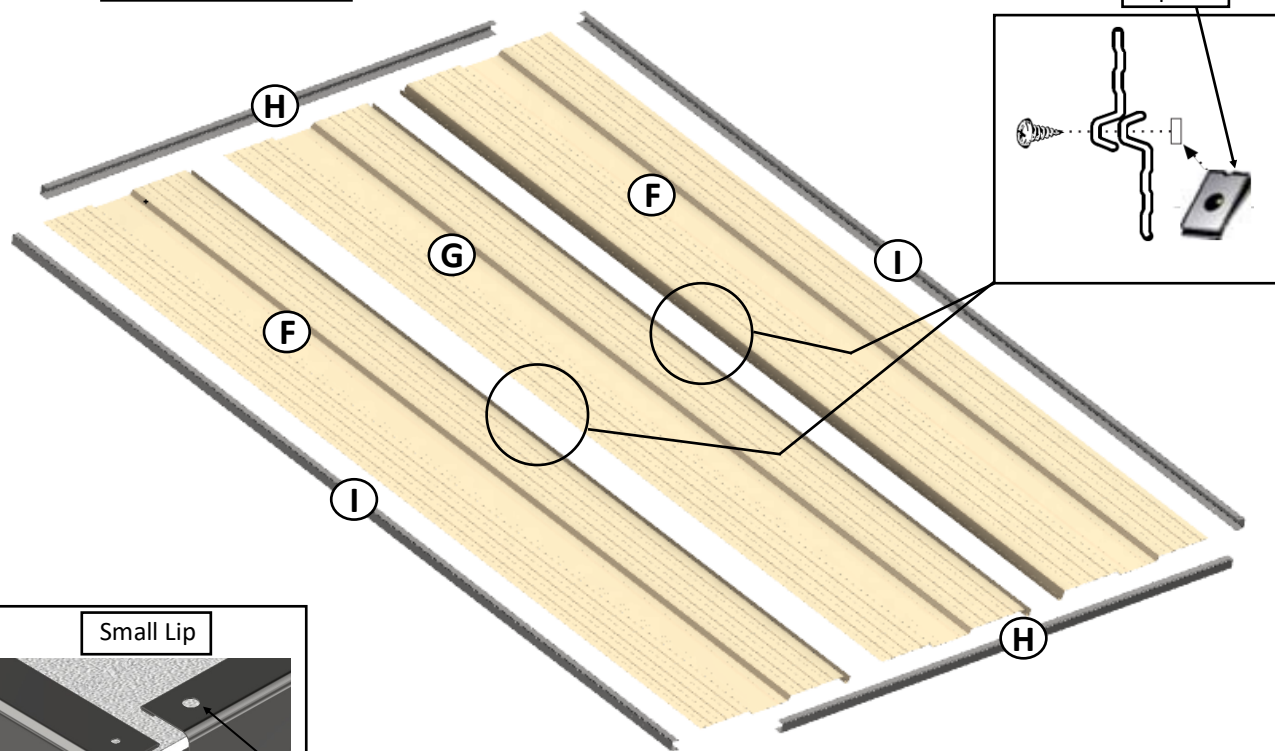


Large rib of the channel is placed to the outside face of the door.

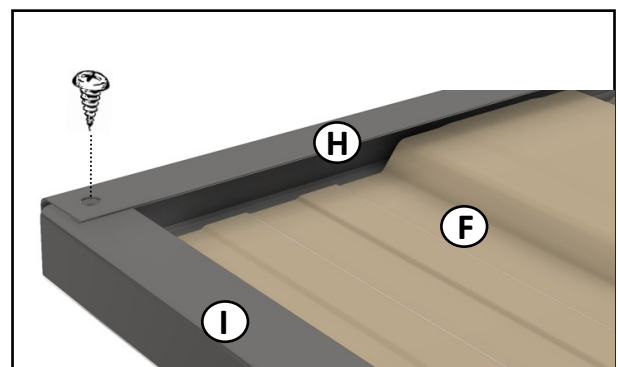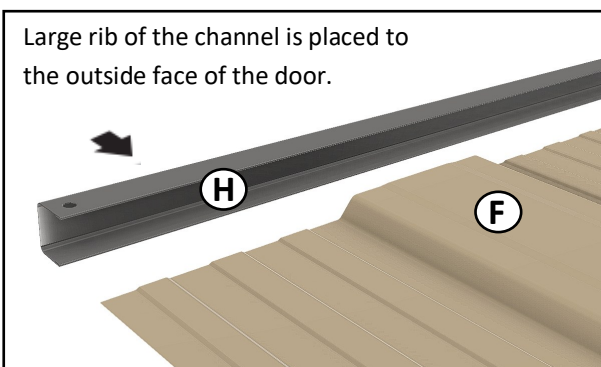


NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.


DOOR ASSEMBLY

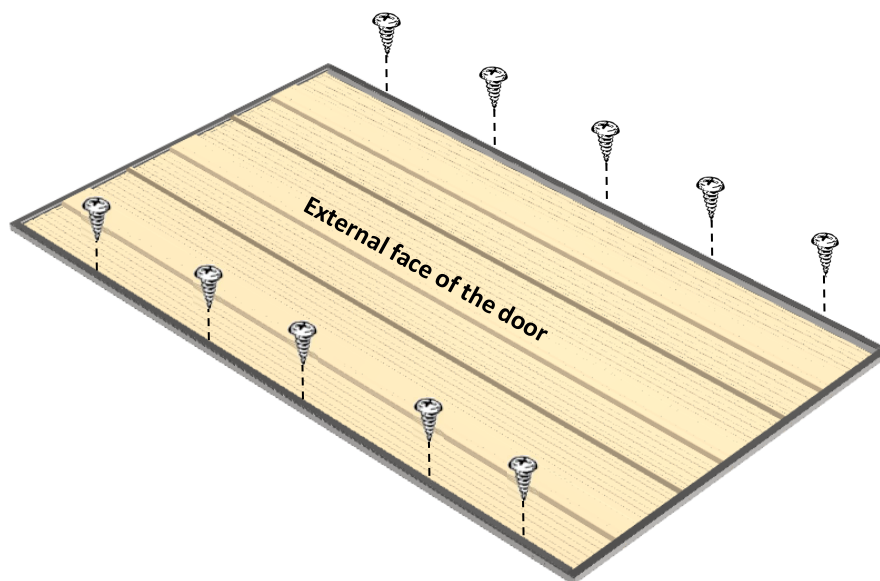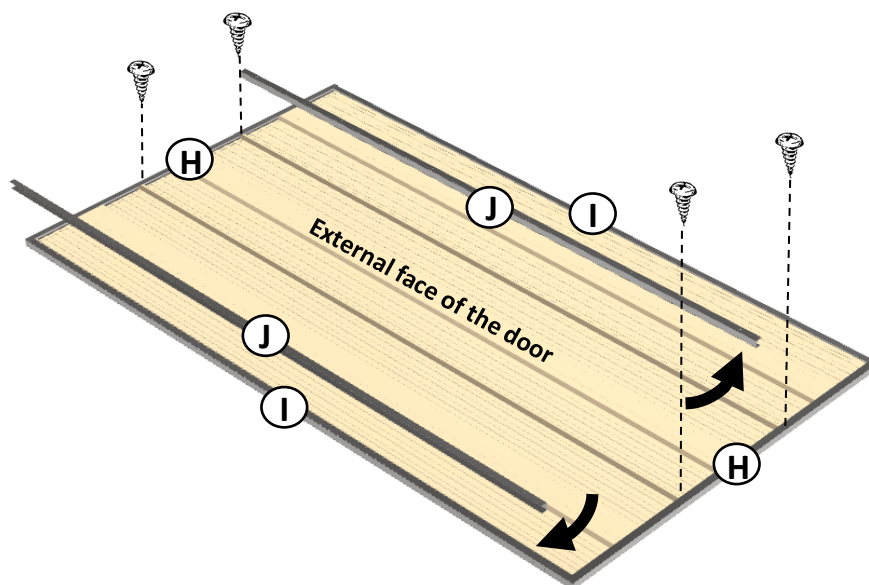


Leave an even gap at both ends of the boxing.
Place large lip of J over the small lip of I as shown

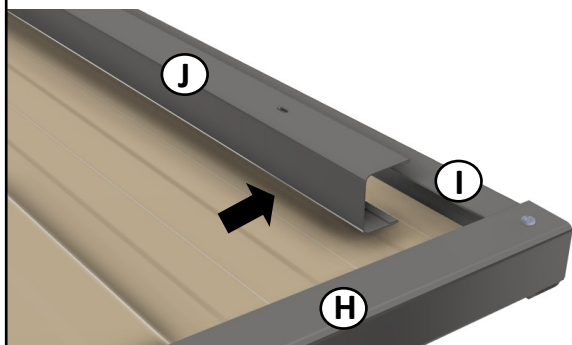



Fix both door boxing in place using six (6) screws.

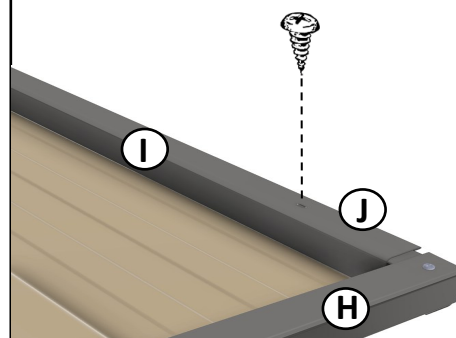

DOOR ASSEMBLY

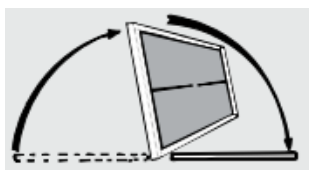


Flip the door assembly over and fix with screws evenly spaced as shown above. Door bracing will also need to be fitted to the door to ensure sturdiness

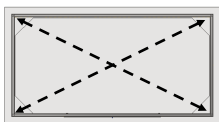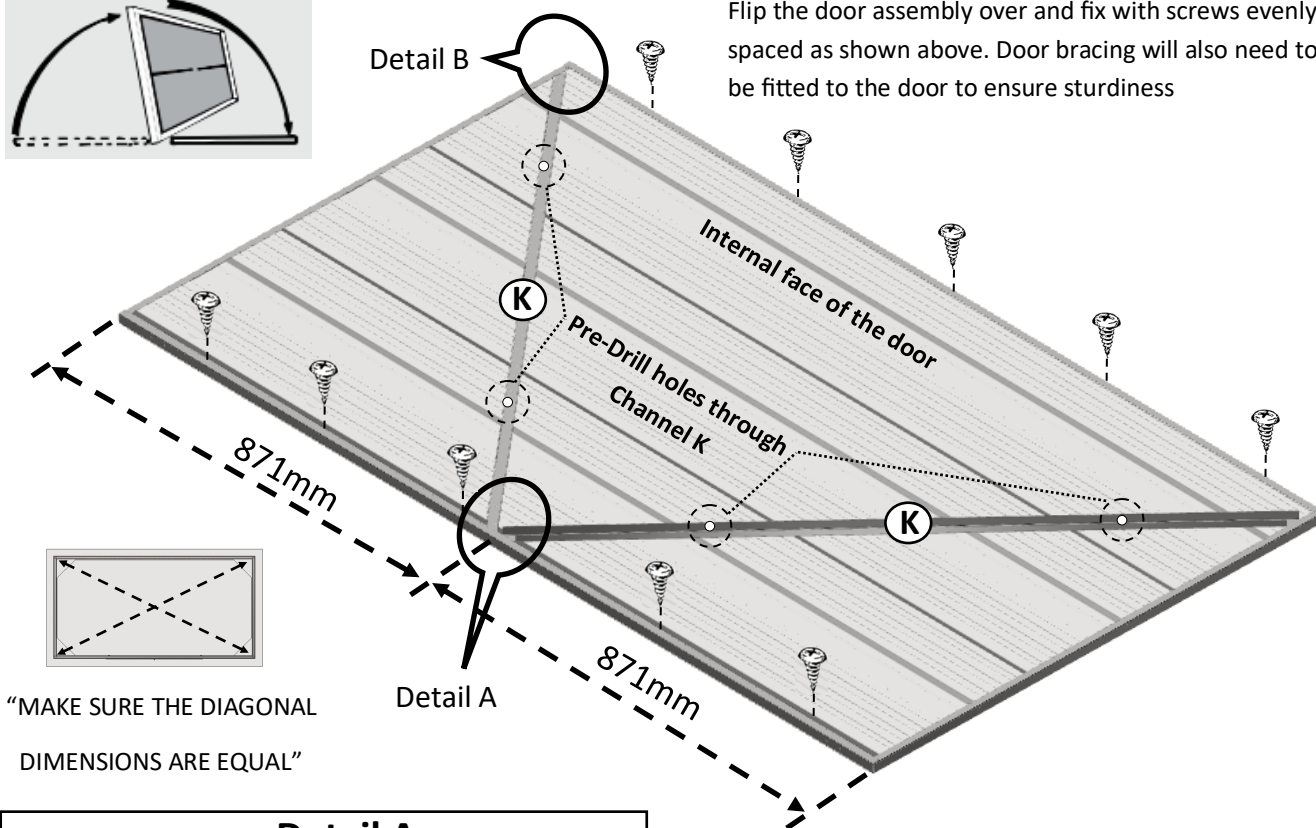

"MAKE SURE THE DIAGONAL DIMENSIONS ARE EQUAL"

Detail A

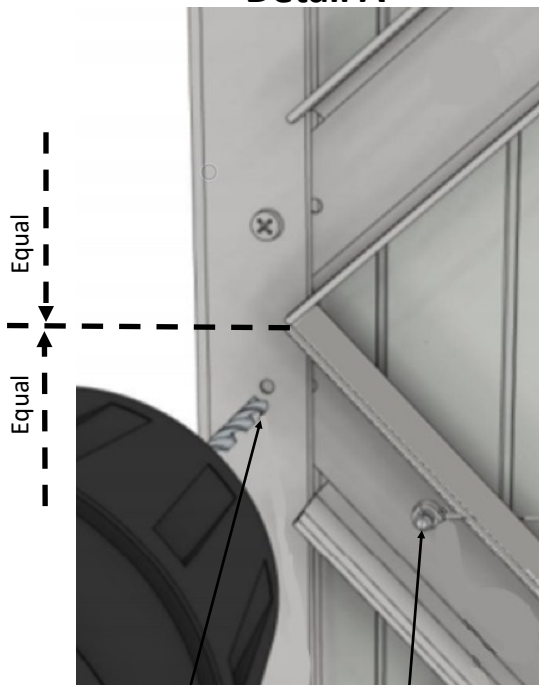


Carefully drill the pilot holes through the inside of the side door frame to catch the door bracing K channel tucked underneath.

Channel K fixed with screw from the front of the door panel.

Detail B

Drill pilot holes for door bracing top joint and fix with self tapping screw. N.B. Channel K brace only narrowly tucks under channels. Take care to drill through channel K with pilot hole.

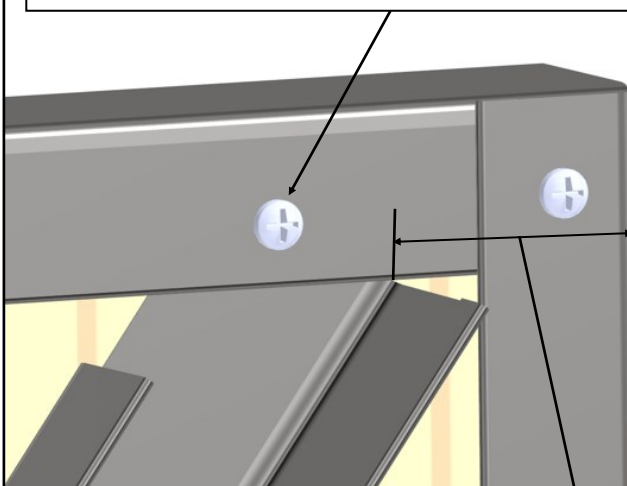



50mm typical at top and bottom door brace as well

S52-S ASSEMBLY MANUAL


FASTTRAK

DOOR ASSEMBLY

** Shown 2 panel door, procedure is similar for 3 panel doors.

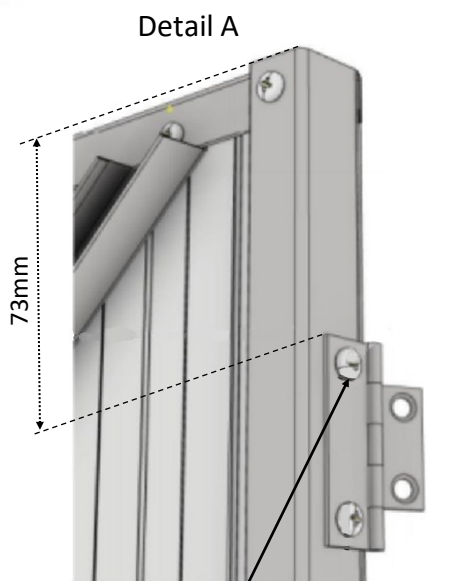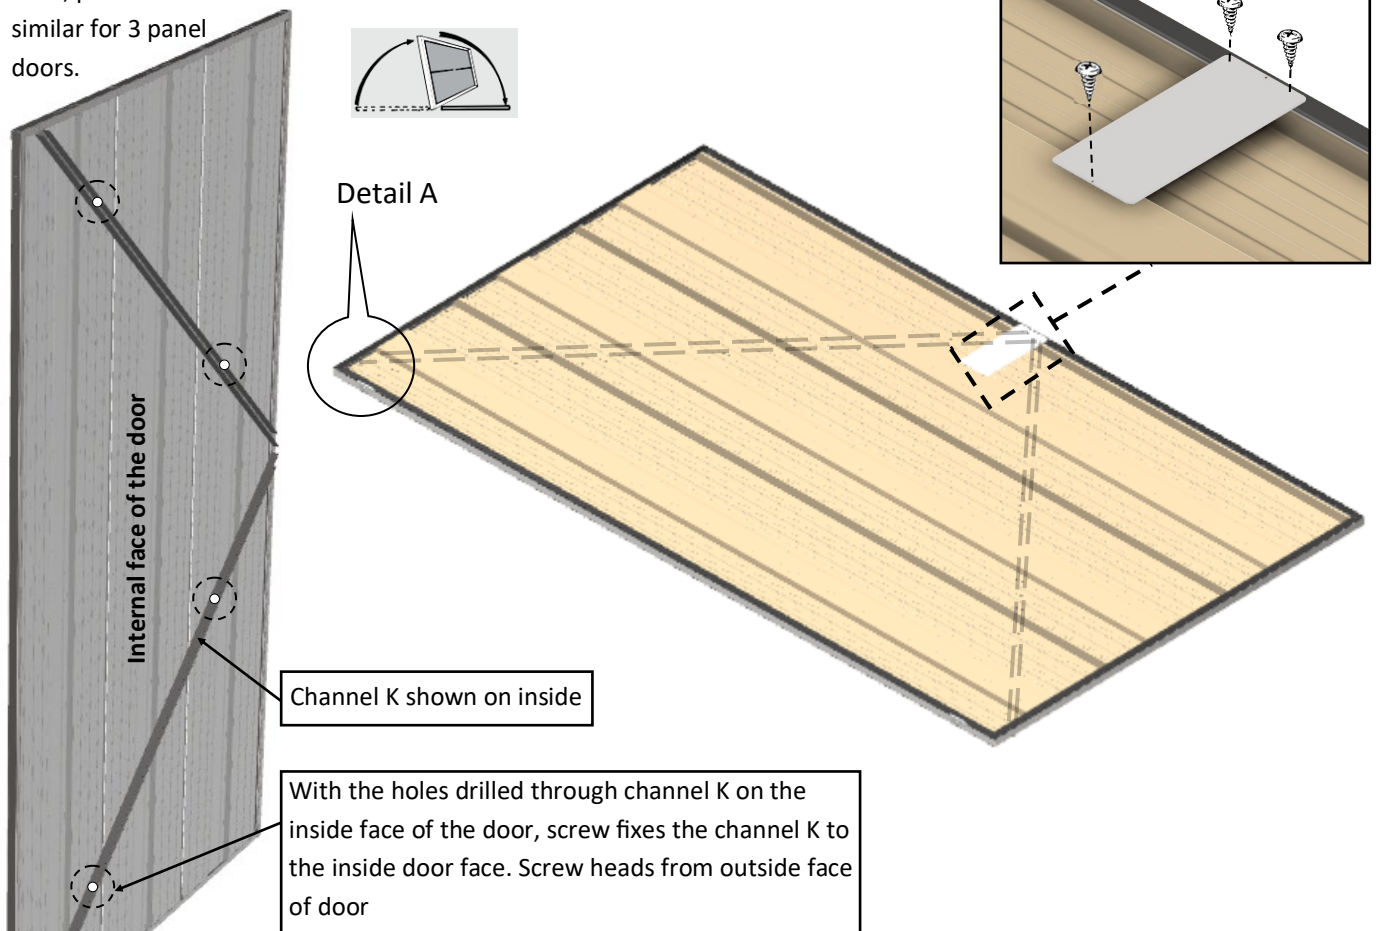


Screw fix the hinge to the side channel I through punched holes. Typical top and bottom

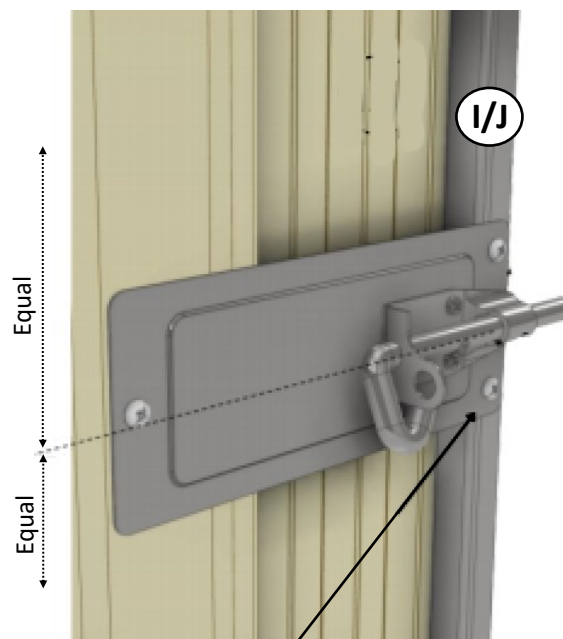



Position the door plate at the center point, using the door plate as a guide to drill pilot holes through channels I / J and door sheeting. Ensure the end of the plate does not protrude past the

Position the pad bolt level and screw fix the pad bolt to the door plate with the screws supplied. Fix the padbolt onto door 1 only.



DOOR FITTING

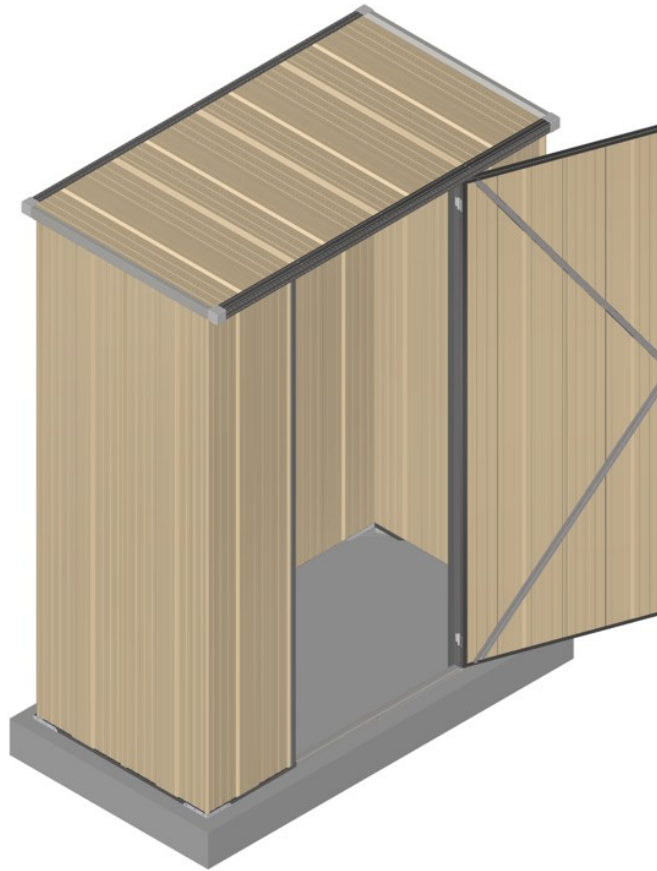


Fit the door to the left or right by fixing the hinges to the pre-drilled holes in the door jambs then fit the padbolt keeper.

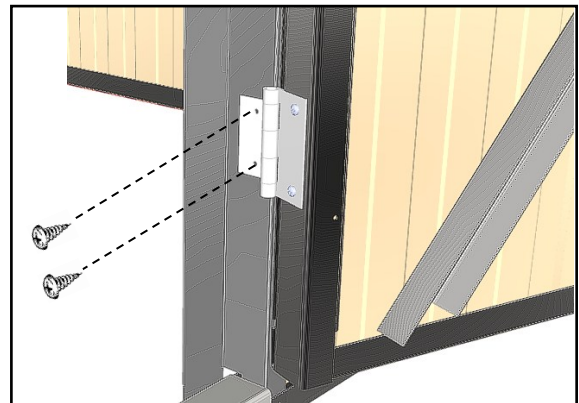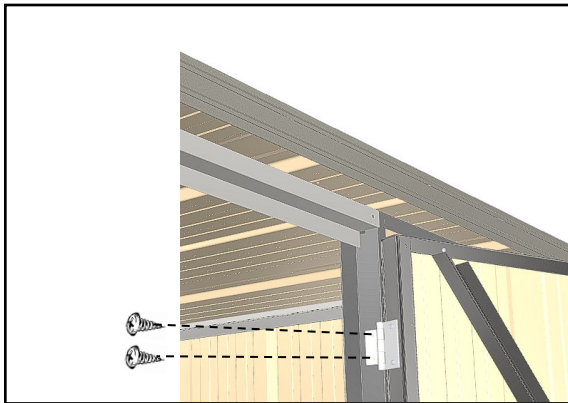

Fit the padbolt and keeper

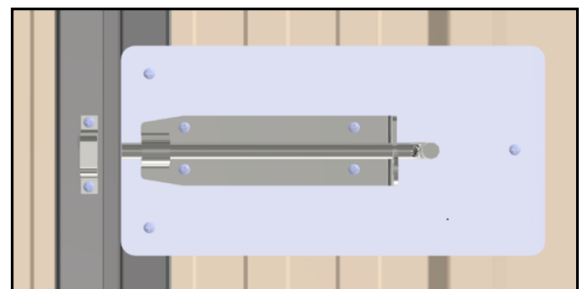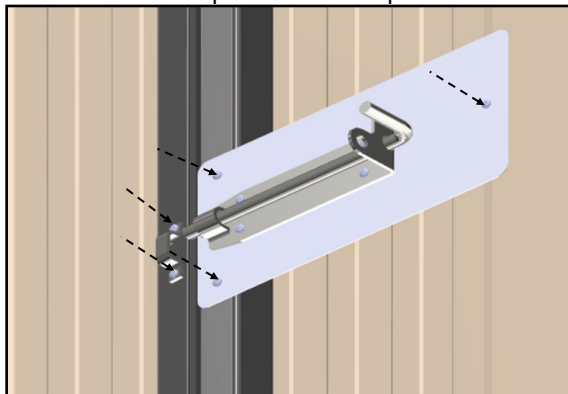


ANCHORING SHED TO SLAB

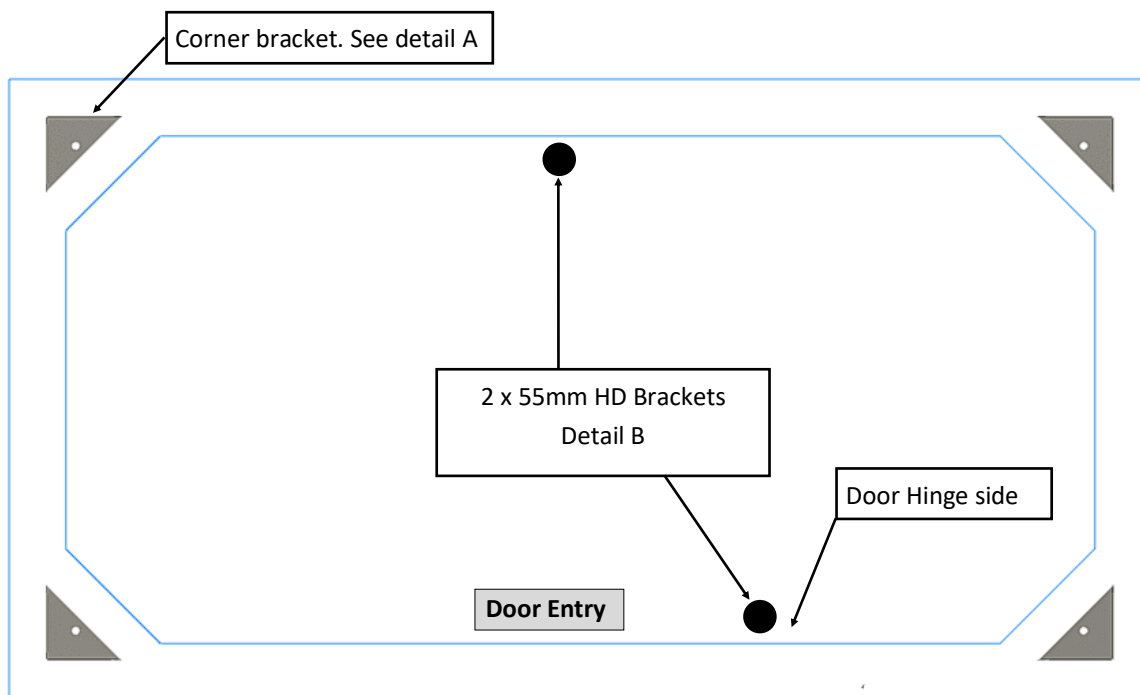

BRACKET FIXING TO SLAB LAYOUT


DETAIL A

Screw fixing corner bracket to wall bottom channels

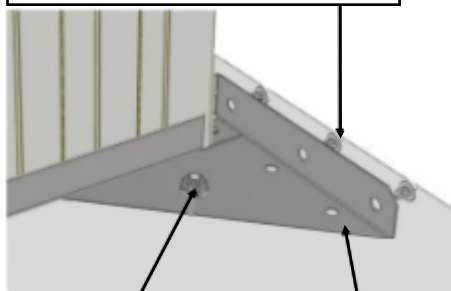

Masonry Anchor


Corner bracket

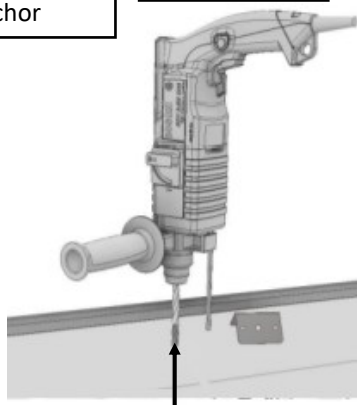

Drill to a depth of 50mm for a M8 Masonry Anchor
Extract all the dust after drilling Drill size = 10mm

DETAIL B


DETAIL FROM INSIDE

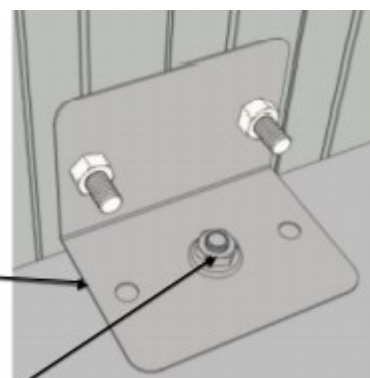

55mm HD Bracket

Masonry Anchor

DETAIL FROM OUTSIDE

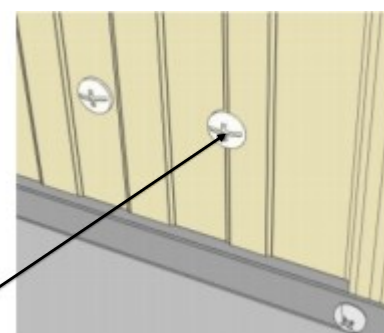

Drill 5mm hole through the panels and 55mm brackets to the panels using nuts and bolts.

Ensure the bolt heads are to the bottom of the wall pan.

CARE AND MAINTENANCE (15 YEARS WARRANTY)

Thank you for purchasing the FASTTRAK® system steel garden shed.

Your personal warranty is backed by Steel Sheds Australia, the manufacturer of FASTTRAK® system garden sheds, and our proven commitment to quality and customer service. Our goods come with guarantees that cannot be excluded under Australian consumer law. You are entitled to a replacement or refund of a major failure and compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Cost of claiming the warranty will be by the claimant. This warranty is in addition to other rights and remedies of the customer under law.

Eligibility

1. The 15-year warranty is eligible only to the original purchaser/owner of the shed as registered within 60 days from the date of purchase and is not transferable.
2. The warranty is valid for Australia.
3. The warranty is subject to location and local environmental conditions outlined in the warranty exclusions below.

What is covered under the warranty?

FASTTRAK® steel garden shed 15-year warranty is limited to the following specific cover.

1. Zinc and/or galvanized panel materials will not rust.
2. Colored panel materials will not rust, flake, peel, or blister.

Please note the 15-year warranty does not apply to any accessory items such as fasteners, hasp, pad bolts, also including flooring kits, shelving, hook sets, tool racks, etc.

Warranty Qualifications & Limitations

The FASTTRAK® 15-year warranty is subject to the following qualifications and limitations

1. Warranty does not apply to surface deterioration of the panels caused specifically by a. "Swarf" (tiny particles of steel debris left from cutting, grinding, or drilling operations) that have not been dutifully removed during the assembly construction process. b. As a result of contact with damp soil, chemicals, fertilizers, or other corrosive substances.
2. Warranty does not cover damage caused by storms, wind, rain, hail, snow, or any other adverse environmental event or "act of god".
3. Warranty only applies if the shed is used solely for domestic purposes and installation is in accordance and compliance with the FASTTRAK® instruction manual and manufacturer recommendations.
4. Warranty does not apply if the shed is installed/located in a. Ocean/surf locations (typically defined as within 1km from coastal or tidal locations), b. Severe industrial locations c. Unusually corrosive environments (e.g. Geothermal / Sulphuric conditions)
5. Warranty does not cover any damage as a result of a. Any impact b. Due to poor foundations c. Modifications d. The build-up of debris on or in roof or walls e. Poor assembly and/or construction.
6. The warranty will be void if the shed has been relocated from its original location/address.
7. The warranty is limited to the replacement and delivery of panels and specifically excludes any labour, installation, or removal/disposal costs.
8. Warranty applies to the exclusions of all other representations, guarantees, or warranties, either expressed or implied unless otherwise required by applicable legislation.
9. Your warranty registration certificate and supporting documentation must be completed and lodged within 60 days of the date of purchase.

Warranty Claims

All warranty claims should be made in writing sent directly to:

Steel Sheds Australia, PO Box 1581, Browns Plains, Queensland, 4118

Claims must include:

1. Original proof of purchase documentation.
2. Relevant contact information.
3. Product model.
4. Photographic evidence.
5. Description of the damage.

STRONG, QUICK & EASY

FASTTRAK

CARE AND MAINTENANCE (15 YEARS WARRANTY)

OWNERS DETAILS

Owners Name:	
Street Address:	
City:	
Post Code:	
Email Address:	

BUILDING DETAILS

Product Model Number:	
Colour:	
Place of Purchase:	
Purchase Date:	

Please attach here photocopy of proof of purchase. Retain the original for your records.

You must submit your warranty registration certificate within 60 days of the purchase date of your FASTTRAK® garden shed. Email / Post your certificate and supporting documentation to:

<https://spanbiltdirect.com.au/warranty-registration>

OR

Steel Sheds Australia

PO Box 1581.

STRONG, QUICK & EASY

FASTTRAK

NOTE

STRONG, QUICK & EASY

FASTTRAK

NOTE

FASTTRAK

STRONG, QUICK & EASY

Enquiries

07 3827 8000

Building Advice Line 1800 032 077

Email: info@steelshedsaustralia.com.au

