



**Simple, Strong,
Quick & Easy.**

ASSEMBLY INSTRUCTION

WORKSHOP 1510

REVISION 06/26

SCAN THIS FOR
HOW TO BUILD VIDEO.



Outside base frame dimensions: W4535mm x D2800mm x H1800mm/2085mm

BEFORE COMMENCING SHED ASSEMBLY, CHECK ALL PARTS. IF THERE IS A DISCREPANCY, PLEASE CALL SPANBILT (SEE REAR OF INSTRUCTION BOOK)

DO NOT ASSEMBLE IN WINDY CONDITIONS	READ INSTRUCTIONS FIRST	2 PERSONS ASSEMBLY
		

THE MANUFACTURERS CANNOT BE HELD RESPONSIBLE FOR ANY CONSEQUENCES DUE TO SHEDS THAT ARE NOT INSTALLED PER INSTRUCTIONS OR FOR DAMAGE DUE TO WEATHER CONDITIONS, ACTS OF GOD OR FOR SHEDS THAT ARE LEFT PARTIALLY ASSEMBLED OVERNIGHT. PARTS MAY CONTAIN SHARP EDGES & CORNERS. CARE MUST BE TAKEN WHEN HANDLING VARIOUS PIECES TO AVOID A MISHAP, FOR SAFETY SAKE, PLEASE USE A PAIR OF WORK GLOVES, EYE PROTECTION & PROTECTIVE CLOTHING WHEN ASSEMBLING OR PERFORMING ANY MAINTENANCE ON THE BUILDING.

TABLE OF CONTENT

TOOLS REQUIRED.....	3
HANDY HINTS FOR CONSTRUCTION.....	3
BRACKETS.....	4
HARDWARES.....	4
PORTAL FRAME - PARTS LIST	5
SHEET IDENTIFICATION	6
SECTIONS	7
FOUNDATION	9
PORTAL FRAME ASSEMBLY.....	10
TYPICAL SHEET FIXING DETAILS	17
REAR WALL PANEL.....	18
FRONT WALL PANEL.....	20
SIDE WALL SHEET LAYING PROCEDURE (GABLE WALL PANEL).....	23
ASSEMBLE AND FIT RIDGE BEAM.....	25
TYPICAL CORNER OVER LAPPING.....	26
WALL PANEL FIXING.....	27
FIX RIDGE BEAM.....	31
FIT ROOF SHEETS	32
FIT ROOF RIDGE CAP AND SHEETS	33
FIT ROOF TRIMS	34
DOOR ASSEMBLY—2 X 2 PANEL	35
DOOR ASSEMBLY—3 PANEL	41
FIT SKYLIGHT (OPTIONAL).....	46
ANCHORING SHED TO SLAB	47
CARE AND MAINTENANCE	30

G1510 ASSEMBLY MANUAL

FASTTRAK

TOOLS REQUIRED



Electric Drill



Cordless Drill



Measuring Tape



Screwdrivers



8mm Masonry Drill Bit



Shifting Spanner



Builders Pencil



Tin Snips
(some models only)



Rubber Mallet



Sturdy Ladder
(two if possible)



Gloves



Protective Eyewear

HANDY HINTS FOR CONSTRUCTION



Read instructions and check parts carefully before assembling the shed.



Please wear safety gloves and glasses at all times to protect against sharp metal edges.



Do not assemble in windy conditions as panels may be difficult to handle and damage may result.



Do not back fill against the shed as this will result in corrosion. Allow drainage from the site.




MOST PILOT HOLES ARE PRE-PUNCHED AND IN THIS CASE DRILLING HOLES IS NOT NECESSARY, HOWEVER SOME PILOT HOLES NEED TO BE DRILLED WITH THE INCLUDED 2.5MM DRILL BIT WHERE INDICATED

G1510 ASSEMBLY MANUAL

FASTTRAK


BRACKETS

CORNER BRACKET x 8	
HINGES x 6	
PADBOLT & KEEPER x 4	
DOOR PLATE x 2	
PLASTIC RIDGE END CAP x 2	

CORNER CAP x 4	
55mm BRACKET x 16	
RIDGE BEAM BRACKET x 2	

HARDWARES


M8x40 MASONRY ANCHORS x 12	
SELF TAPPING SCREWS x 600	
2.5mm DRILL BIT x 1	
NUT & BOLT 3/16" x 16	

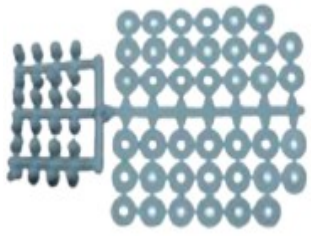
PLASTIC WASHER & SCREW CAP SHEET x 3	
PHILIPS HEAD DRIVE BIT x 1	
CLIP NUT x 5	


G1510 ASSEMBLY MANUAL

FASTTRAK

PORTAL FRAME - PARTS LIST

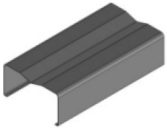
CHANNEL IDENTIFICATION	A	
DESCRIPTION	PORTAL LEG	
OVERALL LENGTH	1725mm	
QTY	4	

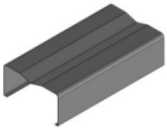CHANNEL IDENTIFICATION	B	
DESCRIPTION	ROOF BEAM	
OVERALL LENGTH	1355mm	
QTY	4	

DESCRIPTION	70x100 PLATE	
QTY	4	

DESCRIPTION	Self Drilling Tek Screw	
QTY	126	

CHANNEL IDENTIFICATION	X	
DESCRIPTION	Bracing Channel	
Legnth (Spliced)	2710mm = (1461 + 1460)	
QTY	(2 x 1461) + (2 x 1460)	

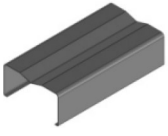CHANNEL IDENTIFICATION	C	
DESCRIPTION	TOP GUSSET	
OVERALL LENGTH	1820mm	
QTY	2	

CHANNEL IDENTIFICATION	D	
DESCRIPTION	CORNER GUSSET	
OVERALL LENGTH	810mm	
QTY	4	

DESCRIPTION	GABLE GUSSET STRAP	
QTY	2	


DESCRIPTION	Nut Runner	
QTY	1	

G1510 ASSEMBLY MANUAL


FASTTRAK

SHEET IDENTIFICATION


SHEET IDENTIFICATION	C
DESCRIPTION	WALL CORNER PANEL
LENGTH 'X'	1800mm
QTY	16

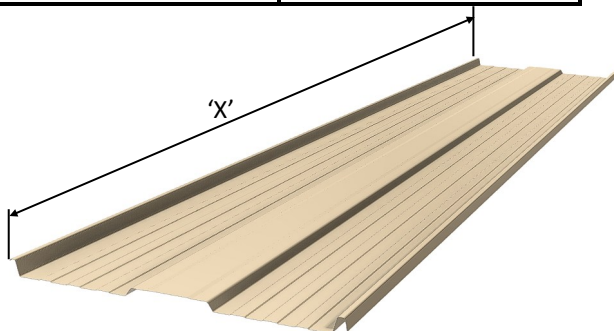


SHEET IDENTIFICATION	D
DESCRIPTION	WALL CORNER PANEL
LENGTH 'X'	1800mm
QTY	3

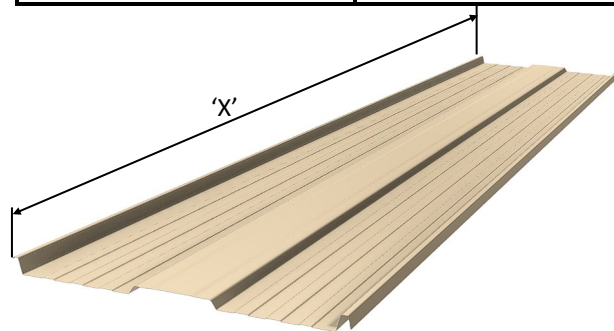


SHEET IDENTIFICATION	E
DESCRIPTION	ROOF SHEET
LENGTH 'X'	1454mm
QTY	26

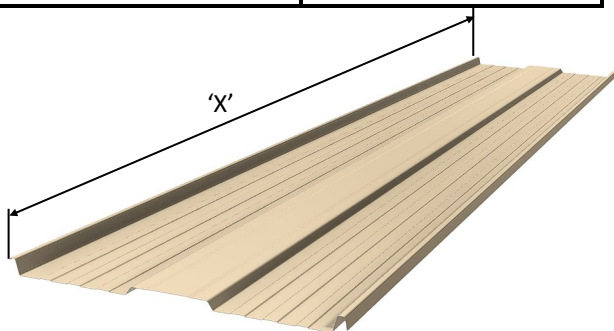


SHEET IDENTIFICATION	F
DESCRIPTION	DOOR PANEL SIDE
LENGTH 'X'	1738mm
QTY	6

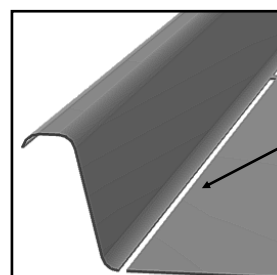

SPLIT CUT ALONG
SHEET LENGTH
— SMALL RIB SIDE

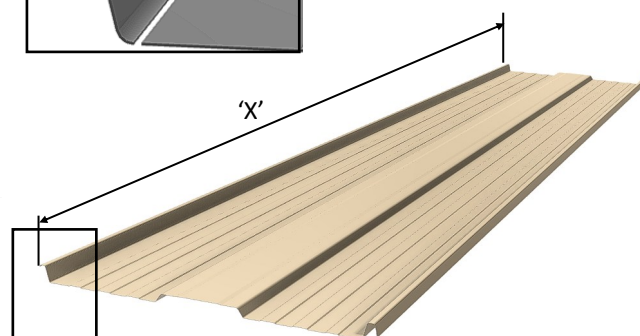


SHEET IDENTIFICATION	G
DESCRIPTION	DOOR PANEL CENTRE
LENGTH 'X'	1738mm
QTY	1

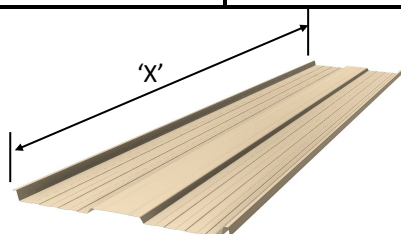

SHEET IDENTIFICATION	A1, A2, A3,A4,A5,A6,A7,A8
DESCRIPTION	Right Skillion Wall Panel
QTY	Total 8



SHEET IDENTIFICATION	B1, B2, B3,B4,B5,B6,B7,B8
DESCRIPTION	Left Skillion Wall Panel
QTY	Total 8


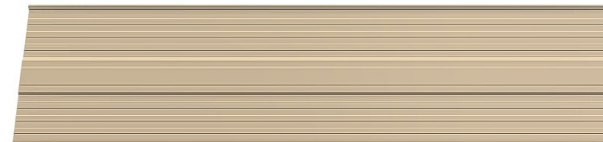


G1510 ASSEMBLY MANUAL

FASTTRAK

SECTIONS


CHANNEL IDENTIFICATION	h	
DESCRIPTION	Door Frame Top/Bottom	
OVERALL LENGTH	674mm	
QTY	4	
CHANNEL IDENTIFICATION	H	
DESCRIPTION	Door Frame Top/Bottom	
OVERALL LENGTH	1008mm	
QTY	2	
CHANNEL IDENTIFICATION	I	
DESCRIPTION	Door Frame Side	
OVERALL LENGTH	1742mm	
QTY	6	
CHANNEL IDENTIFICATION	J	
DESCRIPTION	Door Boxing	
OVERALL LENGTH	1706mm	
QTY	6	
CHANNEL IDENTIFICATION	k	
DESCRIPTION	Door Bracing	
OVERALL LENGTH	1040mm	
QTY	4	
CHANNEL IDENTIFICATION	K	
DESCRIPTION	Door Bracing	
OVERALL LENGTH	1280mm	
QTY	2	
CHANNEL IDENTIFICATION	L	
DESCRIPTION	Door Seal	
OVERALL LENGTH	1706mm	
QTY	1	
CHANNEL IDENTIFICATION	m	
DESCRIPTION	Top/Bottom Front/Rear	
OVERALL LENGTH	2099mm	
QTY	4	

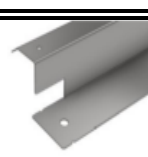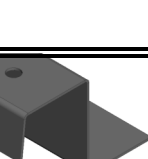
CHANNEL IDENTIFICATION	M	
DESCRIPTION	Top/Bottom Front/Rear	
OVERALL LENGTH	2445mm (1460 + 1115)	
QTY	(4 x 1460) + (4 x 1115)	
CHANNEL IDENTIFICATION	N	
DESCRIPTION	Side Channel Gable Bottom	
OVERALL LENGTH	2791mm (1461 + 1460)	
QTY	(2 x 1461) + (2 x 1460)	
CHANNEL IDENTIFICATION	O	
DESCRIPTION	Side Channel Gable Top	
OVERALL LENGTH	1411mm	
QTY	2	
CHANNEL IDENTIFICATION	P	
DESCRIPTION	Side Channel Gable Top	
OVERALL LENGTH	1415mm	
QTY	2	
CHANNEL IDENTIFICATION	Q	
DESCRIPTION	DOOR JAMB CHANNEL	
OVERALL LENGTH	1800mm	
QTY	4	
CHANNEL IDENTIFICATION	r	
DESCRIPTION	BOTTOM DOOR SPACER CHANNEL	
OVERALL LENGTH	1021mm	
QTY	1	
CHANNEL IDENTIFICATION	R	
DESCRIPTION	BOTTOM DOOR SPACER CHANNEL	
OVERALL LENGTH	1367mm	
QTY	1	
CHANNEL IDENTIFICATION	S	
DESCRIPTION	TOP DOOR SPACER CHANNEL	
OVERALL LENGTH	1367mm	
QTY	1	

G1510 ASSEMBLY MANUAL


FASTTRAK


SECTIONS

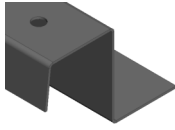
CHANNEL IDENTIFICATION	S1	
DESCRIPTION	TOP DOOR SPACER CHANNEL	
OVERALL LENGTH	1021mm	
QTY	1	

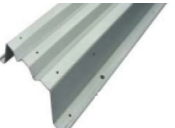
CHANNEL IDENTIFICATION	T	
DESCRIPTION	Ridge Beam	
OVERALL LENGTH	1364mm	
QTY	8	

CHANNEL IDENTIFICATION	U	
DESCRIPTION	Ridge Cap	
OVERALL LENGTH	708mm	
QTY	7	

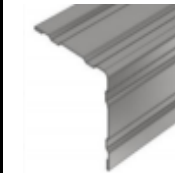
CHANNEL IDENTIFICATION	V	
DESCRIPTION	Gutter Trim	
OVERALL LENGTH	1750mm	
QTY	4	

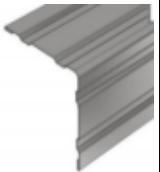CHANNEL IDENTIFICATION	V1	
DESCRIPTION	Gutter Trim	
OVERALL LENGTH	1058mm	
QTY	2	

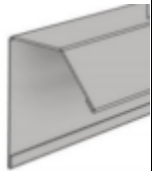CHANNEL IDENTIFICATION	W	
DESCRIPTION	ROOF ANGLE TRIM	
OVERALL LENGTH	1446mm	
QTY	2	

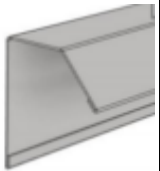CHANNEL IDENTIFICATION	W	
DESCRIPTION	ROOF ANGLE TRIM	
OVERALL LENGTH	1443mm	
QTY	2	

FOUNDATION—RECOMMENDED SLAB REBATE DETAILS

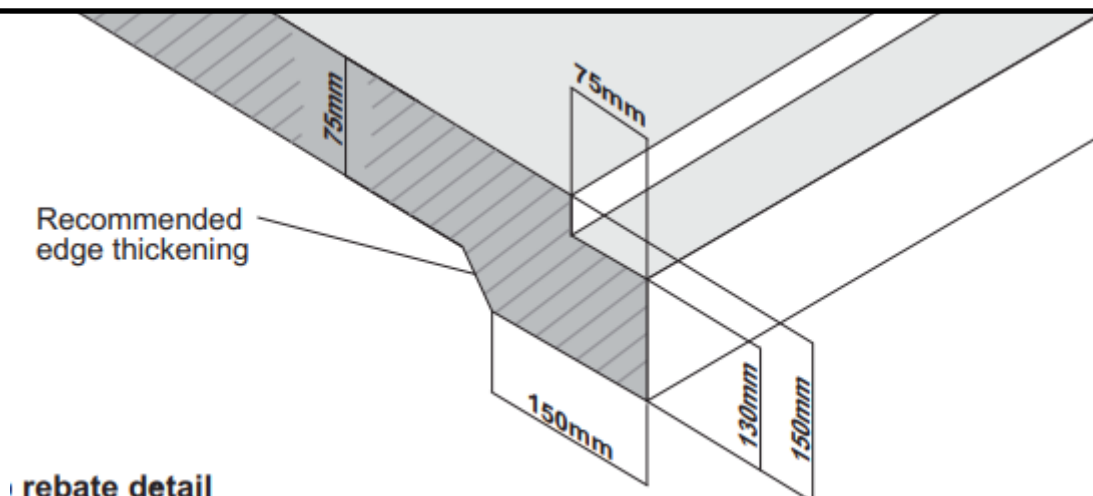


rebate detail

Recommended slab rebate detail

Although not required, it is strongly recommended that, to avoid water leakage around the base of your shed, a rebate be cast into the slab. This will allow the shed to sit below the slab level and prevent water from reaching the upper level of the slab.

If you planning a rebated slab make sure to cut the 4 corners at 60 x 45 degree as shown in detail below

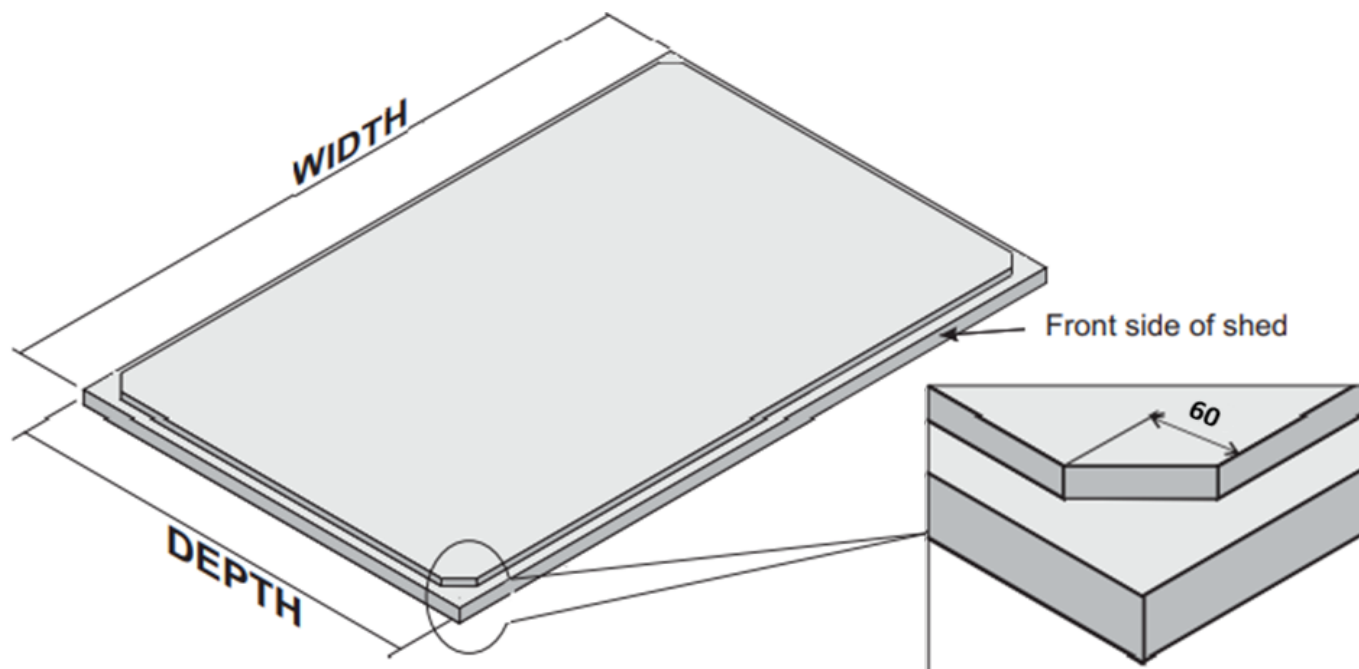

Slab Details Your garden shed must be erected on a solid, level and square foundation. We strongly recommend you pour a concrete slab 75mm thick, reinforced with SL62 mesh (minimum) using dimensions from the table below.


SHED CODE	OUTER SLAB DESIGN (WIDTH x DEPTH)	ANCHORS M8 x 40mm
G1510	4635mm x 2900mm	12

G1510 ASSEMBLY MANUAL



FASTTRAK

PORTAL FRAME ASSEMBLY

Mark out with pencil or chalk on the flat ground as shown

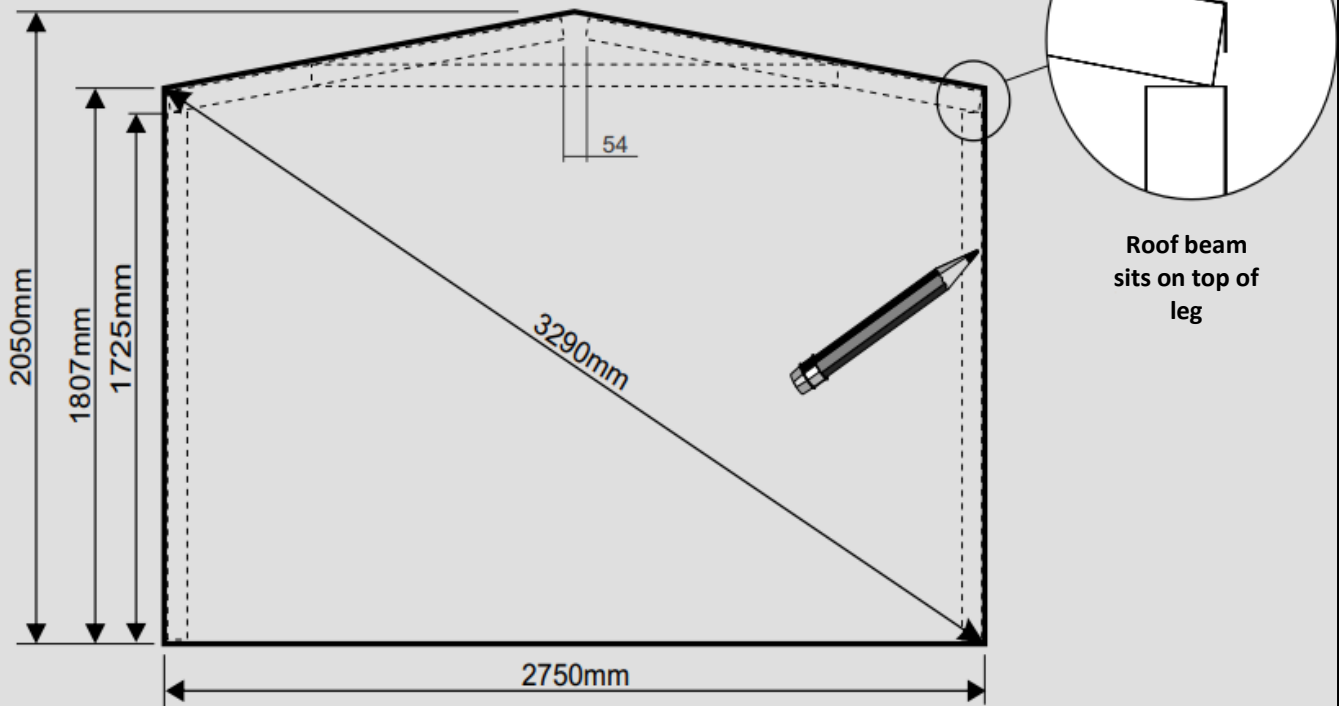


All four Portal Legs are required to be boxed as shown to make 2 legs

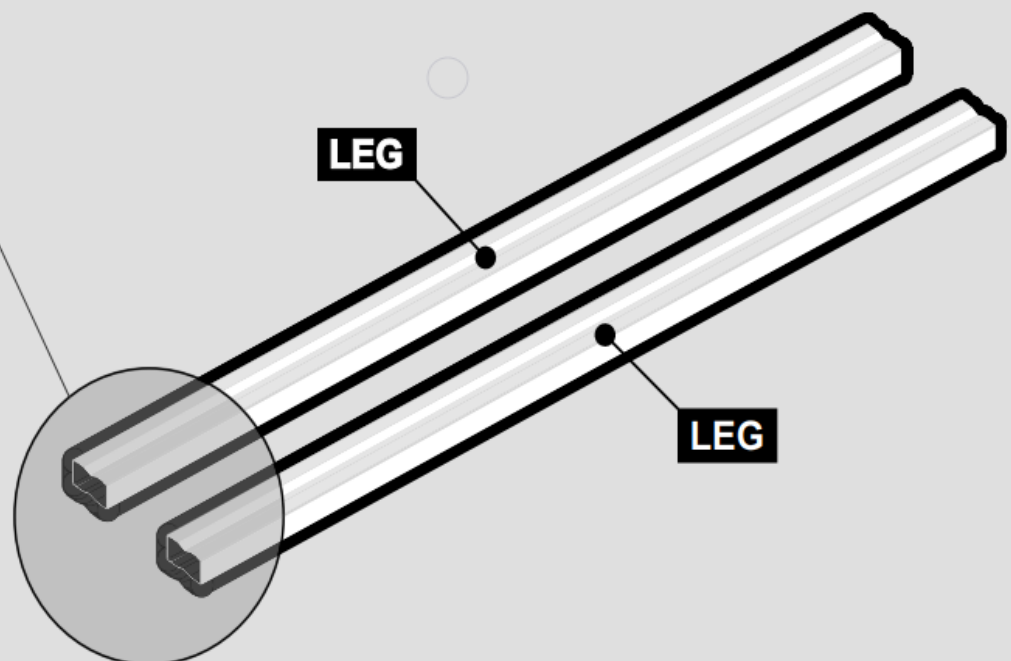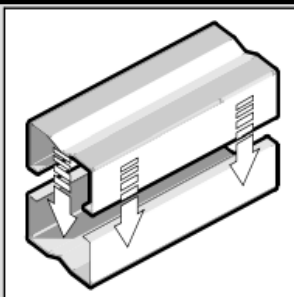


Make sure to cut 20mm (L= 1708) off, if you have a rebated slab.

PORTAL FRAME ASSEMBLY


Screw the boxed legs together using the Tek Screws (portal)
Use bracing channel "X" to temporarily hold it in place.
Join the bracing channels to the length of 2710mm.

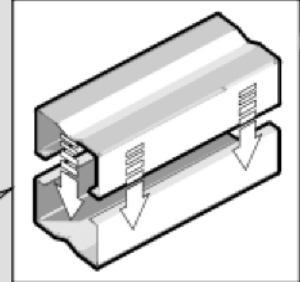

All four Roof Beams are required to be boxed as shown

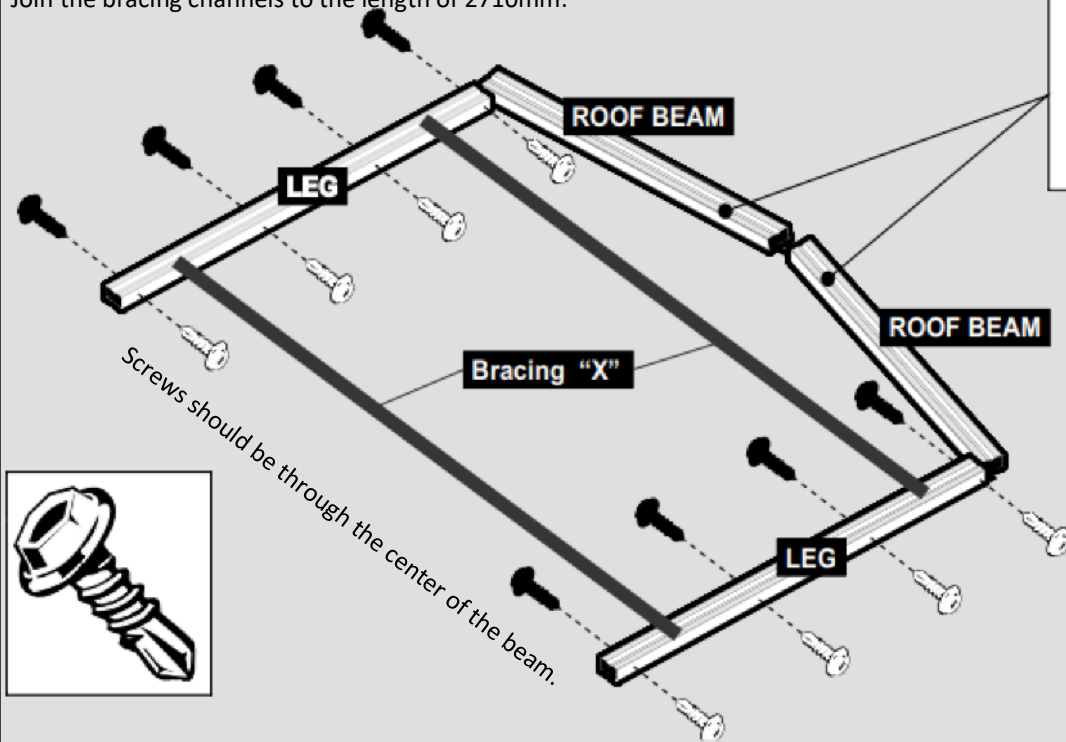

Screw the boxed roof beams together using the Tek Screws (portal)

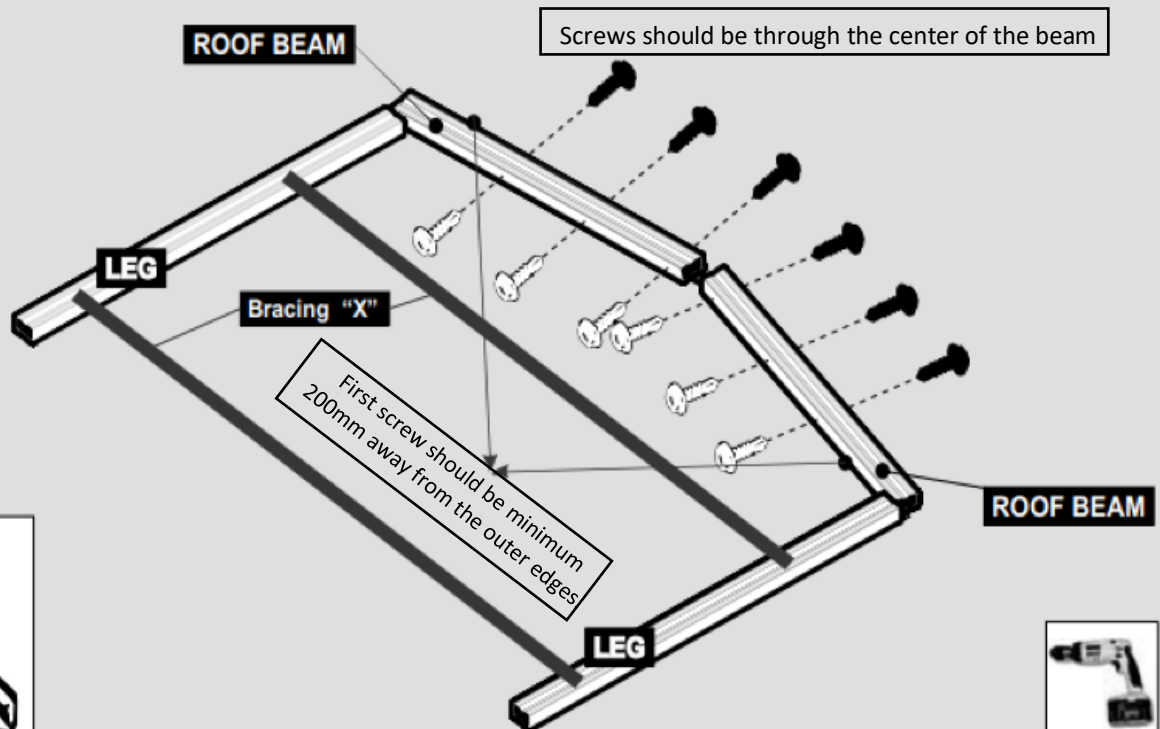


G1510 ASSEMBLY MANUAL





FASTTRAK

PORTAL FRAME ASSEMBLY

Assemble, lay beams out as shown and fix first side of portal

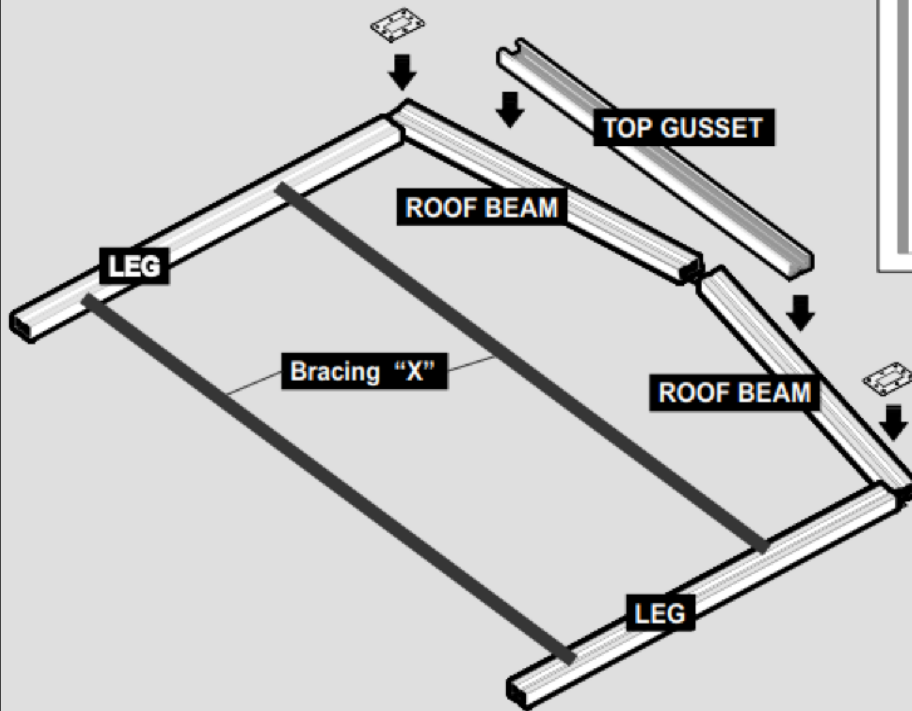



Attach the Roof Beams to the Legs using the 100x70 Plate

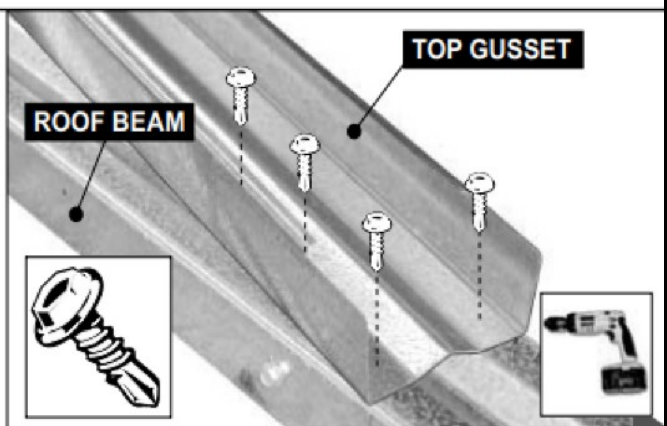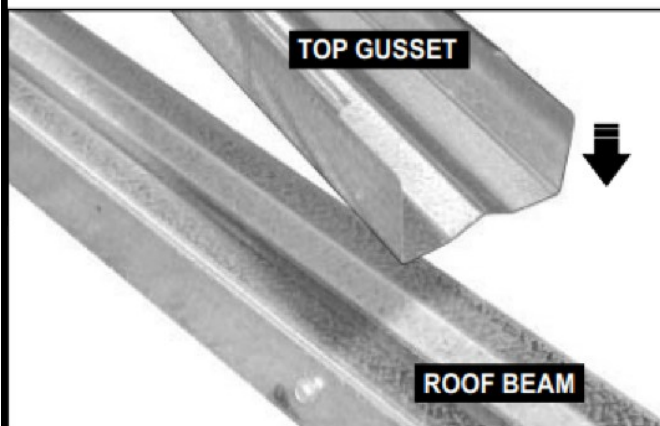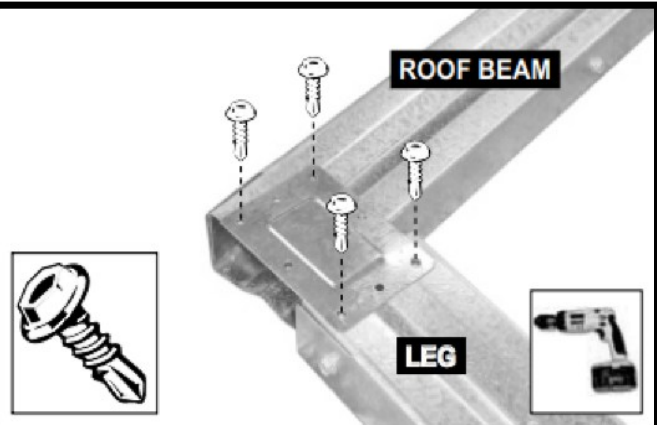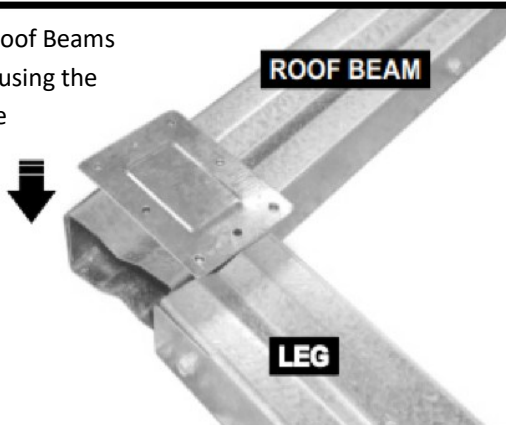

G1510 ASSEMBLY MANUAL

FASTTRAK


PORTAL FRAME ASSEMBLY

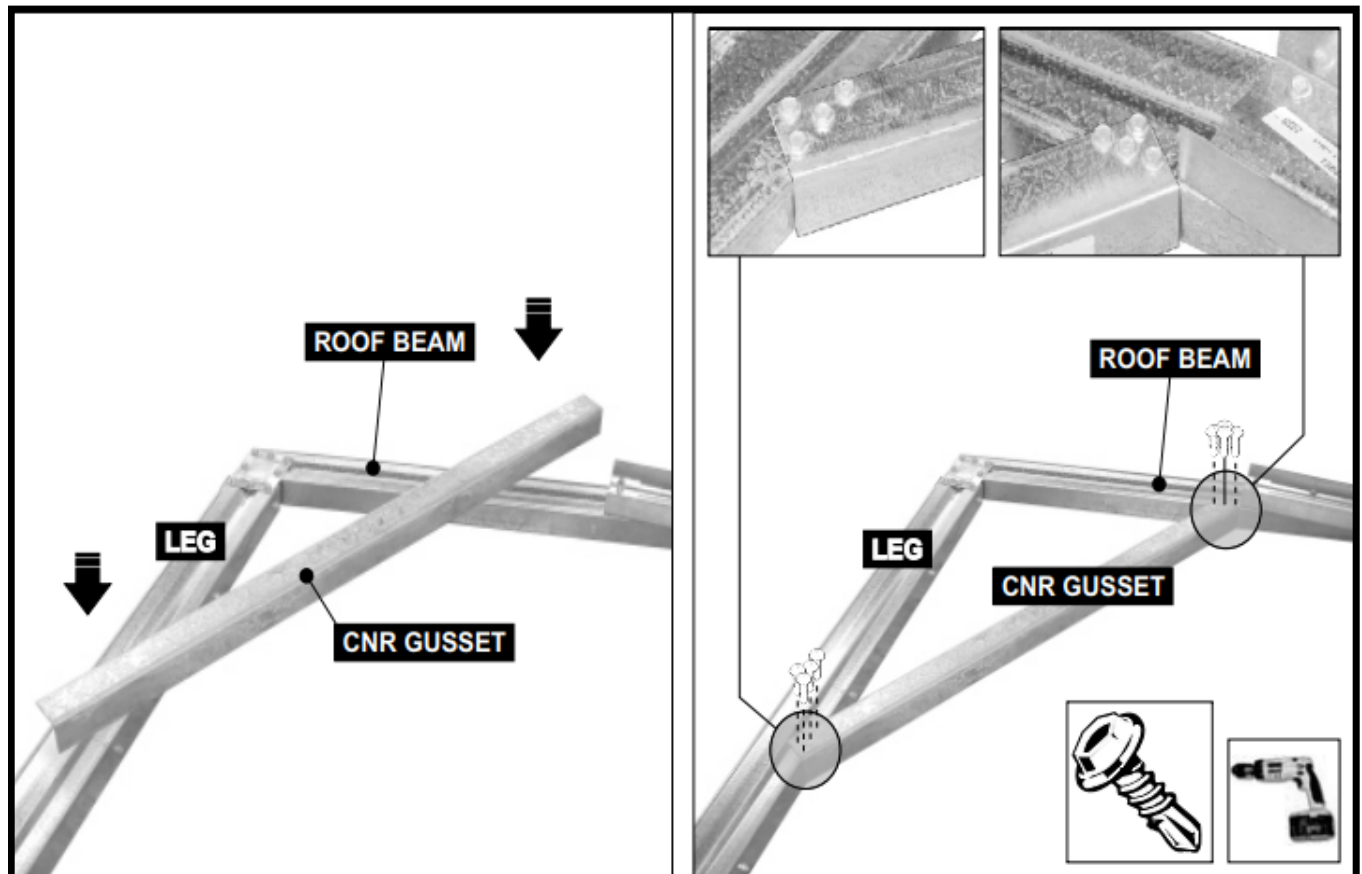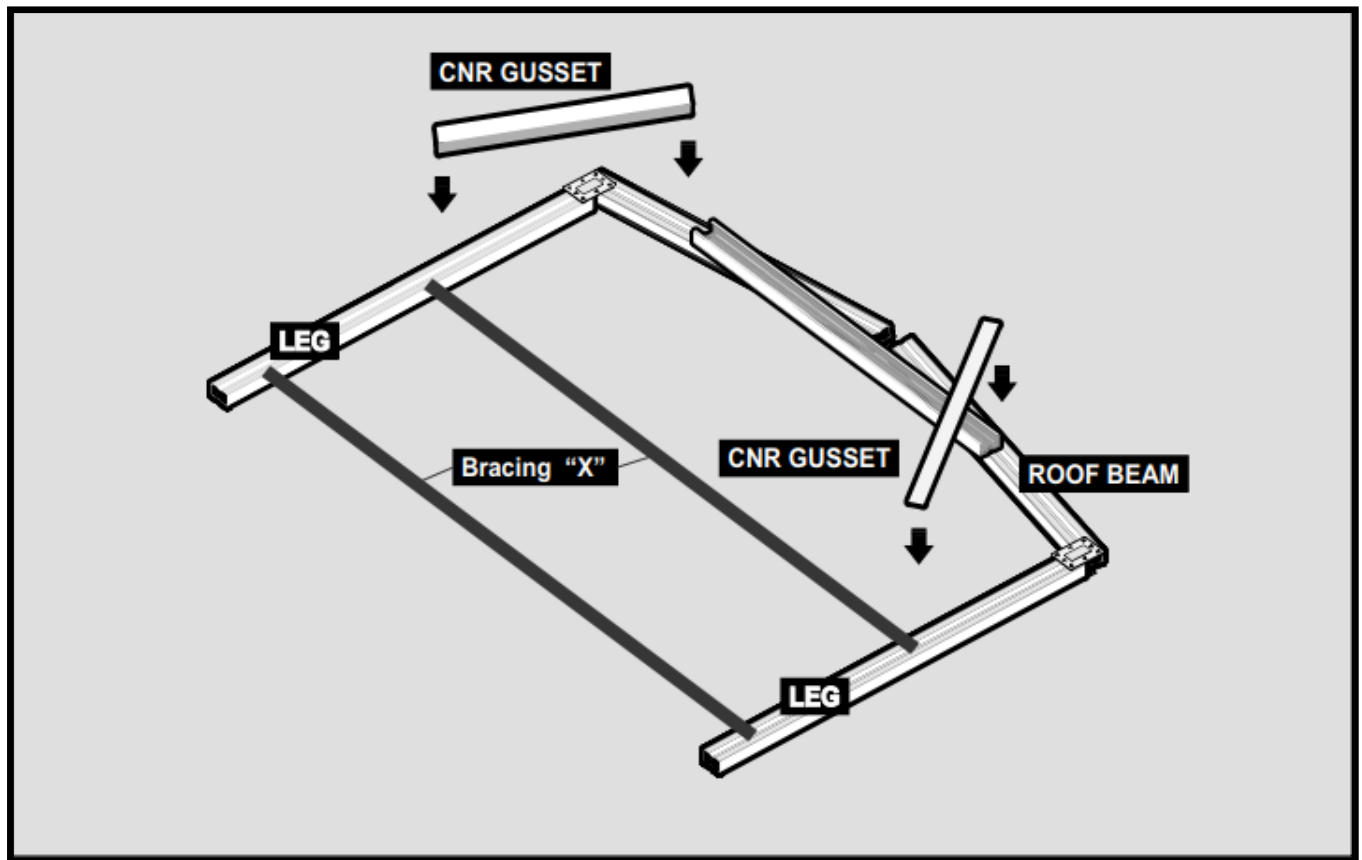


G1510 ASSEMBLY MANUAL

FASTTRAK

PORTAL FRAME ASSEMBLY

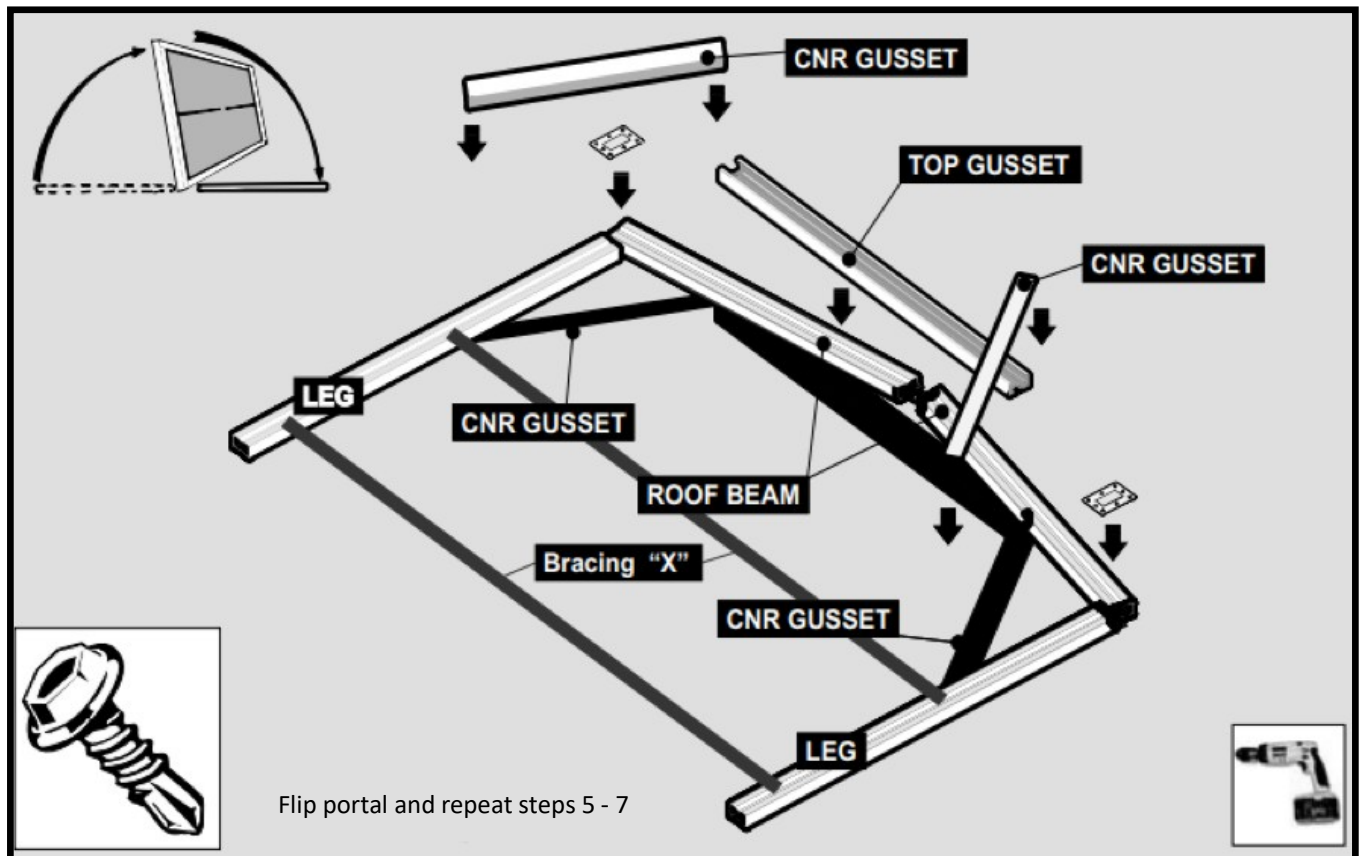


Join both sides of the Corner Gussets using the Portal Tek Screws, then remove the top bracing "X".

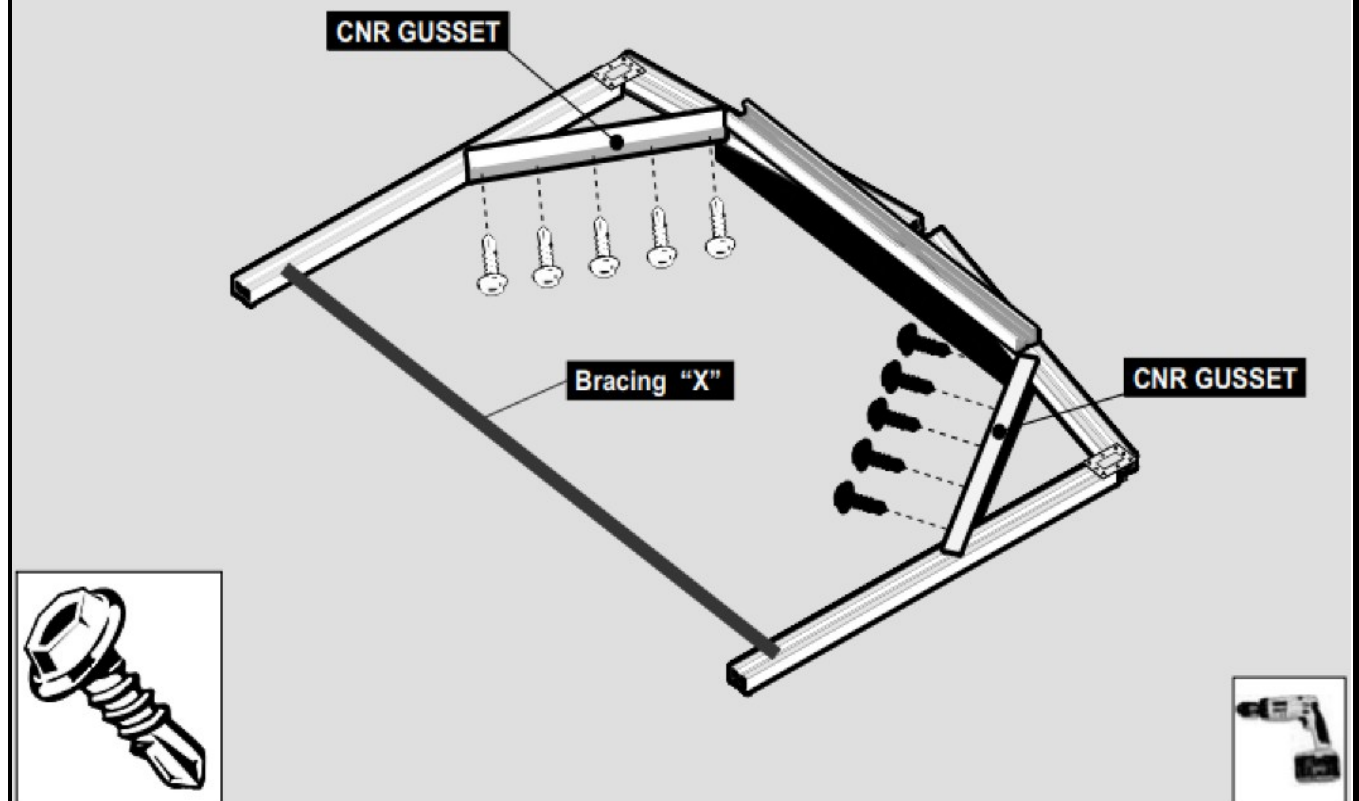


PORTAL FRAME ASSEMBLY


Stand up the portal frame and position as per the dimension given here.
Make sure the distance 2490 from the 2x2 Panel Door side edge of the slab.
Portal frame sit 75mm inside the width of the slab over the edge the edge.
It is possible to inter change the position of this door (left or right).

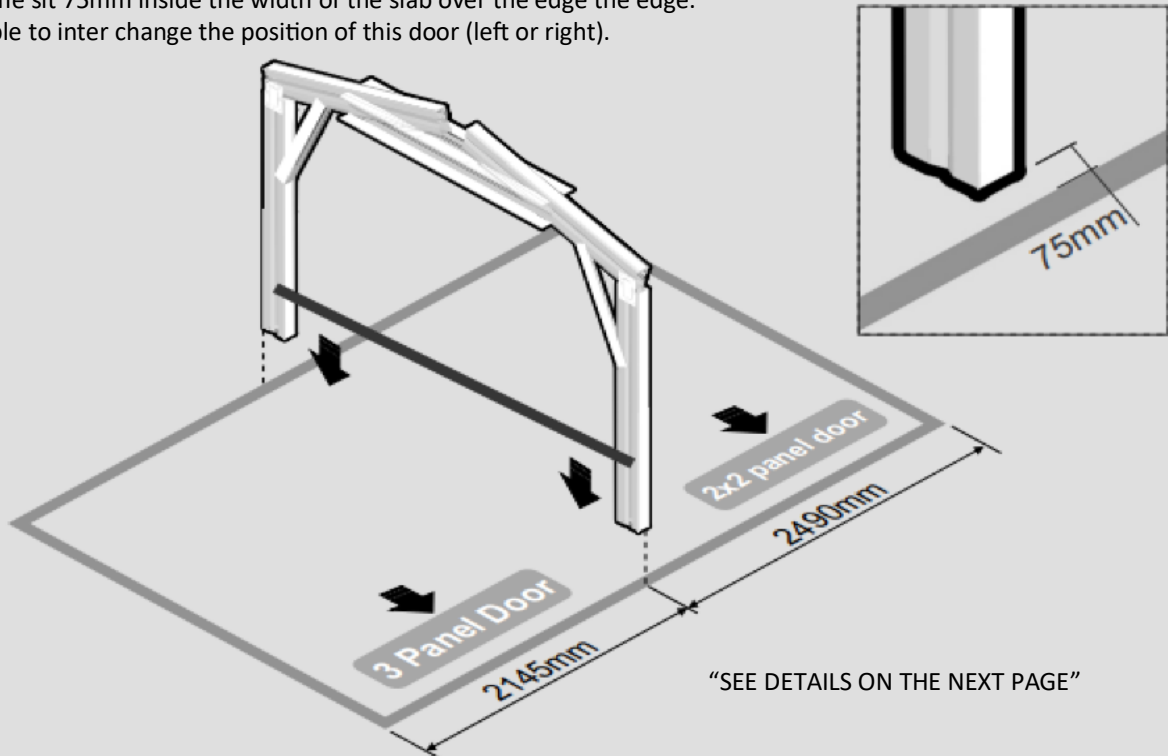





Make sure the portals stood up properly on the slab. Out of square portal fixing may create hassle later while panel fixing.

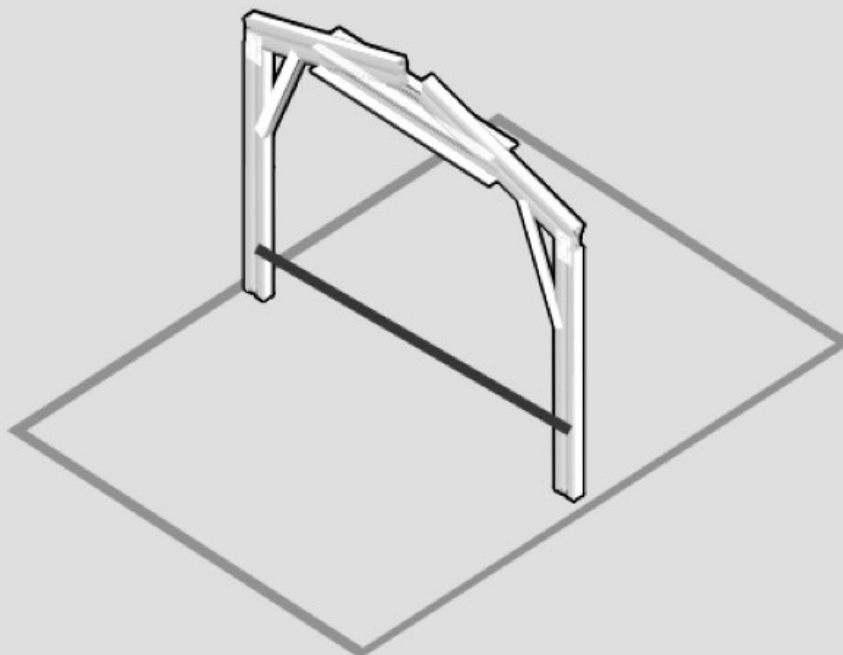


PORTAL FRAME ASSEMBLY

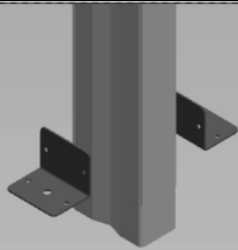


Place the 55mm Bracket as shown then fix it to the portal leg. Make sure it is square and flat to the slab.

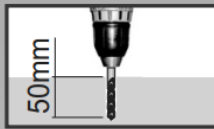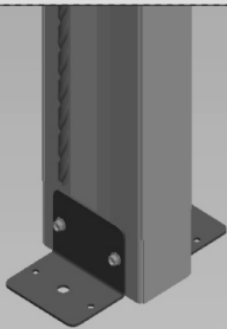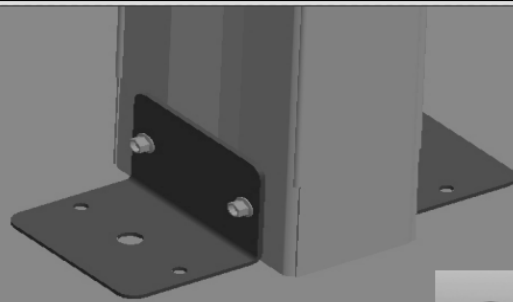

Now Pre drill the Dia 8mm hole to a depth of 50mm.

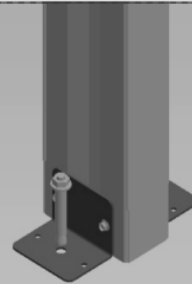

Insert and tighten the masonry anchor on all 4 brackets.




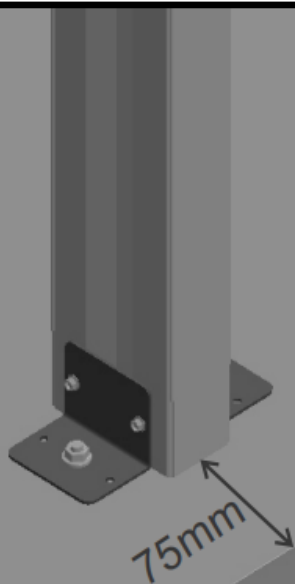


Now can remove the bracing channel "X".

G1510 ASSEMBLY MANUAL


FASTTRAK

TYPICAL SHEET FIXING DETAILS

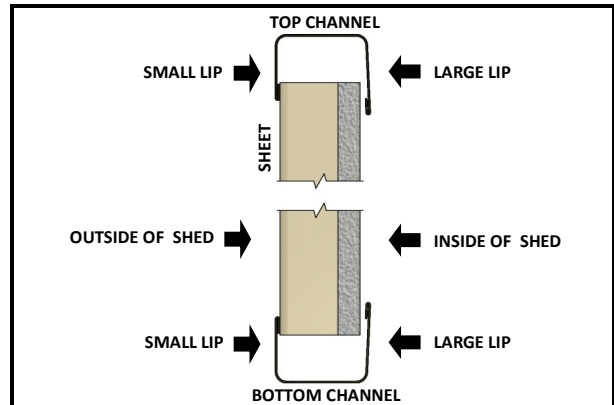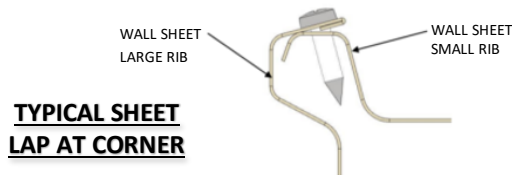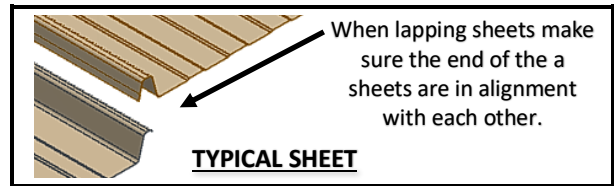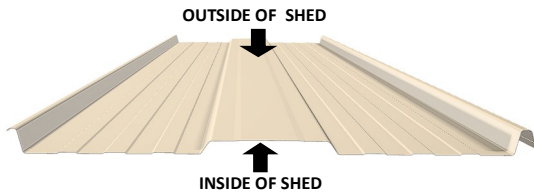

On a clean and uninterrupted work area, we recommend lay suitable wood lengths or work trestles to support the panels off the ground. **DO NOT PUT ANY WEIGHT ON THE SHEETS BETWEEN THE WOOD LENGTHS AS THIS WILL DAMAGE THE SHEETING.**








Locate the required panels and assemble them as shown above. Lay the next sheet on top of the first one making sure the **LARGE RIB** covers the **SMALL RIB**. Lightly tap the bottom of the sheet to make the bottom edge in alignment if required.

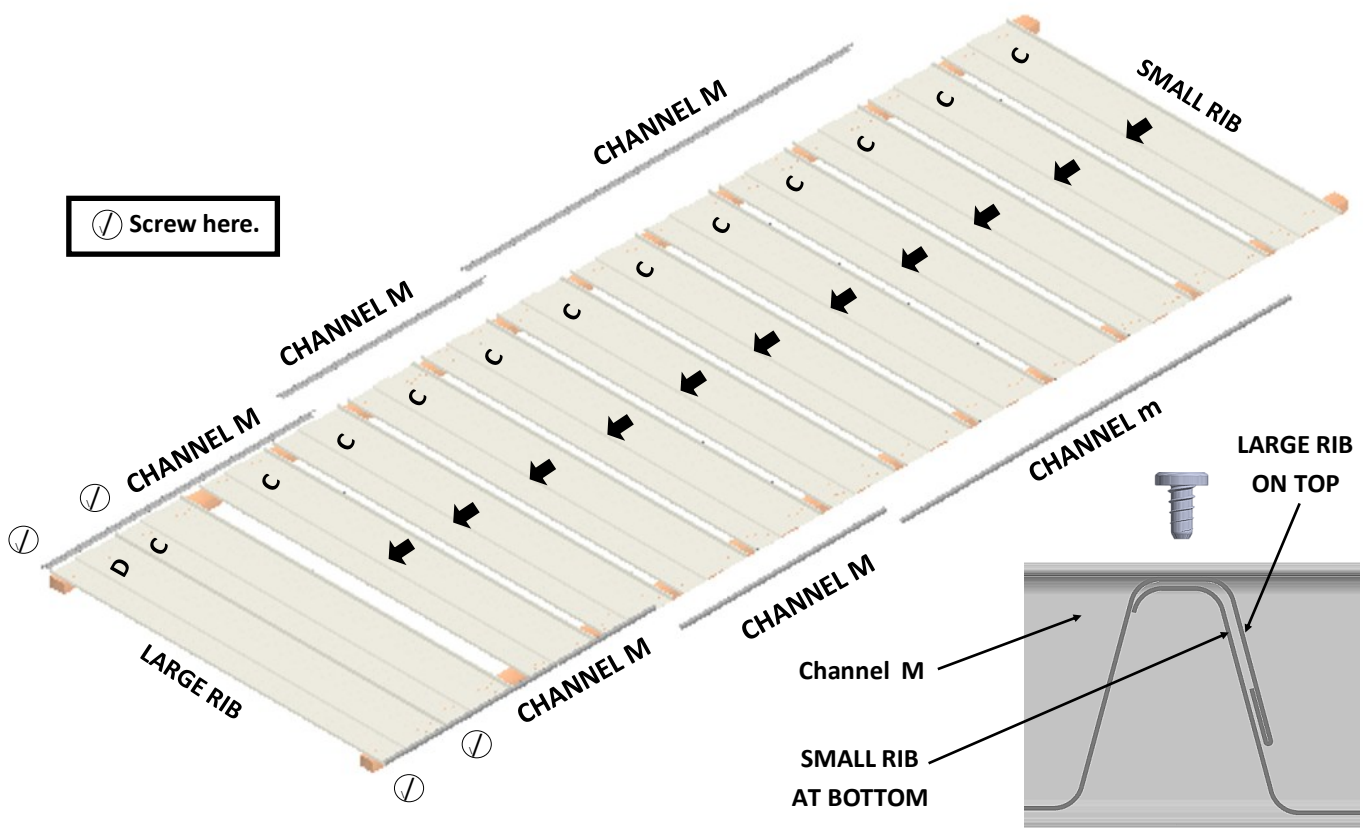

G1510 ASSEMBLY MANUAL

FASTTRAK

REAR WALL PANEL

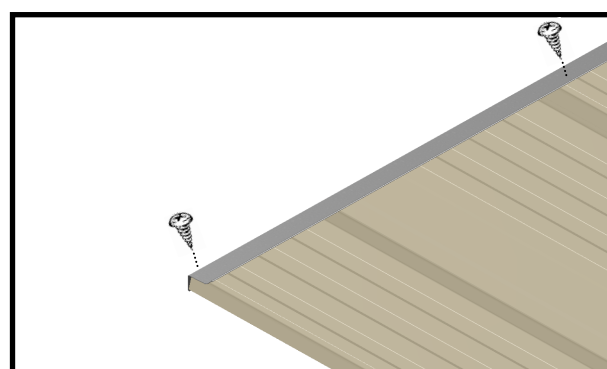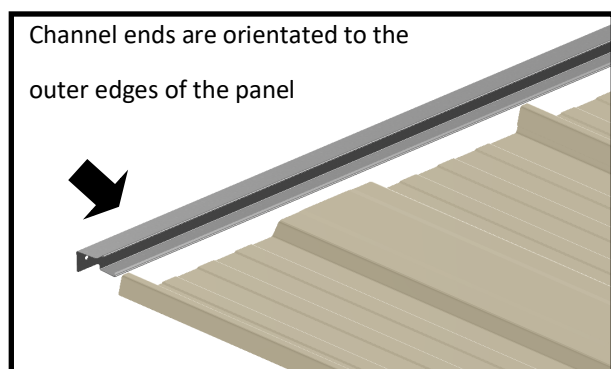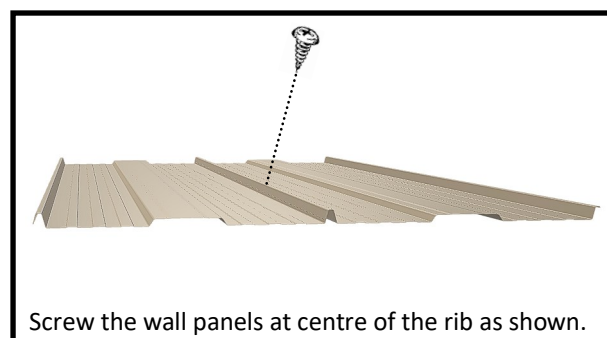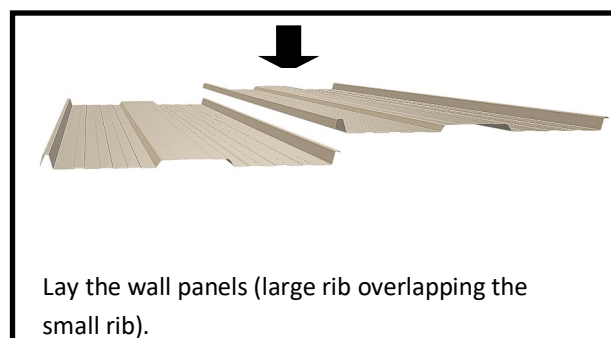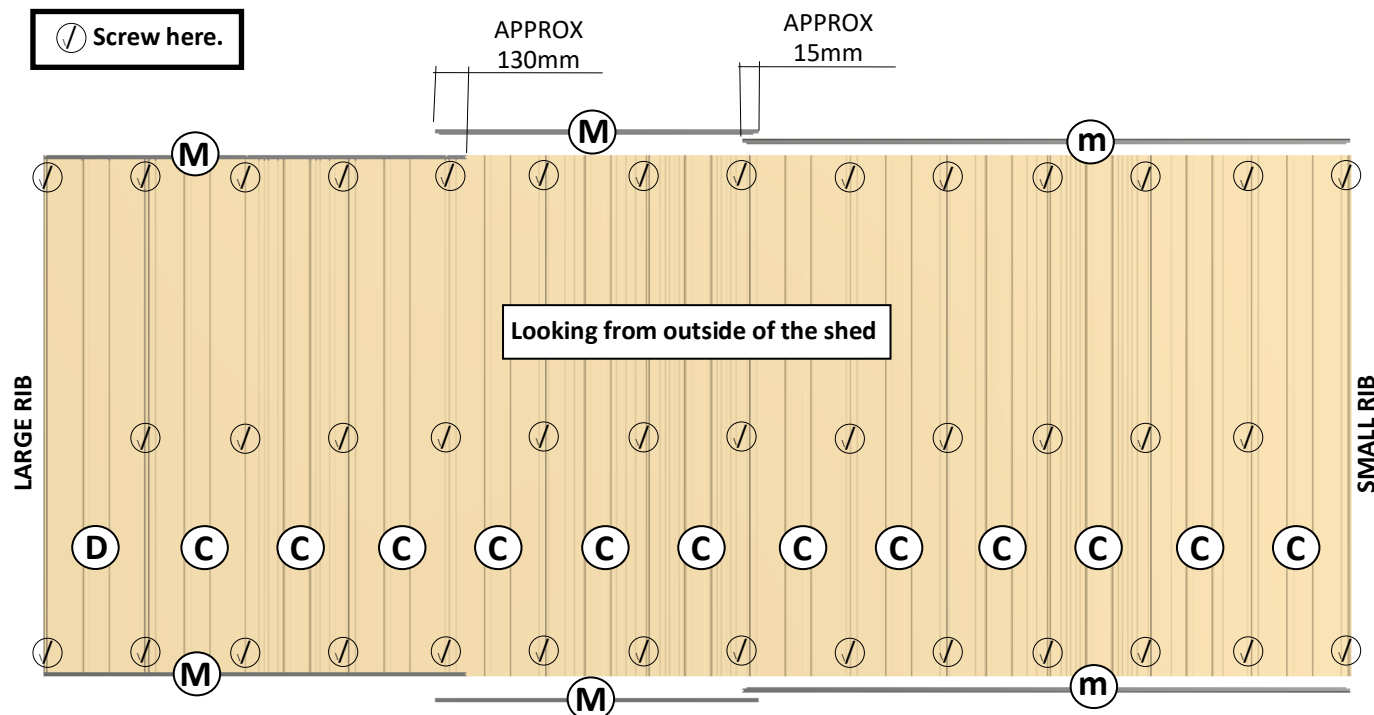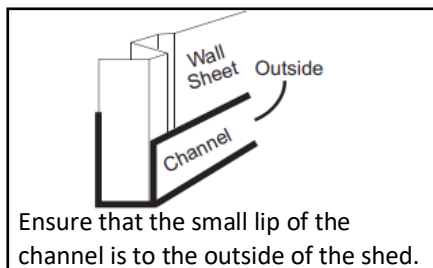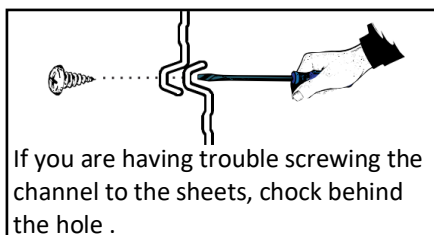


NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.

G1510 ASSEMBLY MANUAL


FASTTRAK

REAR WALL PANEL


Join M(1461) & M(1115)=2575
(2575-130=2445mm)

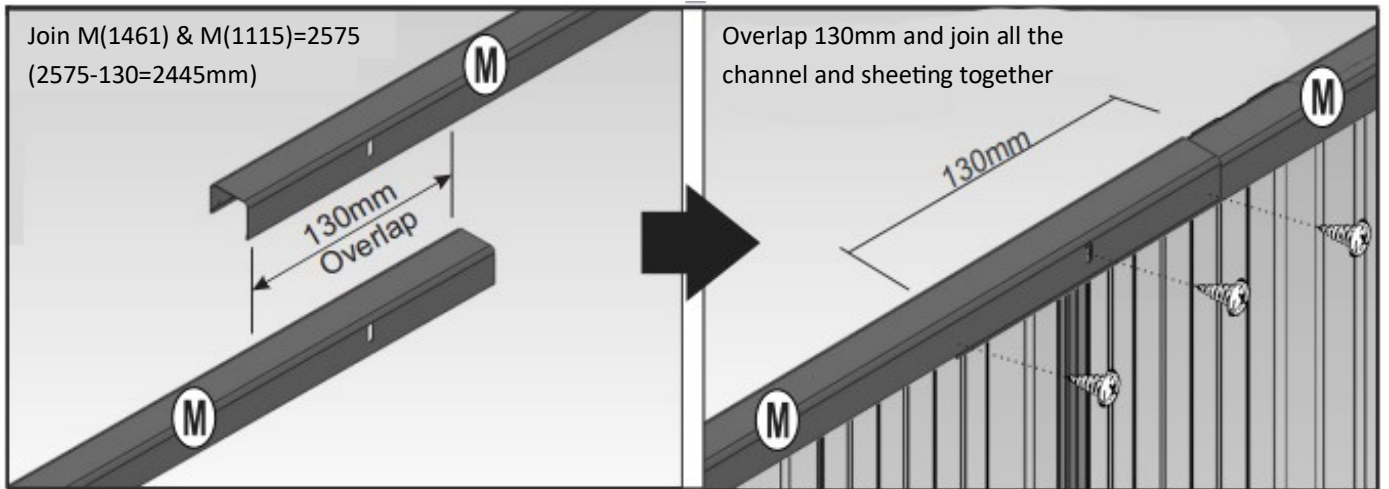

Join M (2445) & m (2099) => 4545mm
(4545-15=4530mm)

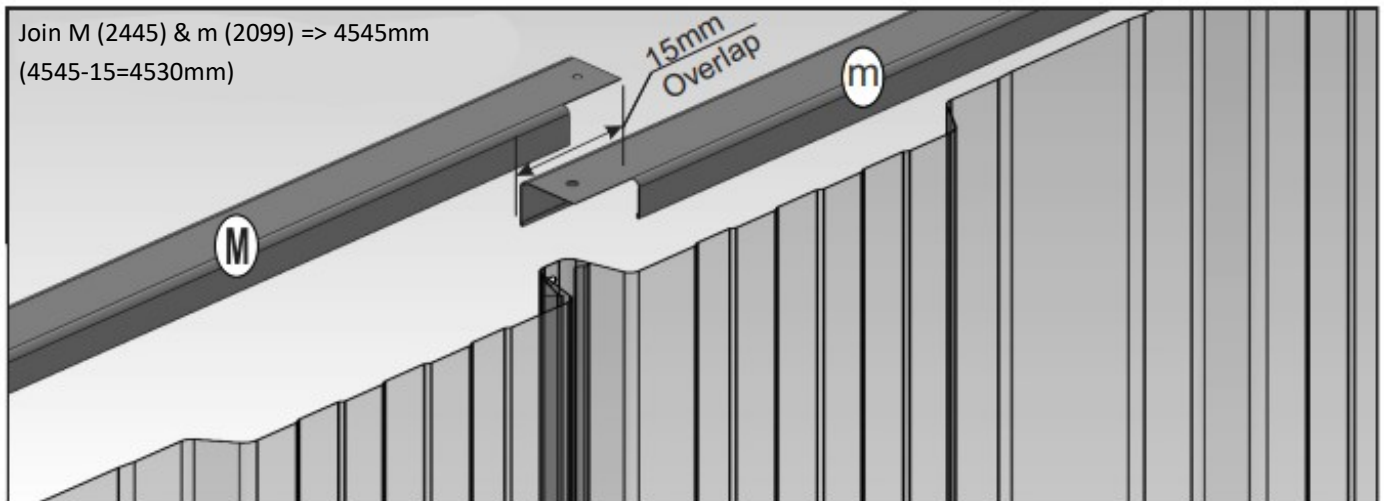



Overlap 15mm so that the holes align properly.
Make sure to screw the channels through sheeting from the side.

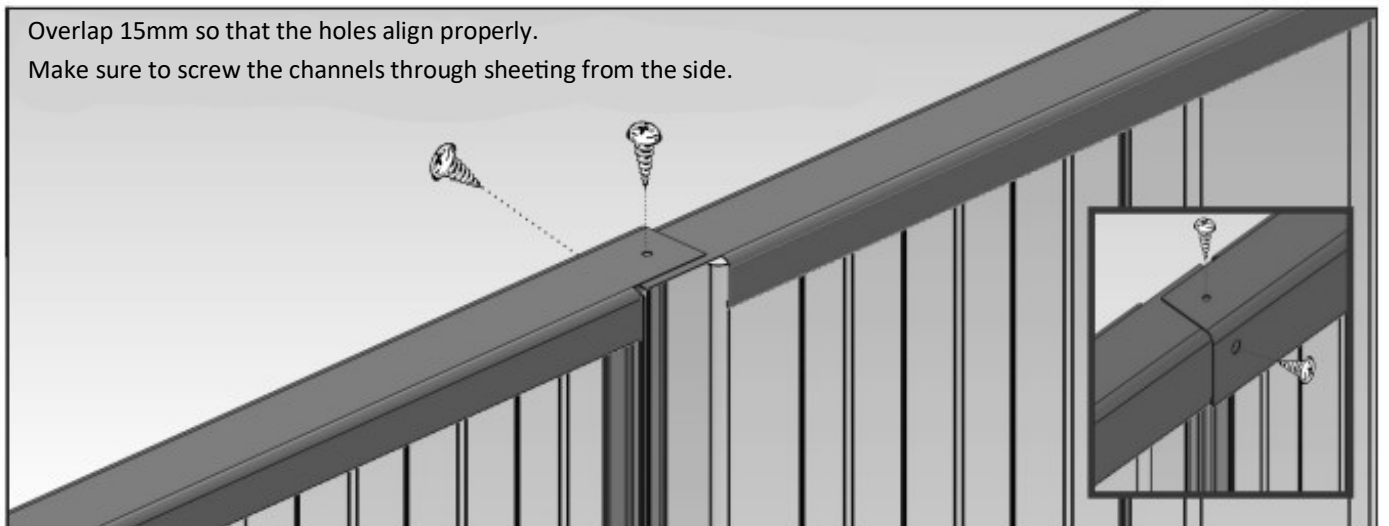


G1510 ASSEMBLY MANUAL

FASTTRAK





FRONT WALL PANEL

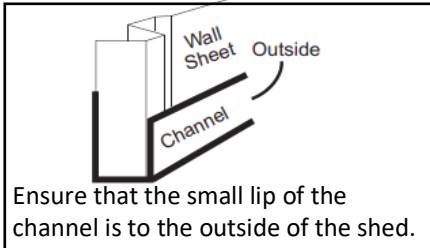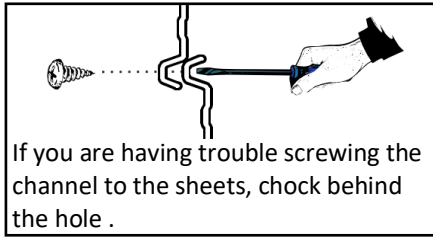

"Required to manipulate sheeting panel to align the channel holes"

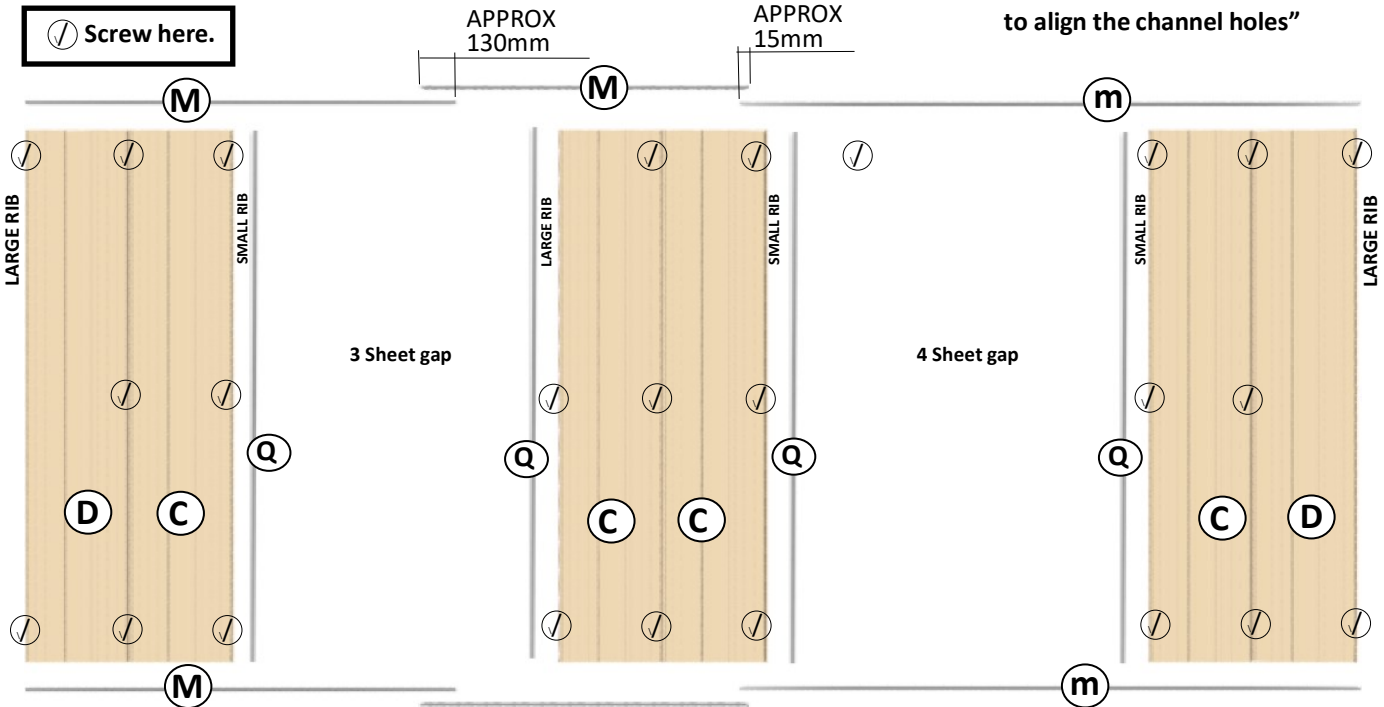

Overlap the top and bottom channels "M&M" by 130mm. Then channel "m" by 15mm. Fit the top and bottom channel and door jambs to the wall panels. Ensure that the positioning of large rib on the sheets are as shown in the picture. Also ensure the channel is flush with the edge of the sheets.

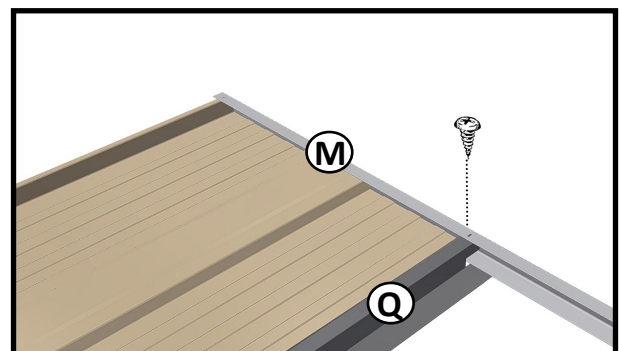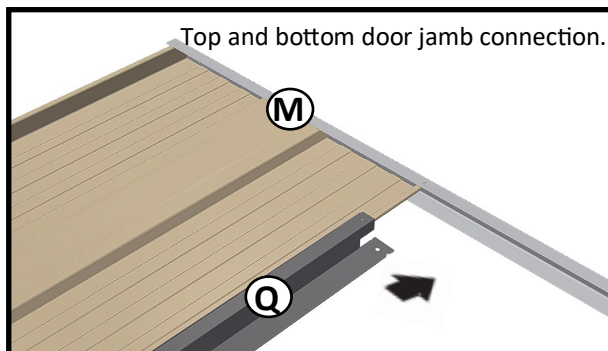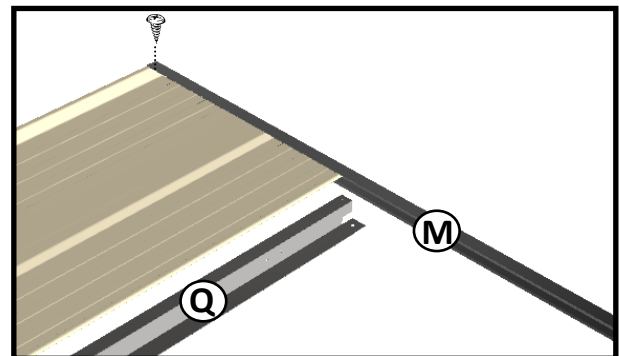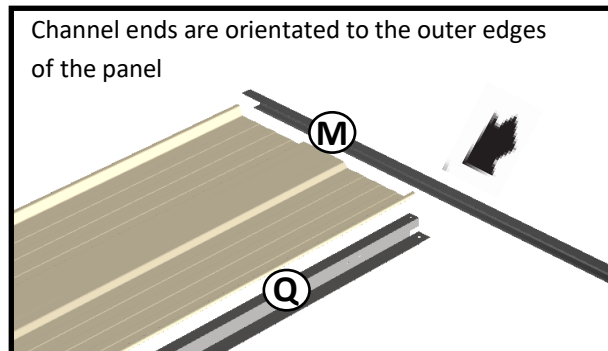

NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.


G1510 ASSEMBLY MANUAL

FASTTRAK





FRONT WALL PANEL

2 x 2 Panel Door
S = 1367mm
R = 1367mm

3 Panel Door
S1 = 1021mm
r1 = 1021mm

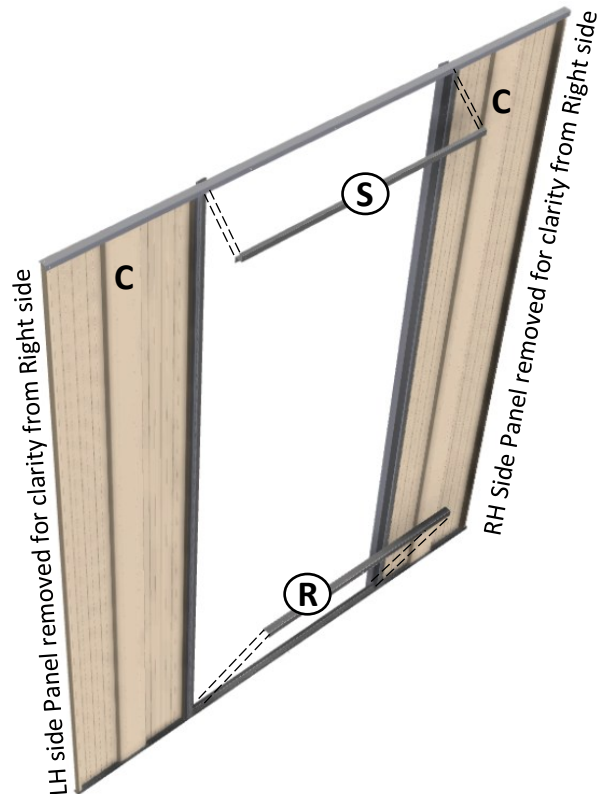

Fit the top door spacer and the bottom door spacer to the front wall panel as shown. Some pilot holes may need to be drilled with the included 2.5mm drill bit

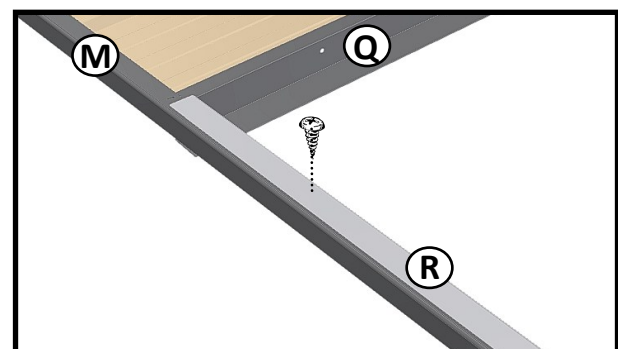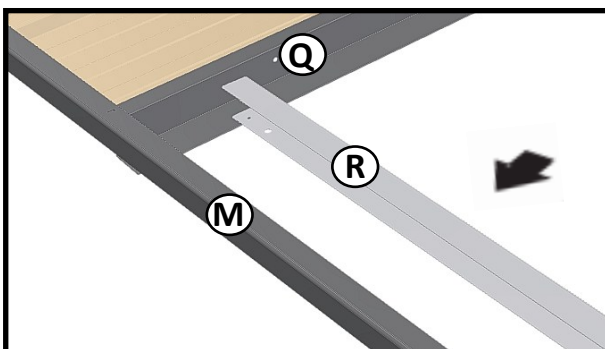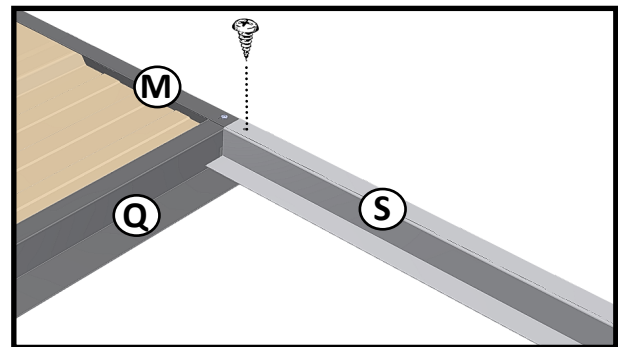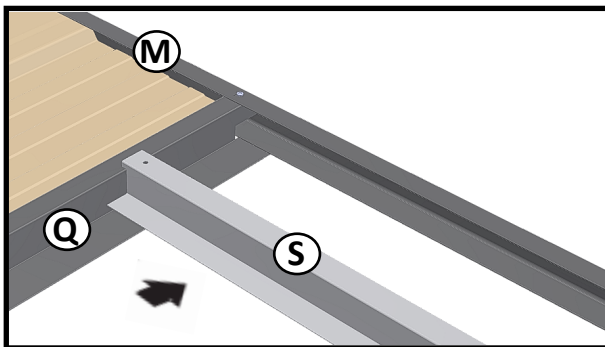


NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.

G1510 ASSEMBLY MANUAL


FASTTRAK

FRONT WALL PANEL

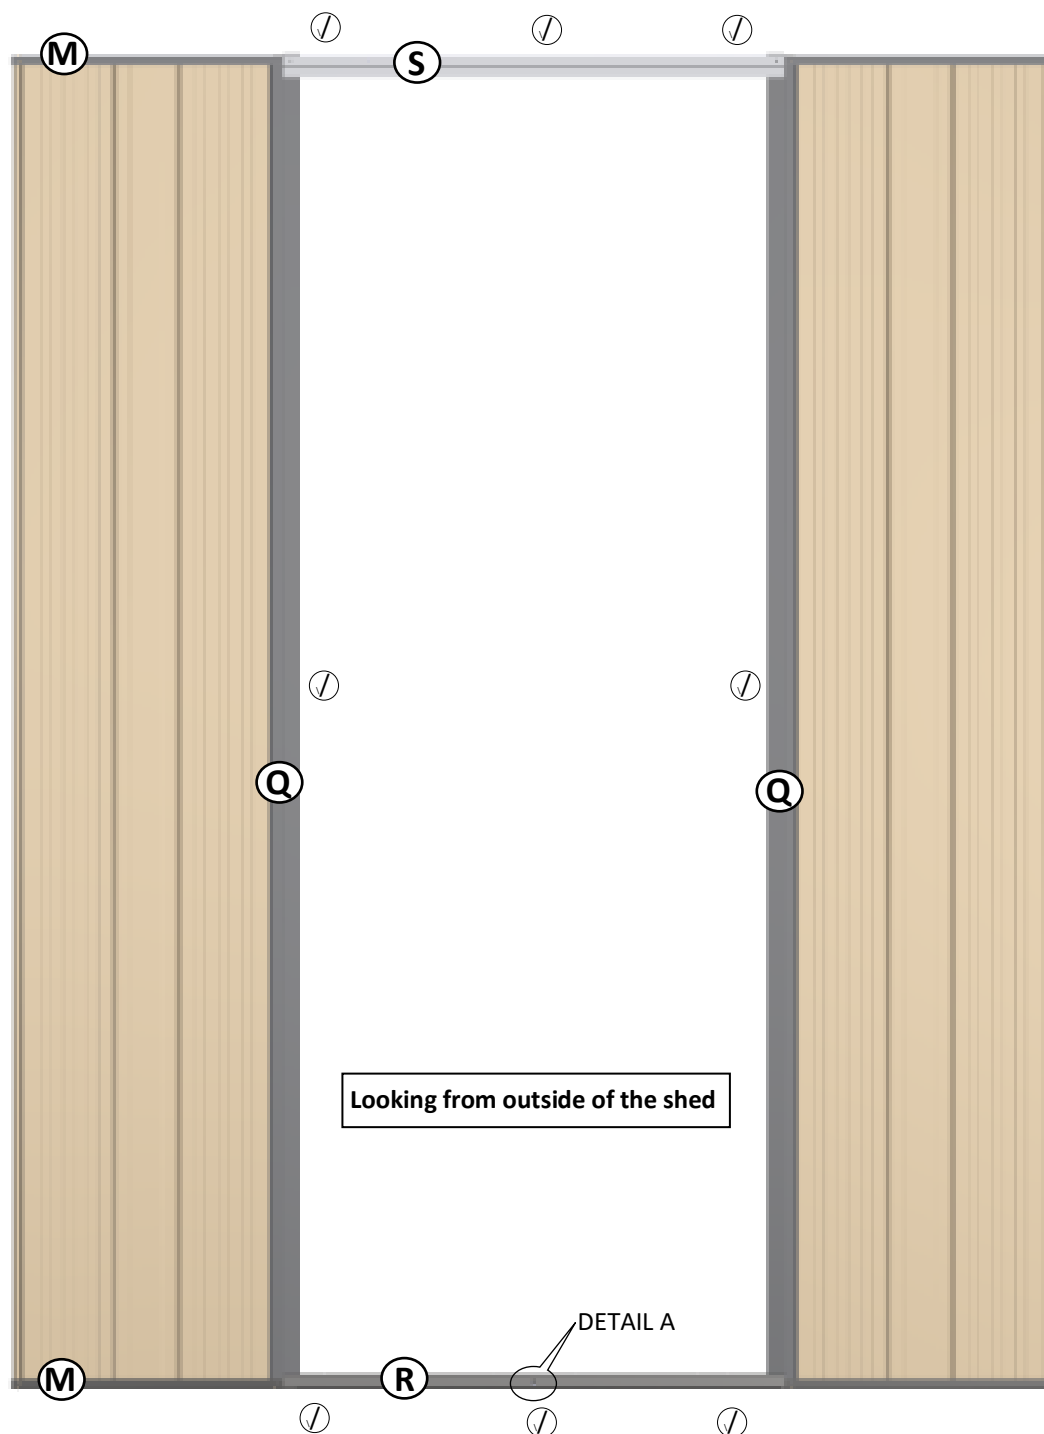


Looking from outside of the shed


⌚ = Screw here

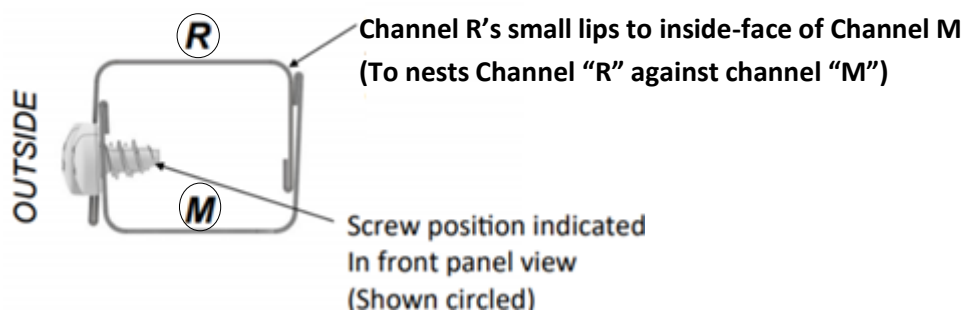

SIDE WALL SHEET LAYING PROCEEDURE

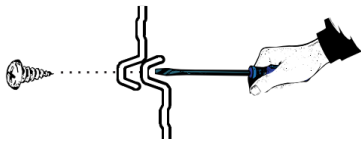


If you are having trouble screwing the channel to the sheets, chock behind the hole .

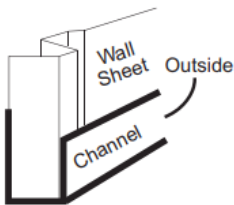

Ensure that the small lip of the chan-
nel is to the outside of the shed.




⚙ Screw here.

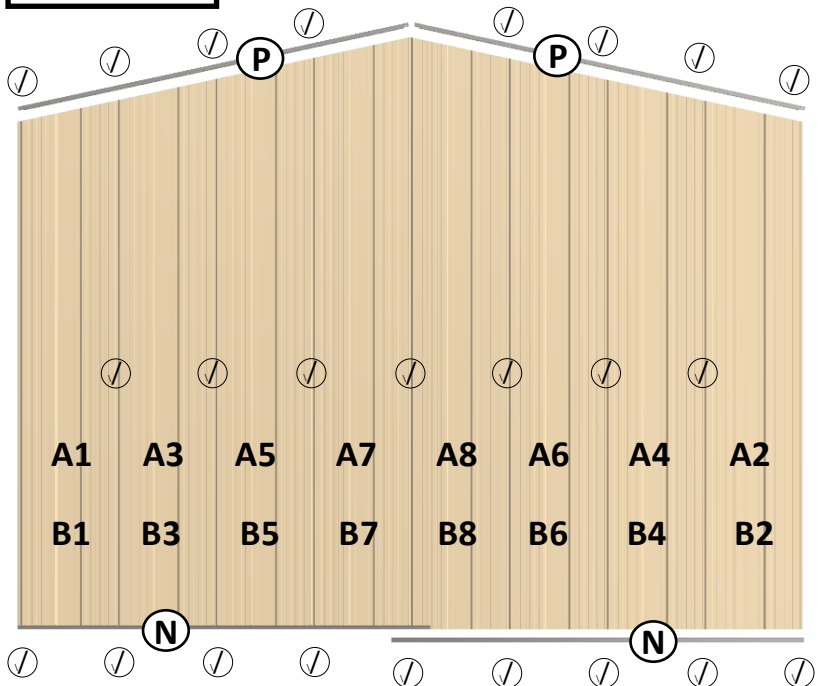


Ⓐ Right Gable Panel Labels Ⓑ Left Gable Panel Labels

Overlap bottom channel by 130mm. Fit the top and bottom channel to the wall panels. Ensure the channel is flush with the edge of the sheets.

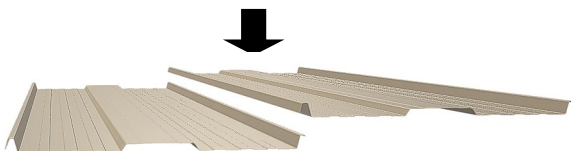


Lay the wall panels (large rib overlapping the
small rib).

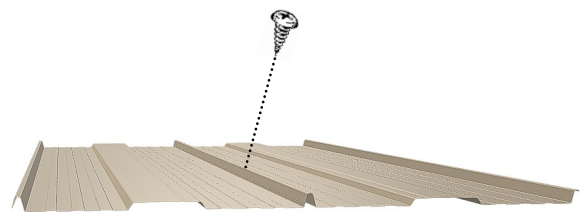


Screw the wall panels at centre of the rib as shown.

Channel ends are orientated to the
outer edges of the panel

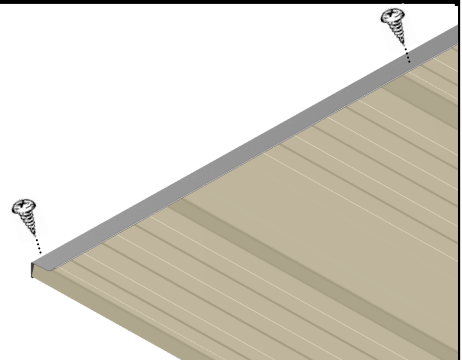

NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.

SIDE WALL SHEET LAYING PROCEEDURE

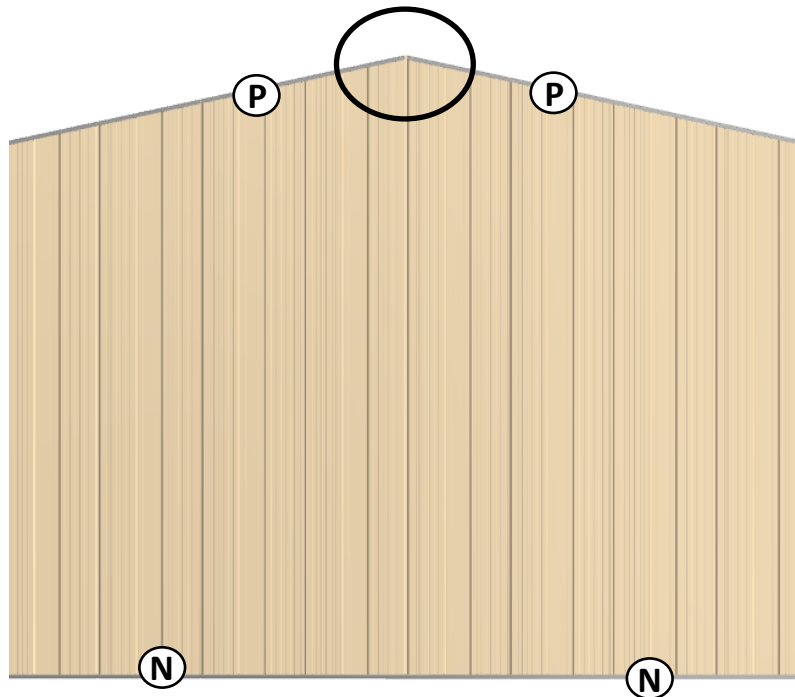

Once the left and right gable wall panels are assembled then position the ridge beam bracket from inside the shed.

Fix bracket from the top with 2 screws then
Pre Drill holes from inside the gable wall,



Looking from inside of the shed

Secure brackets with 4 screws from outside as
shown, on both gable walls.







Looking from outside of the shed

G1510 ASSEMBLY MANUAL

FASTTRAK

ASSEMBLE AND FIT RIDGE BEAM


Assemble the ridge beam on the ground as shown below. Better to assemble one side in full length of 4478mm then do the other length, later box it together.

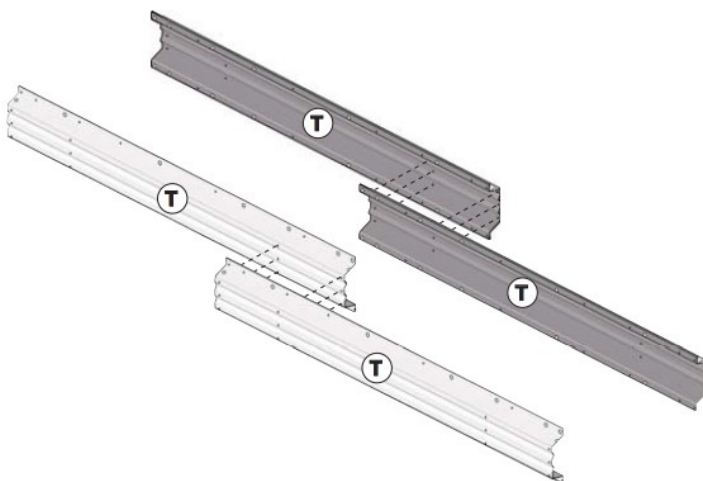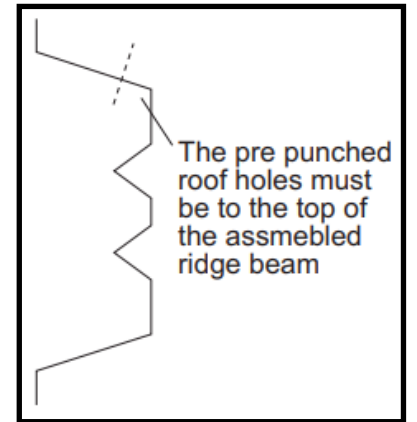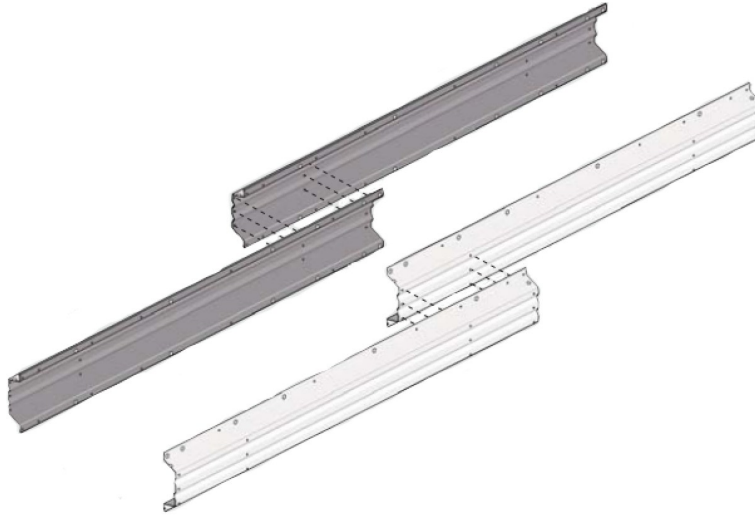

Overlap the two sides of the ridge beam securing them with six (6) screws per side. Ensure the pre-drilled roof panel holes are to the top. Screw the two sides together using the diagram top right as a guide. Note: The two halves of the ridge beam should be fixed at 346mm intervals.


WALL PANEL FIXING

Once the four wall panels are assembled, they can now be placed as shown on the floor close to slab.

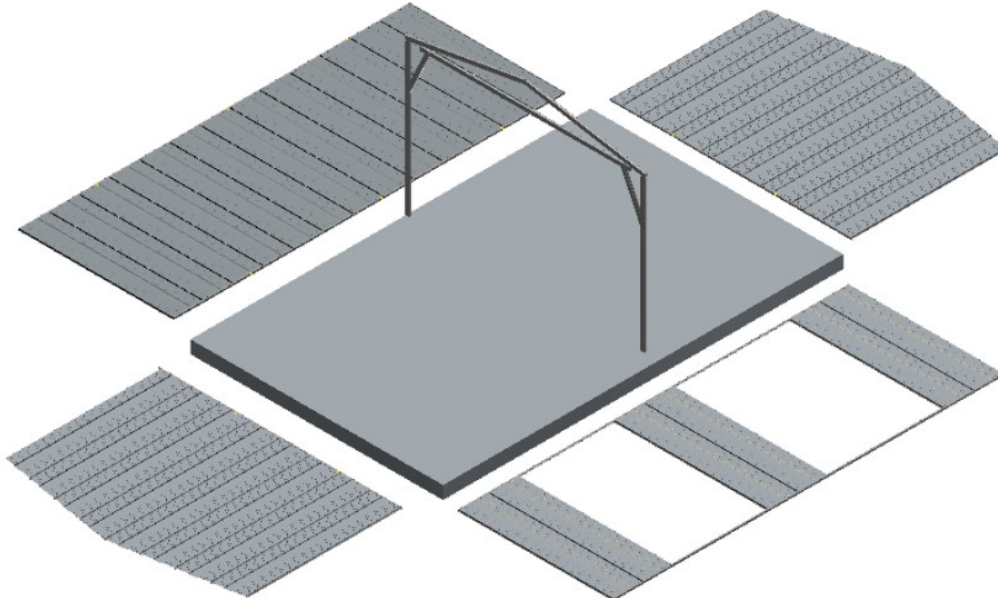



Use help of minimum of 3 person to lift and hold the panels. Take care not to assemble in windy condition.

DO NOT ASSEMBLE IN WINDY CONDITION

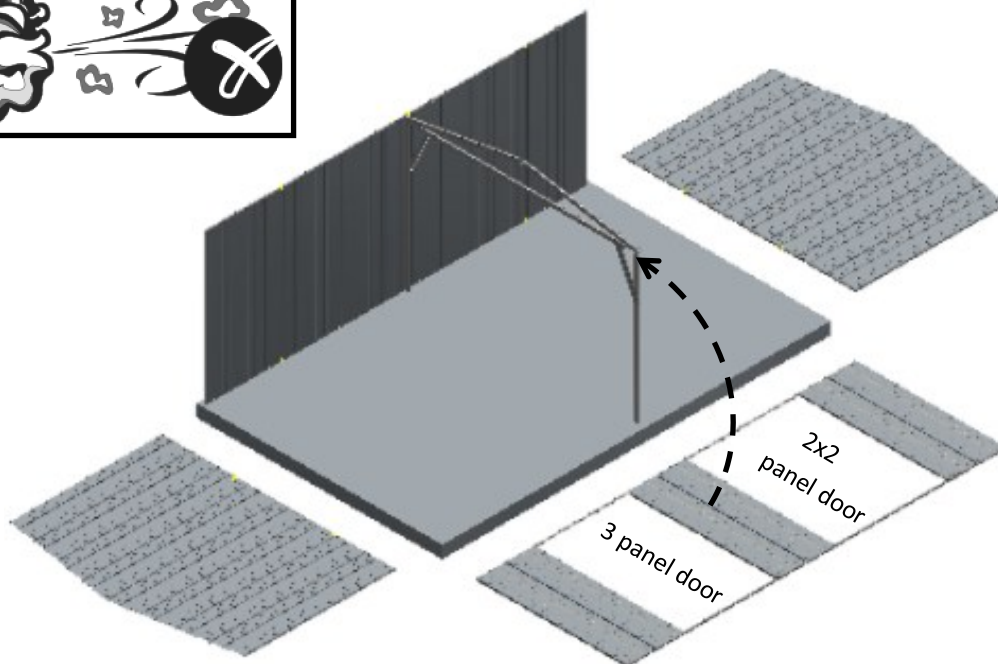


Lift the Rear wall Panel and place on the slab close to the portal leg. Make sure to position the panel inside facing towards the portal frame, and center of the portal leg should be on the center of the rib where 7th panel (from 2x2 door) joint to 6th panel (from 3 panel door)

WALL PANEL FIXING

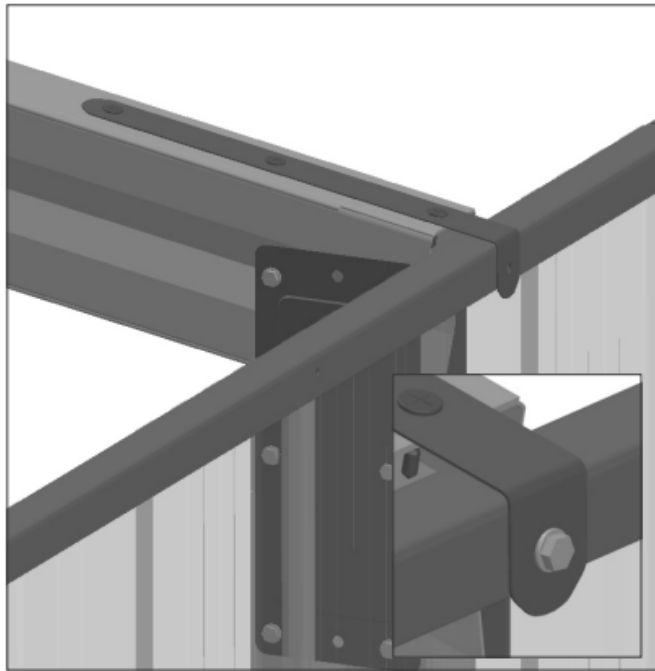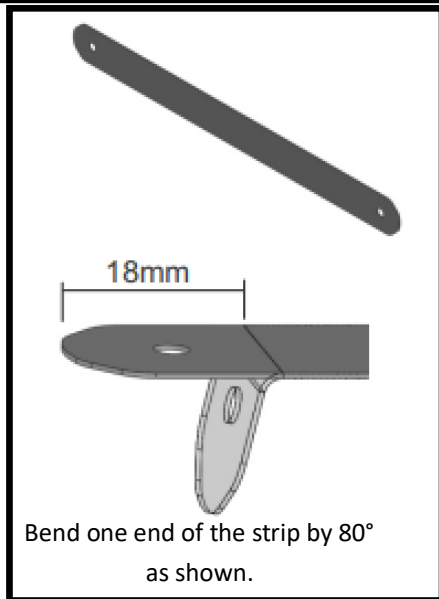

Now Screw the strip to the Rear wall channel as shown, then fix it to the portal. Make sure to fix the portal to the center of the rib where 7th (from 2x2 door side) and 8th. panel ribs join.

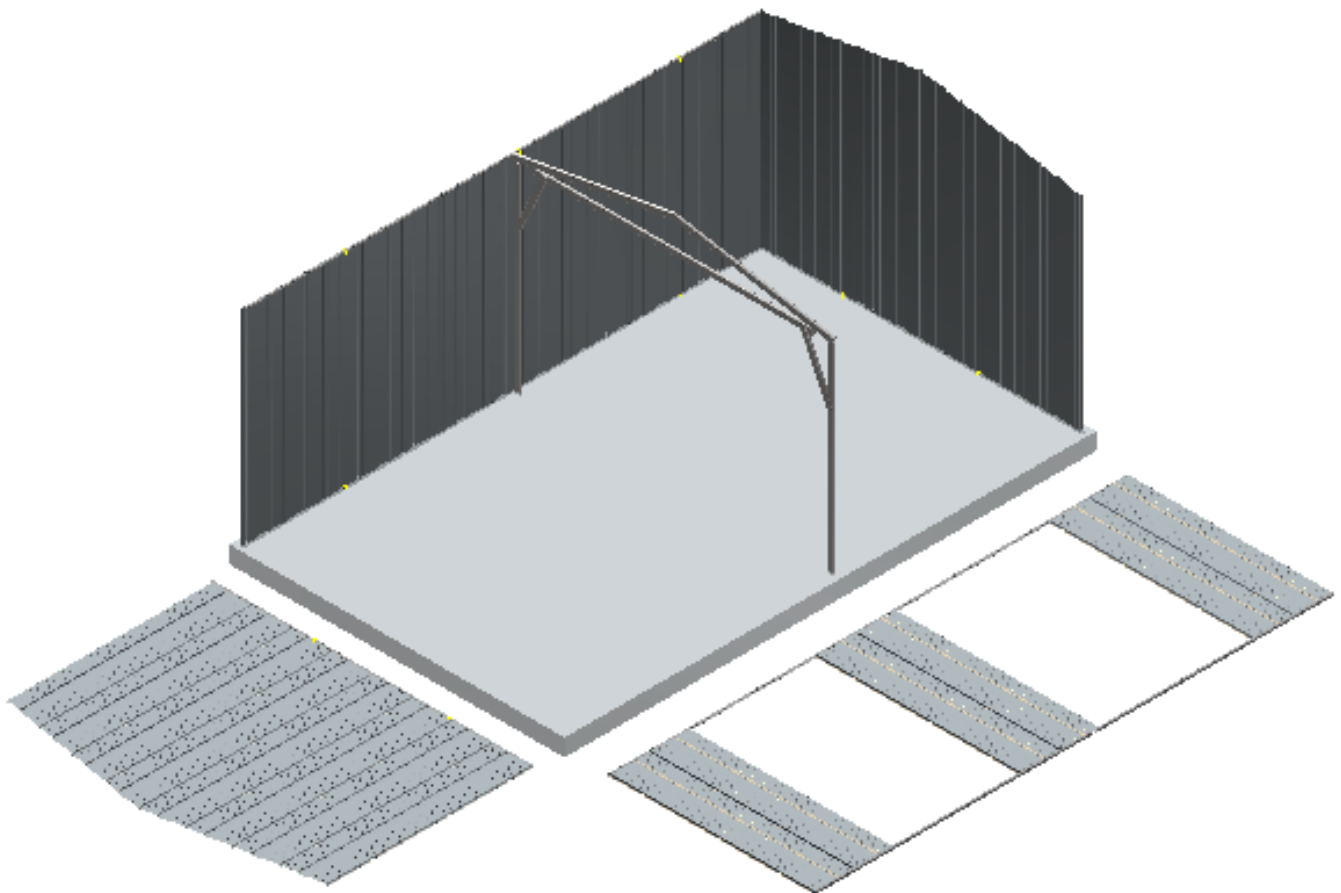


Now Lift the side wall panel and screw to the rear wall panel using bracket as shown over the page.


G1510 ASSEMBLY MANUAL

FASTTRAK


WALL PANEL FIXING

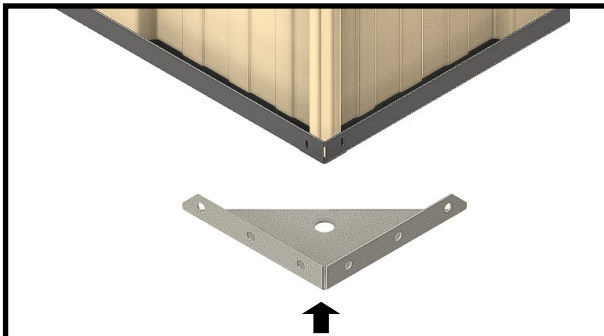

Fix the Corner bracket to the 4 bottom corners

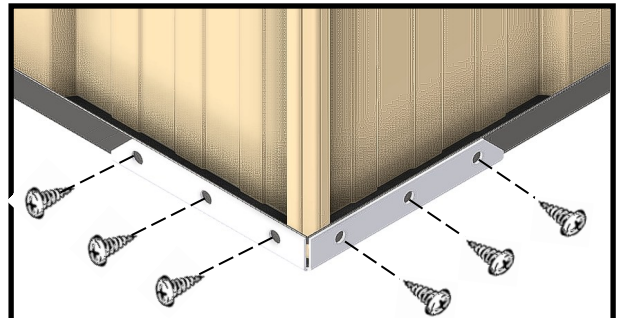


Screw the corner bracket from outside of the shed as shown. Required on all 4 bottom corners

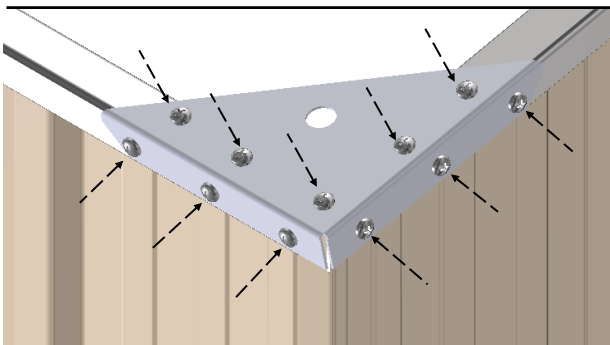


Once the 2 wall panels are positioned, they can now fixed together. Fix using the corner brackets and screws as shown at both bottom and top of the corners.

Now Lift the other side wall panel and screw to the rear wall panel using the brackets as above

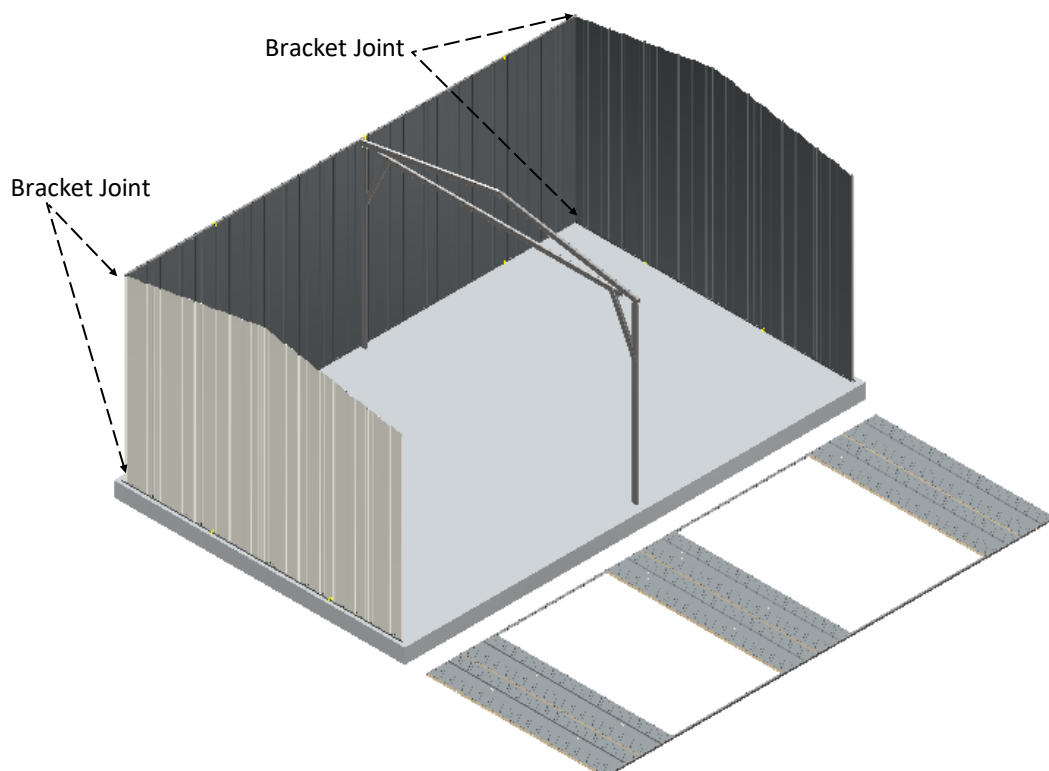


WALL PANEL FIXING

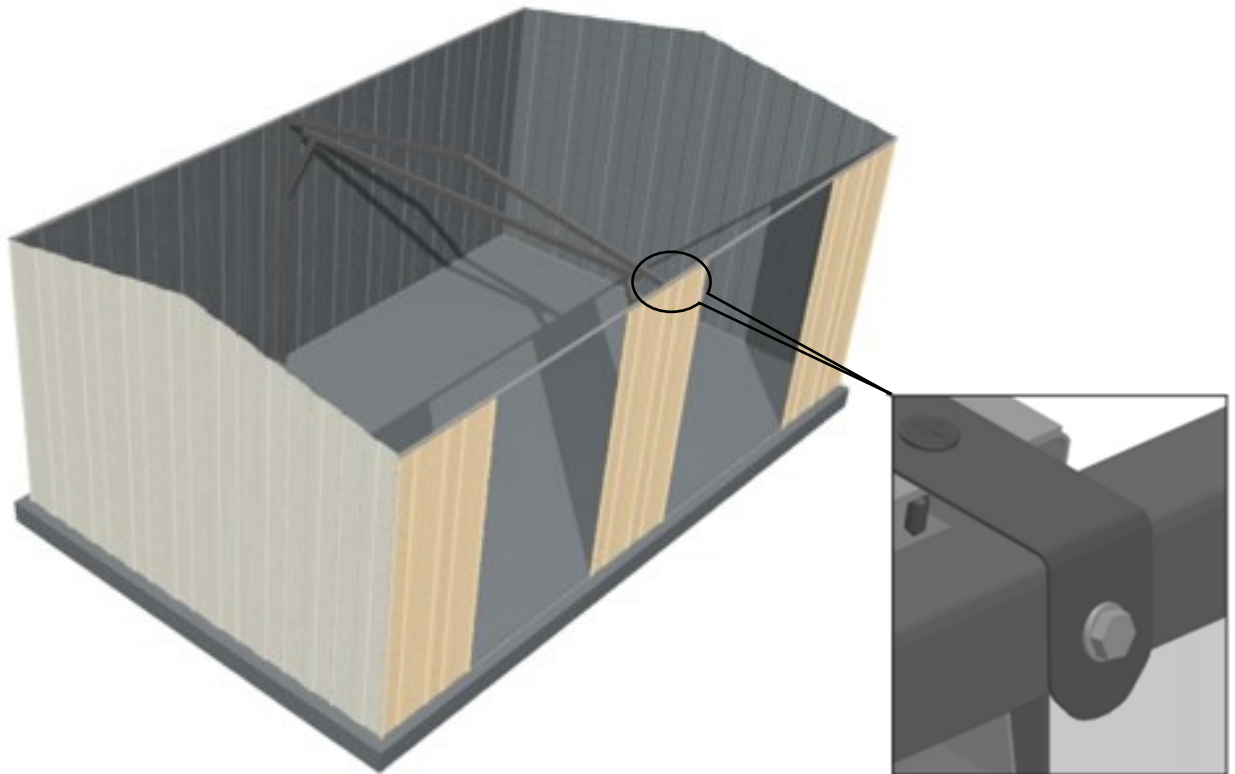

Lift the Front Wall panel to position and join it using the corner brackets as shown previously. Also make sure to fix wall panel with portal using the bend Gusset strip as shown on rear wall fixing.

Screw 4 corners at the mid pint of the shed using the pre drilled holes.

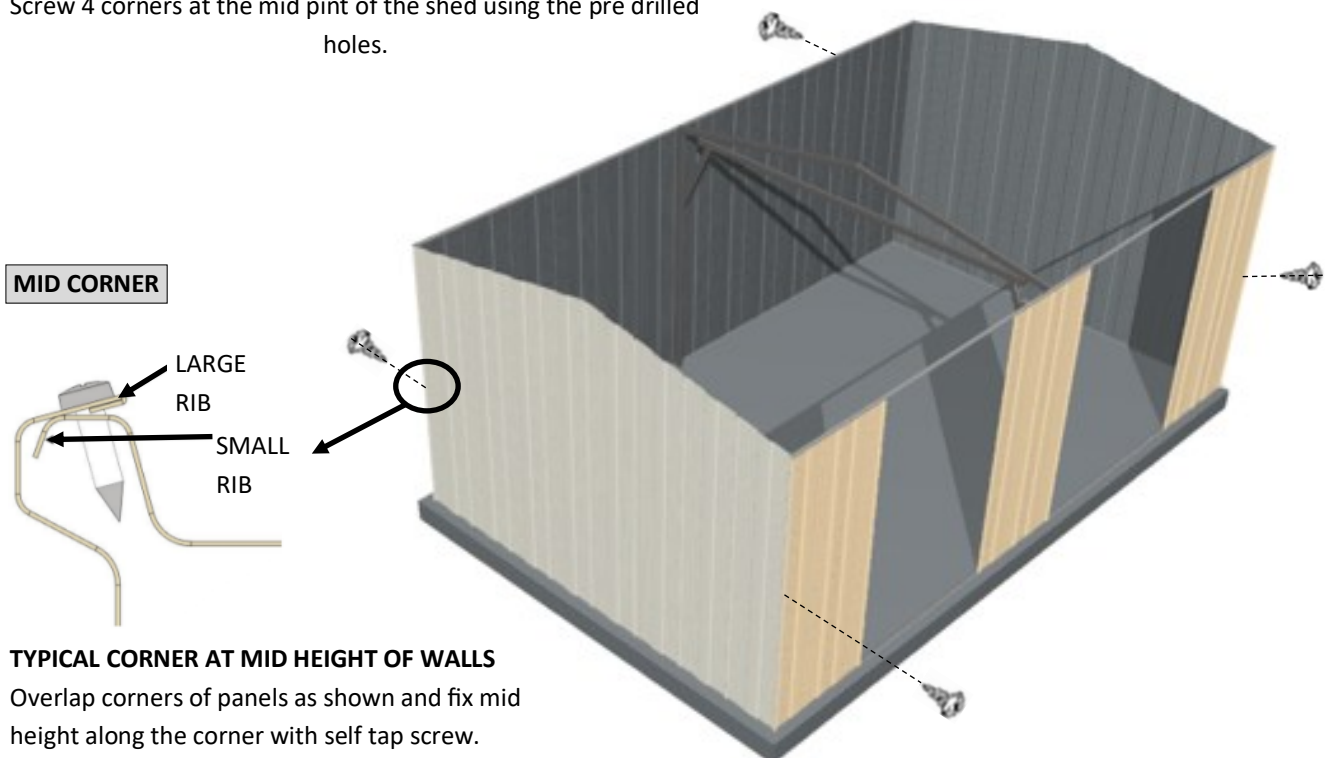



TYPICAL CORNER AT MID HEIGHT OF WALLS

Overlap corners of panels as shown and fix mid height along the corner with self tap screw.

G1510 ASSEMBLY MANUAL


FASTTRAK

FIX RIDGE BEAM

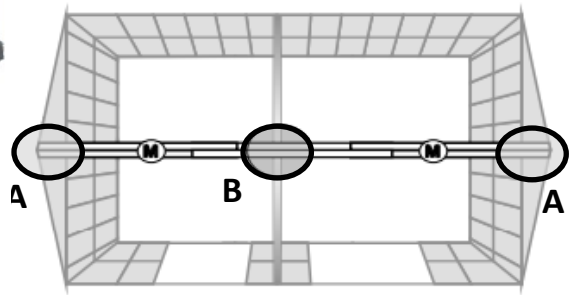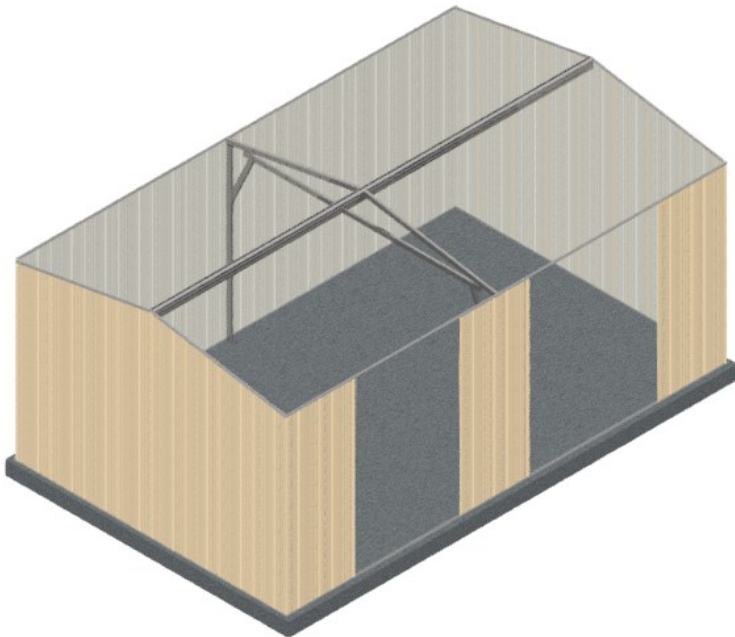


Fix ridge beam to the portal as shown. Make sure the pre drilled holes for the roof panel are on top.

Detail A


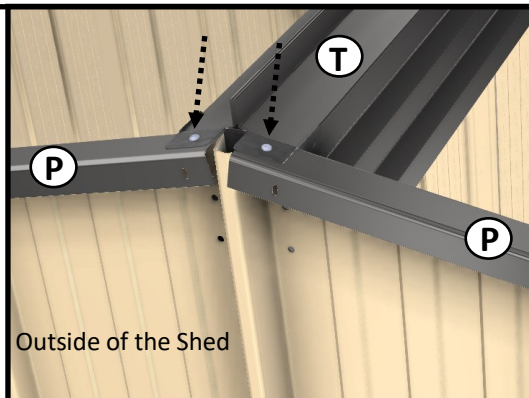


Screw Ridge Beam assembly from the top of Side gable wall channel "P"

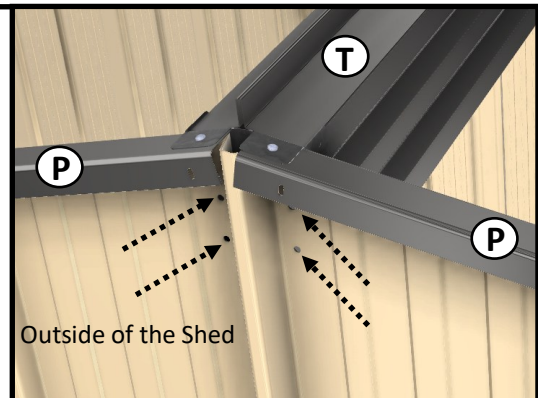

Screw Ridge Beam assembly from outside of Side gable wall through pre drilled 4 holes


Detail B

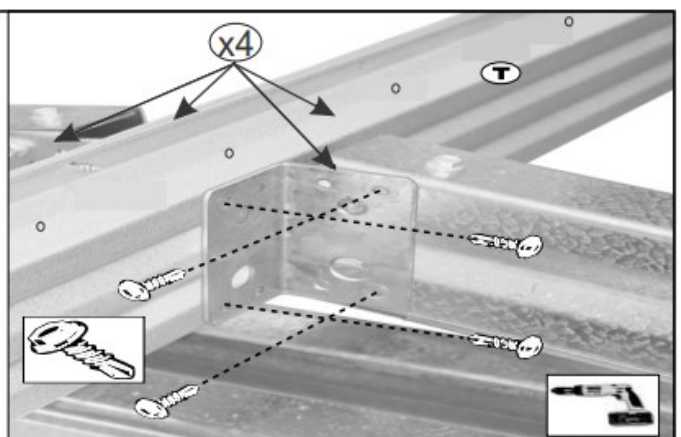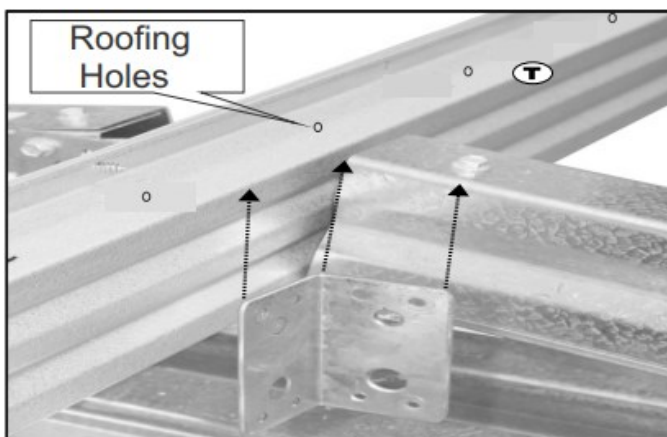


Screw 4 corners at the mid pint of the shed using the pre drilled holes.

FIXING ROOF SHEETS

Screw the door side of the roof on first (do not start the rear side yet). Work from right to left ensuring the large rib is over the small rib. (If you are installing a skylight, please refer to the instructions at the end of this booklet)

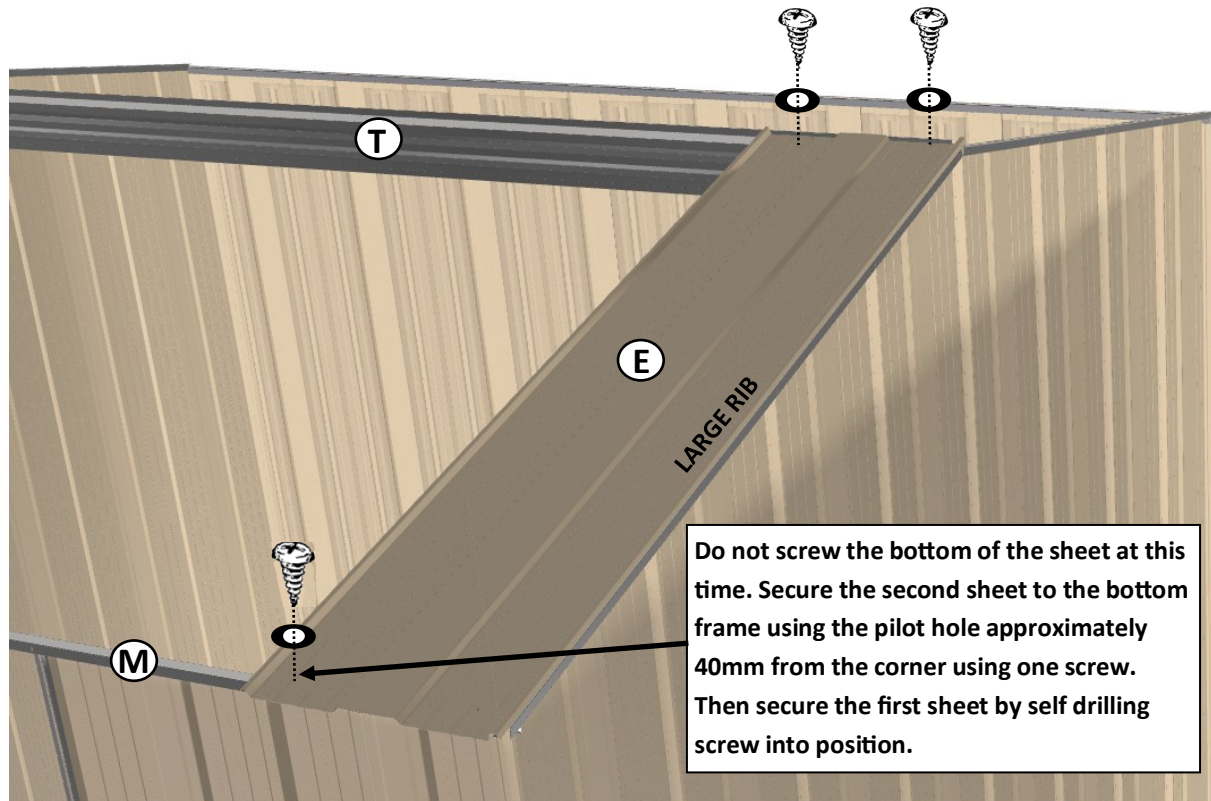

Similarly lay all roof sheet on door side and screw to the ridge Beam "T" with 2 screws and at the bottom 1 screw.

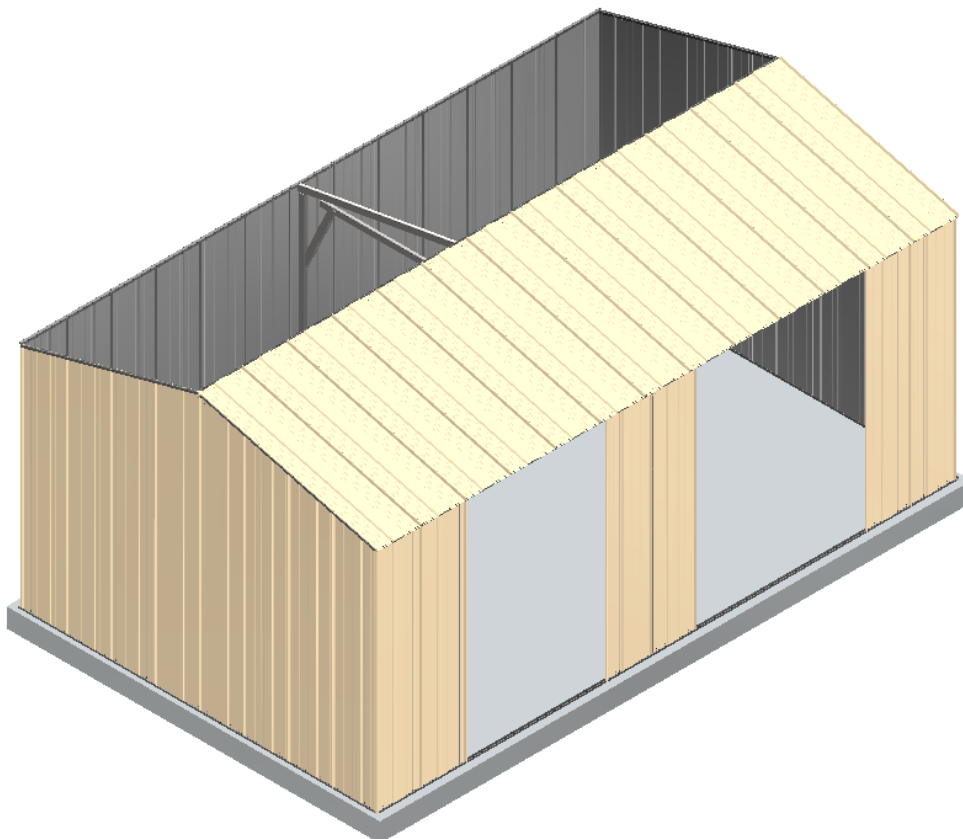



FIT ROOF RIDGE CAP

Fix the first two rear roof panels, starting with the large rib on the outer left-hand side.


Ensure the rear rib overlaps are closely aligned with the rib overlaps on the front roof panels.

Place the first ridge cap into position (do not screw down until second ridge cap is in place).


*Note: Ridge caps are not symmetrical. If one does not sit easily on the roof panels, rotate it 180° and reposition. Continue this process to install the remaining rear roof panels and ridge caps.

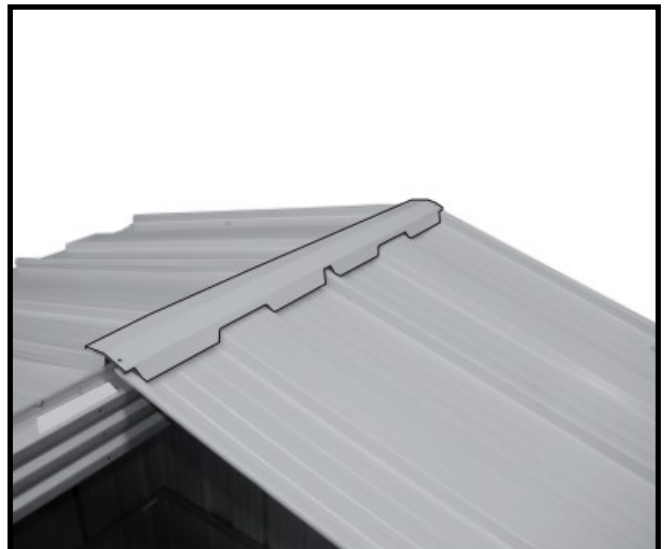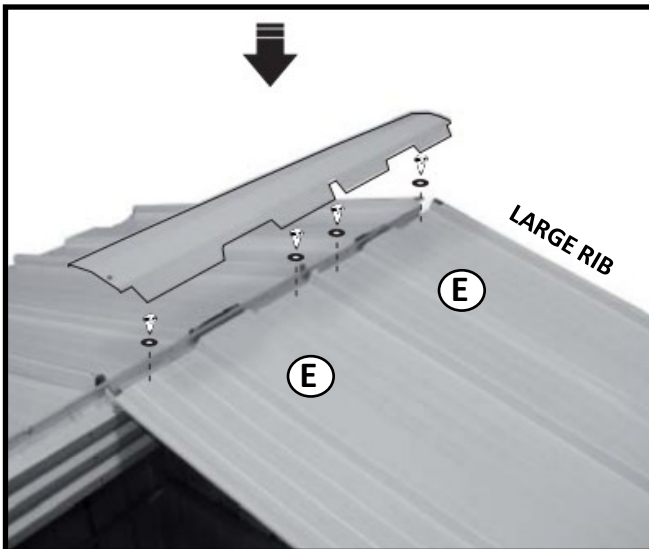

Fix the next two (2) sheets then fit the second ridge cap. Fix this as shown below.

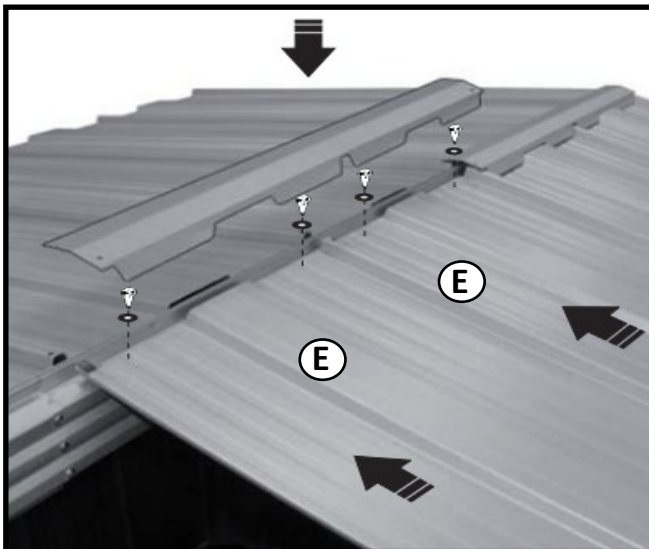

Now fix next 2 roof sheet and follow the pattern to fix ridge cap.



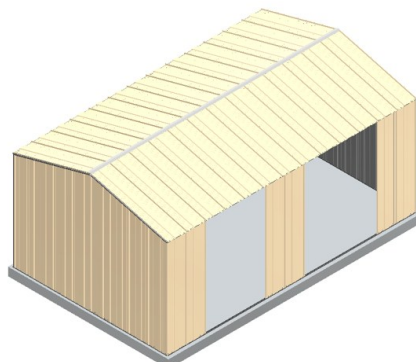


G1510 ASSEMBLY MANUAL

FASTTRAK

FIT ROOF AND TRIMS



To fit the side gable Roof angle trim "W" undo all top gable wall screws fastened previously on top of the gable wall panels, then re-do it along with channel "W". Once the Side trim "W" fit then place the Gutter trims "V1 & V2" over lapping to get required length.

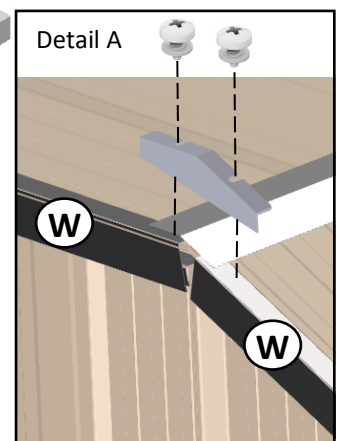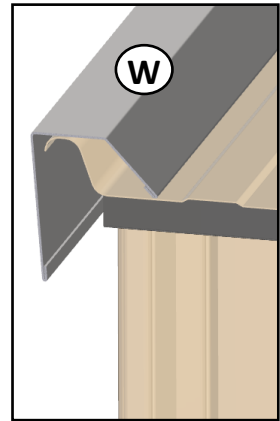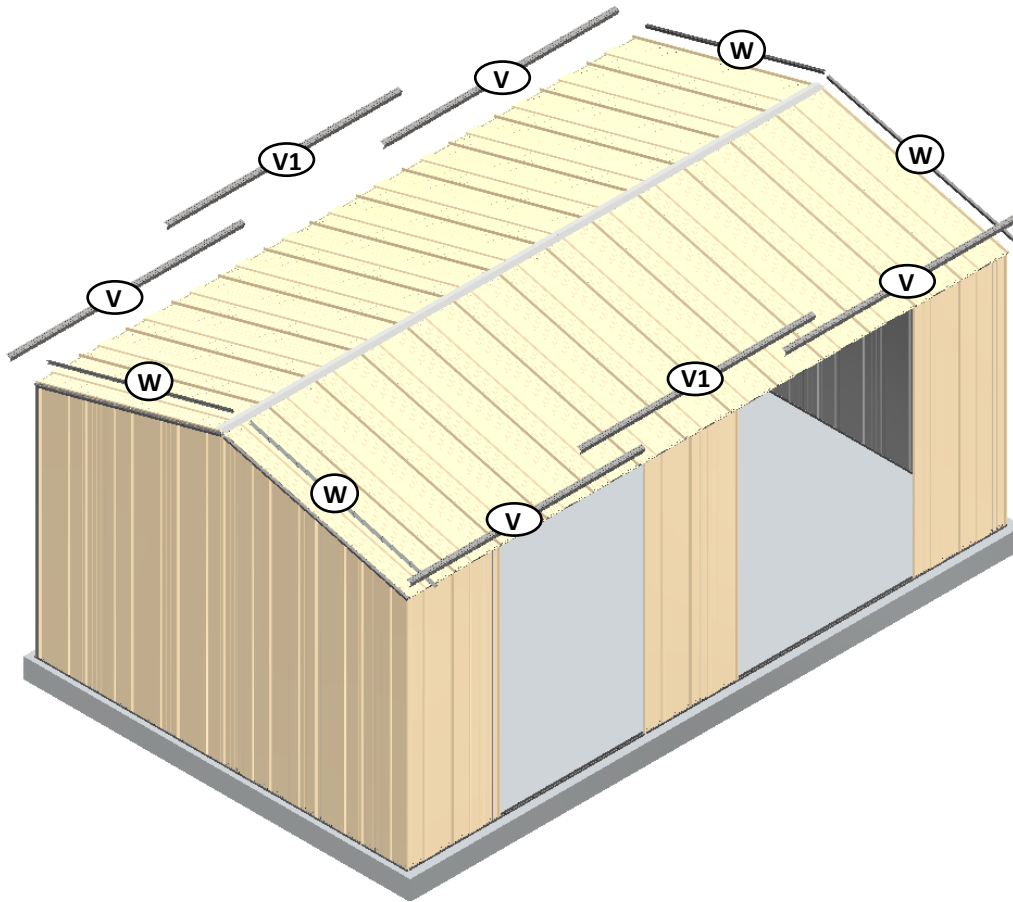




Detail A

Fix plastic ridge End Cap on either side of the shed as shown.

Use 4 Plastic corner cap to fix all 4 corners as shown.

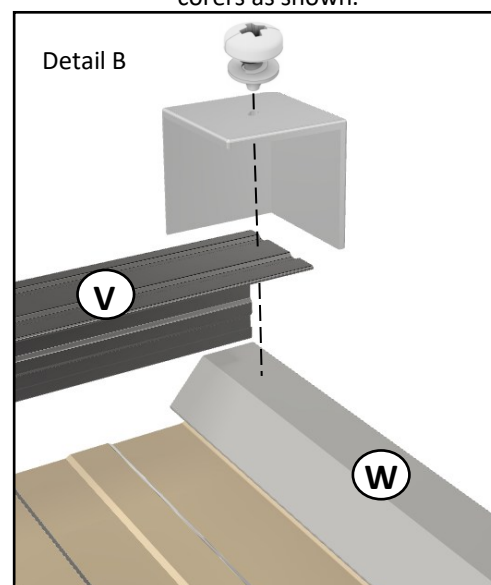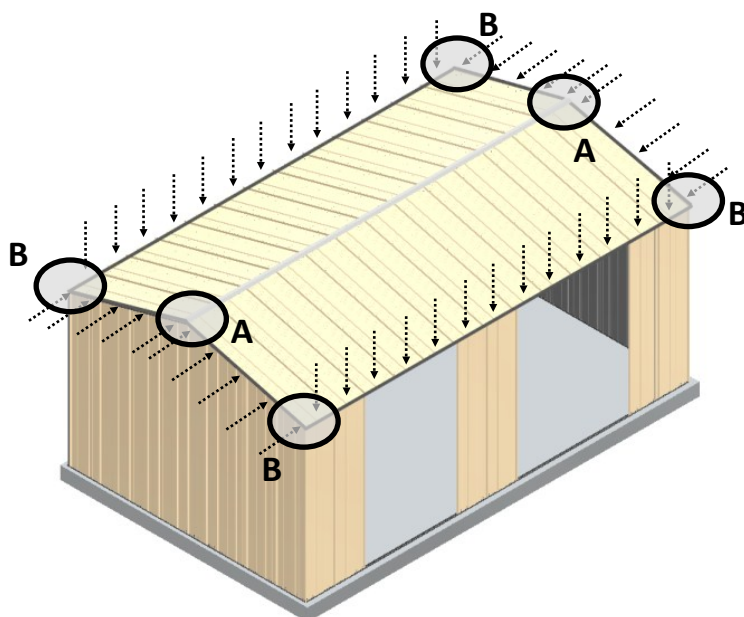


DOOR ASSEMBLY—2 X 2 PANEL

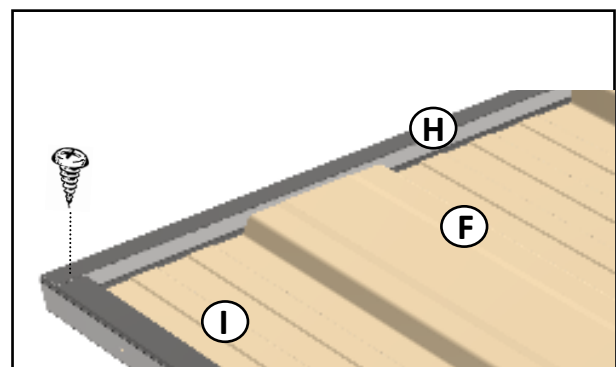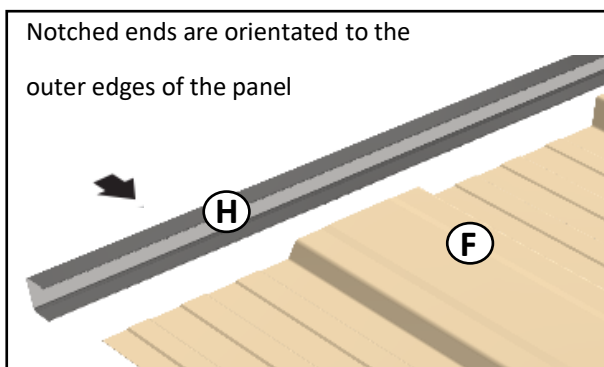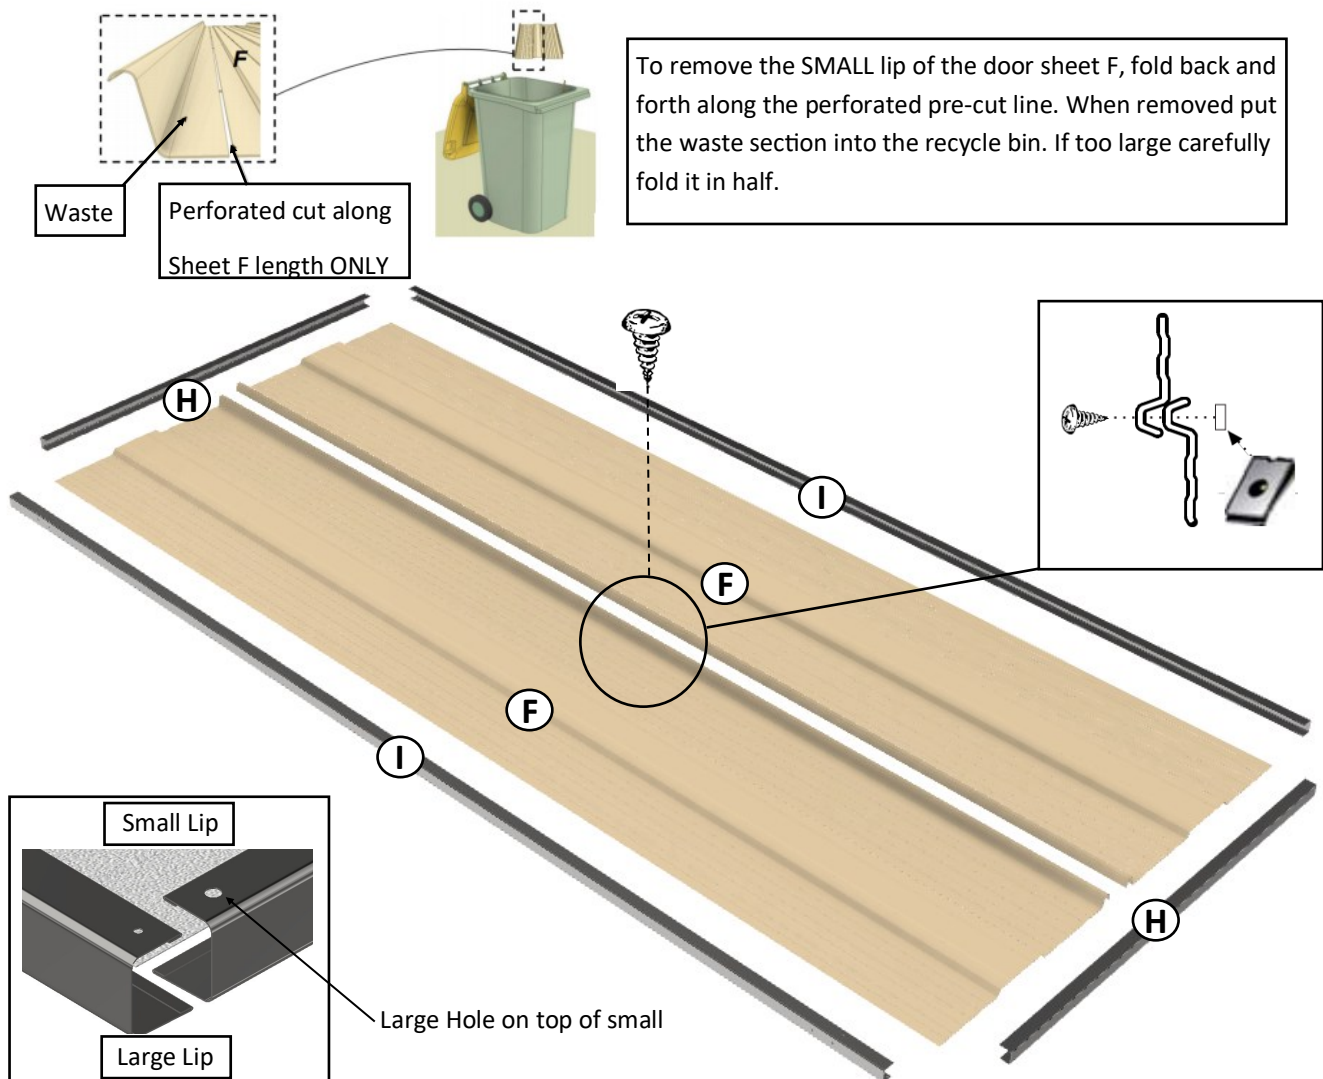


NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.

NB: 2 Door Panels required for this shed.


DOOR ASSEMBLY—2 X 2 PANEL

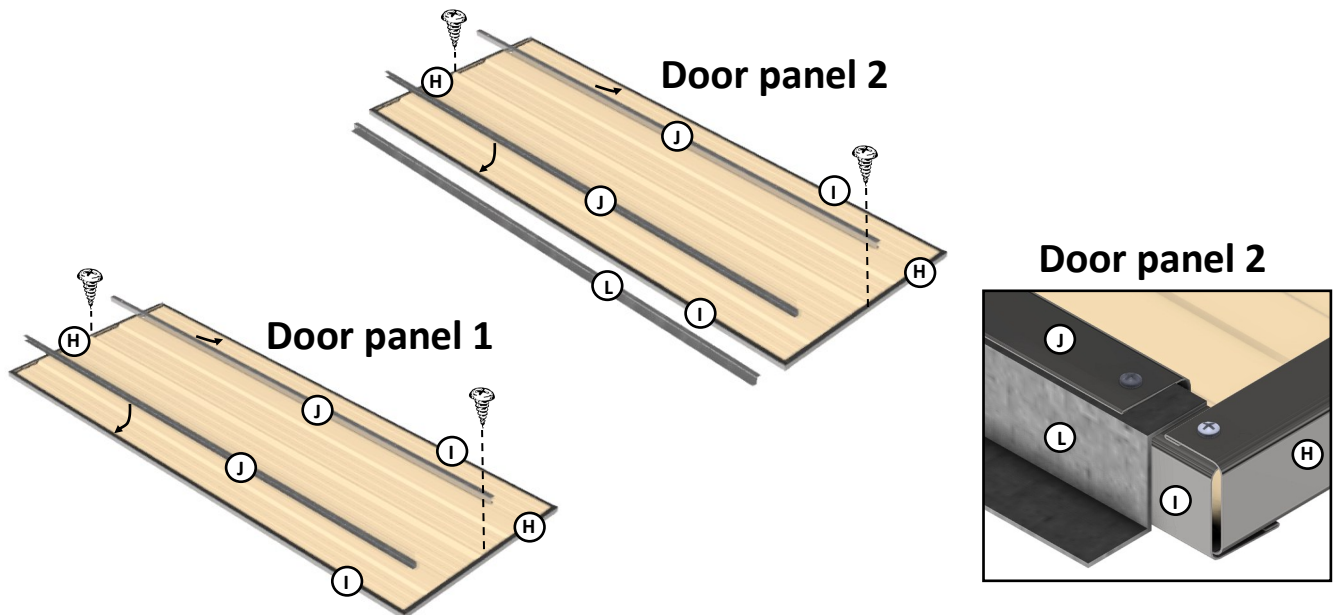


Fix the frame H to the sheeting with screws through the small channel lips into the large sheeting ribs. Door boxing must be fitted to the door frames and a door seal fitted on the second door. The seal fits in between the frame and boxing as shown

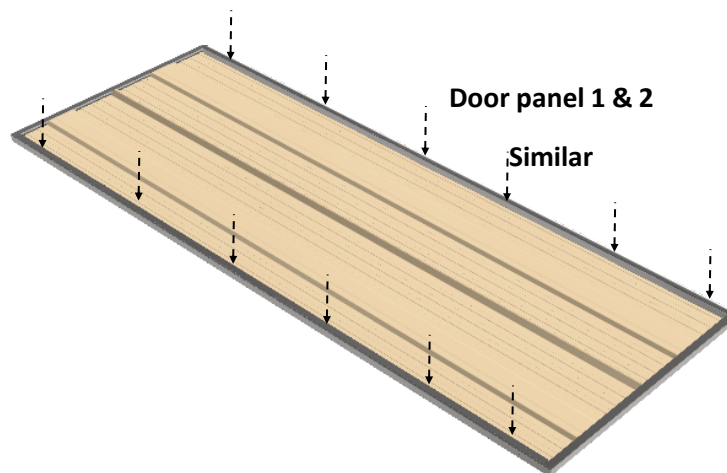


Leave an even gap at both ends of the boxing.
Place large lip of J over the small lip of I as shown

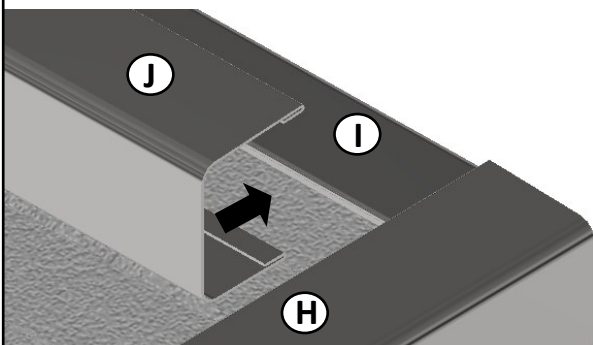


Fix both door boxing in place using six (6) screws.

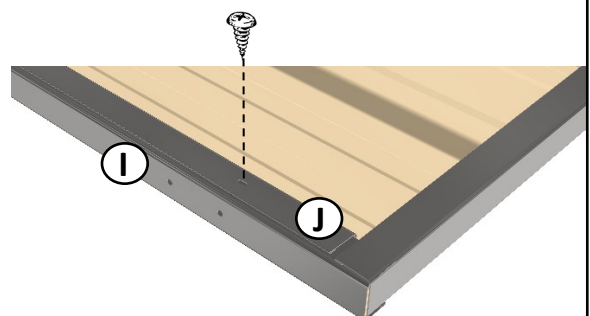


DOOR ASSEMBLY—2 X 2 PANEL

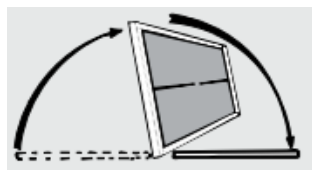


Flip the door assembly over and fix with screws evenly spaced as shown above. Door bracing will also need to be fitted to the door to ensure sturdiness

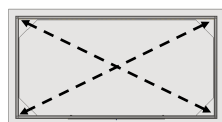

"MAKE SURE THE DIAGONAL

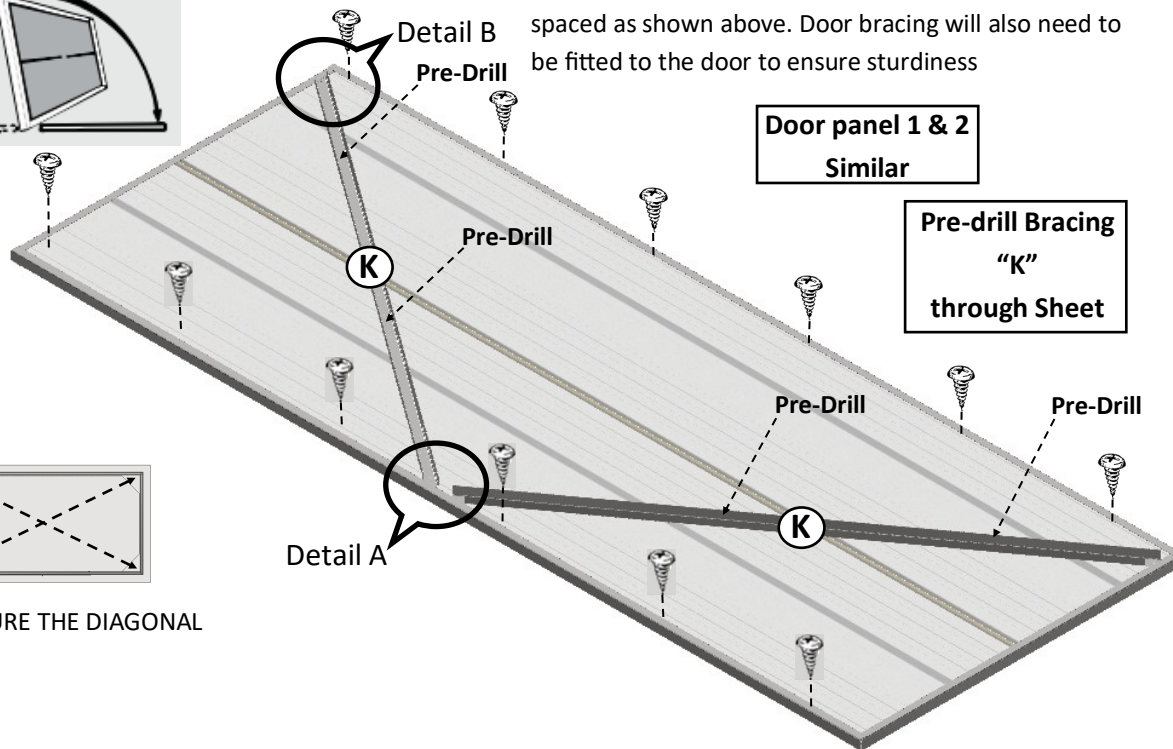

Detail A

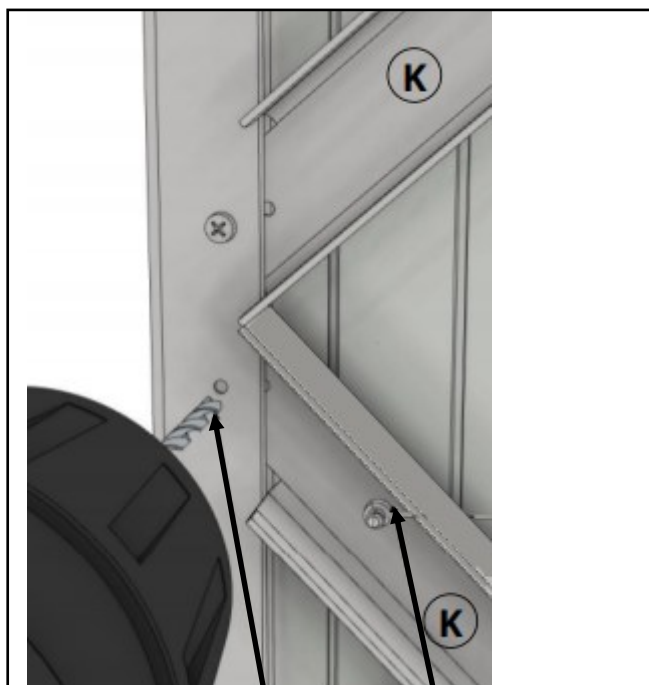


Drill pilot holes for door bracing center joint.

Screw from outside of the door through door sheet at the pre-drilled holes, fixing channel K brace. Typical all fixings on the door.

Detail B

Drill pilot holes for door bracing top joint and fix with self tapping screw. N.B. Channel K brace only narrowly tucks under channels. Take care to drill through channel K with pilot hole.



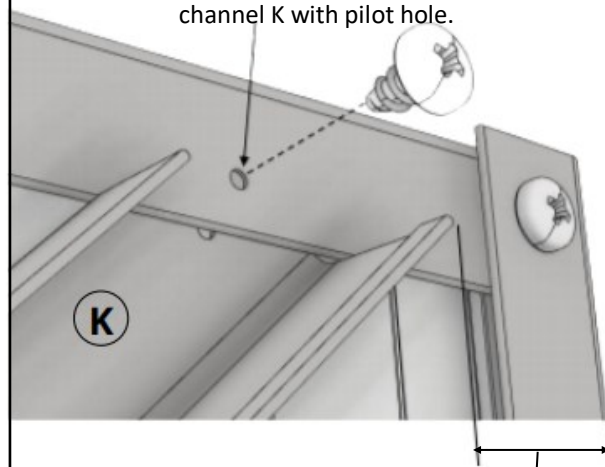


50mm typical at bottom door brace as well

G1510 ASSEMBLY MANUAL

FASTTRAK

DOOR ASSEMBLY

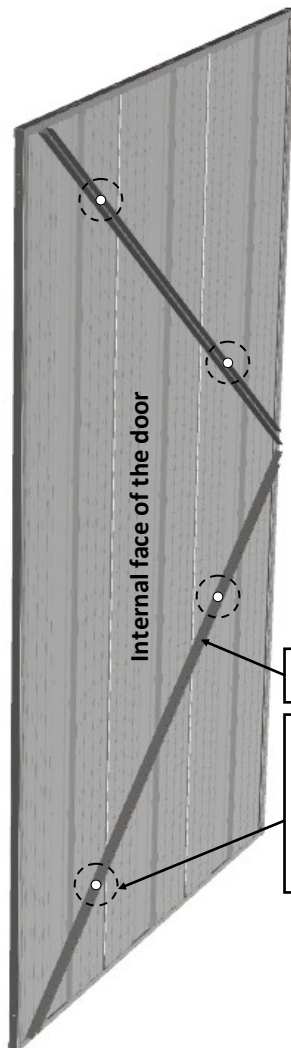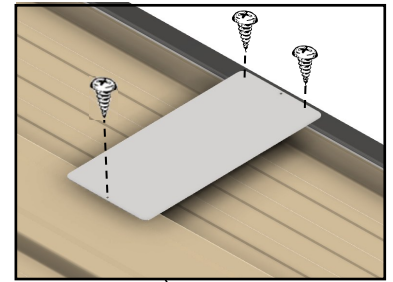


Internal face of the door


Channel K shown on inside

With the holes drilled through channel K on the inside face of the door, screw fixes the channel K to the inside door face. Screw heads from outside face of door

Detail A

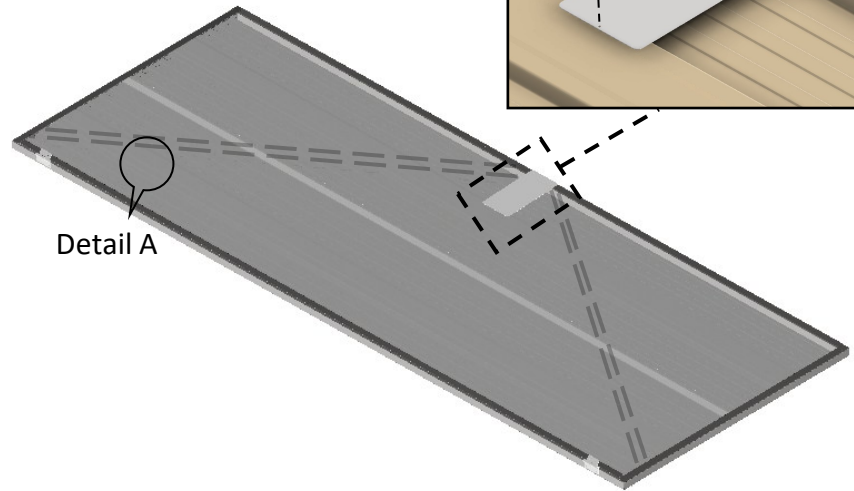


Detail A

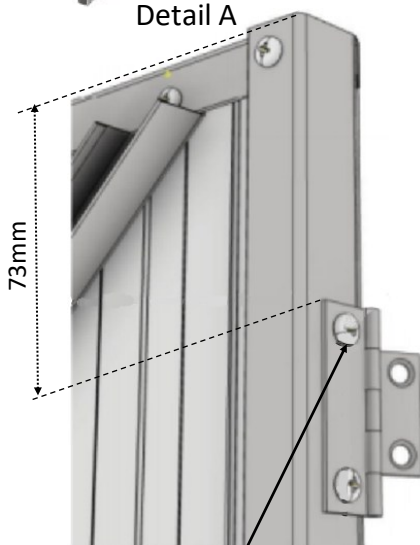

73mm

Screw fix the hinge to the side channel I through punched holes. Typical top and bottom

Equal
Equal

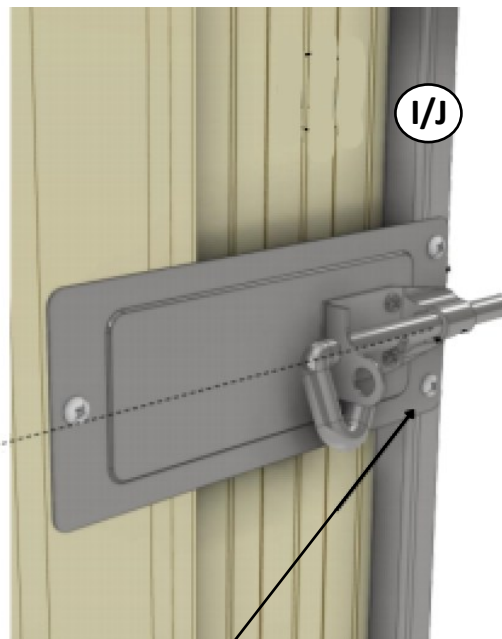


I/J



Position the door plate at the center point, using the door plate as a guide to drill pilot holes through channels I / J and door sheeting. Ensure the end of the plate does not protrude past the door jambs I / J.

Position the pad bolt level and screw fix the pad bolt to the door plate with the screws supplied. Fix the padbolt onto door 1 only.



FIXING 2 X 2 PANEL DOOR

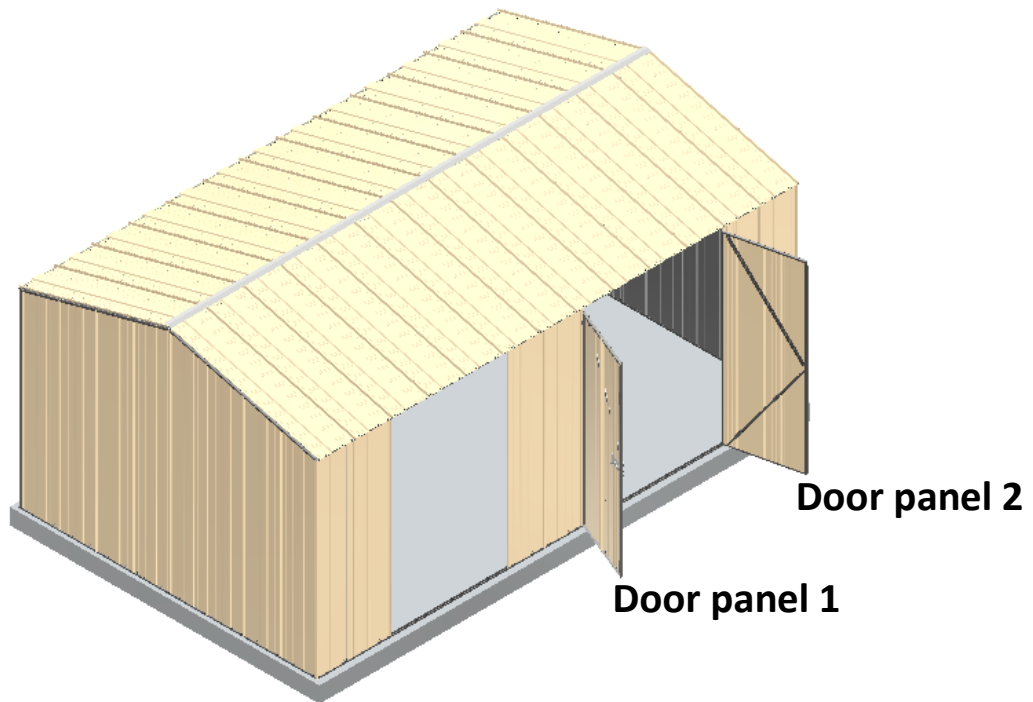



Fit the door to the left or right by fixing the hinges to the pre-drilled holes in the door jambs then fit the padbolt keeper.

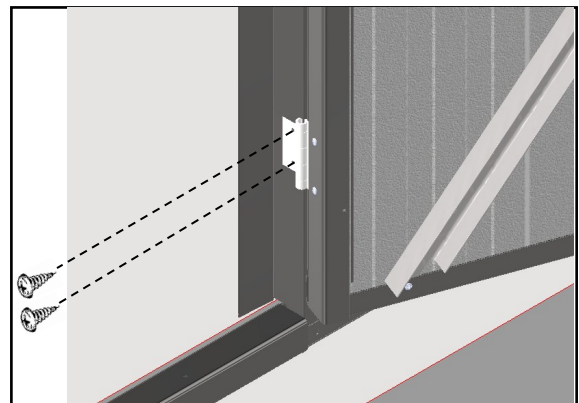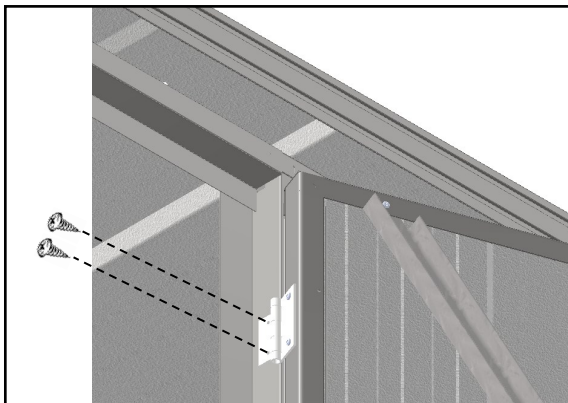


Fit the padbolt and keeper

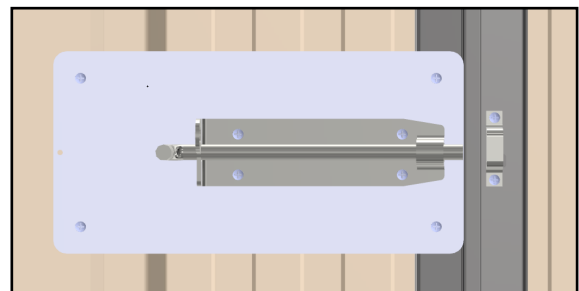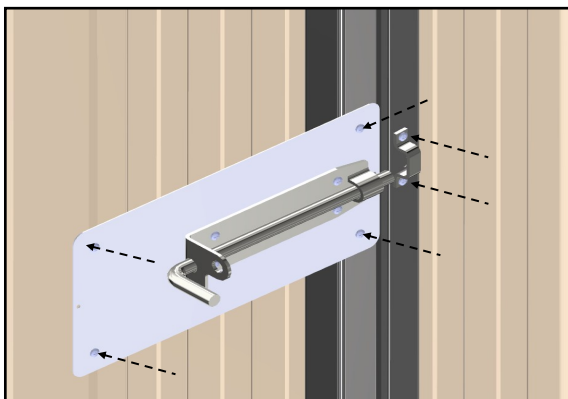

FIXING 2 X 2 PANEL DOOR

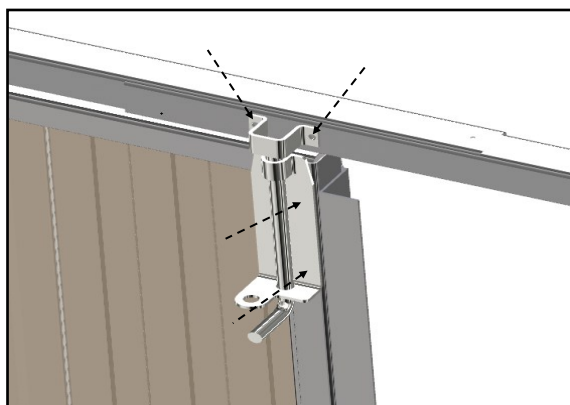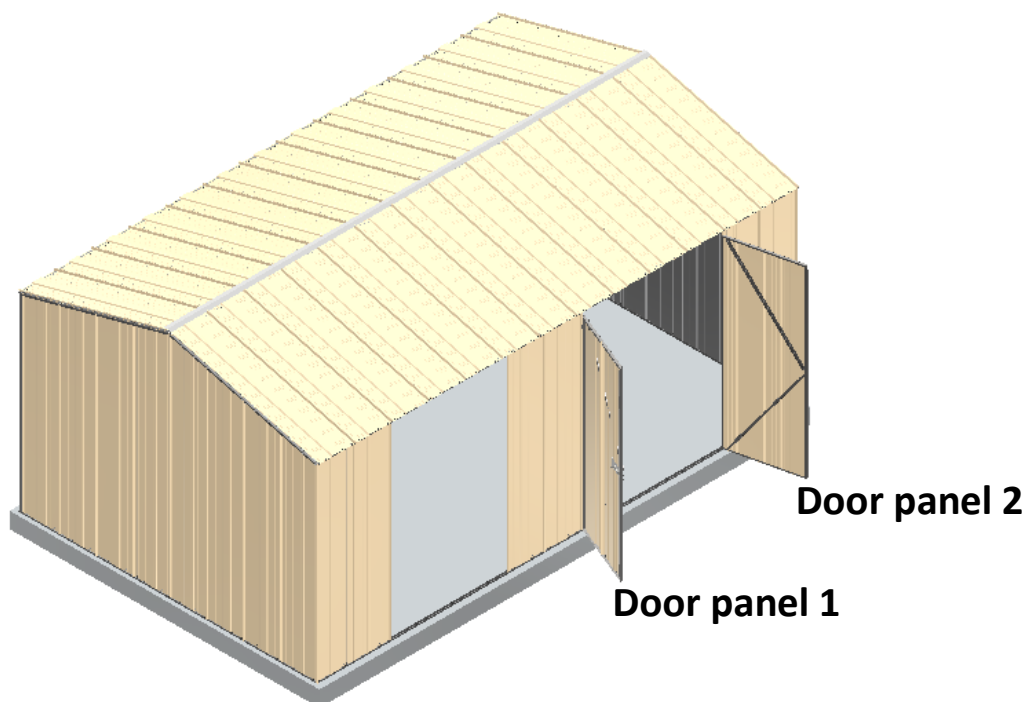


Drill pilot holes into the inside of the door frame of the top of second door next to the door seal and then fix with self tapping screws.


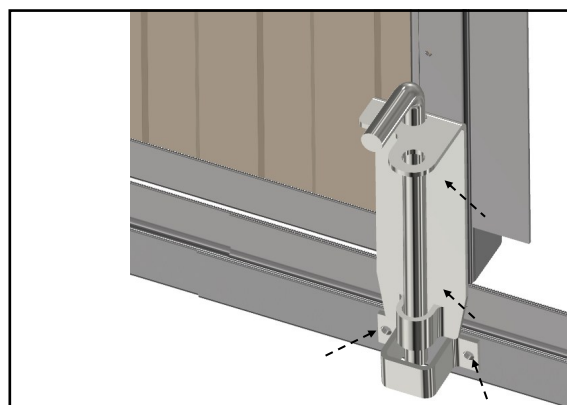


Drill pilot holes into the inside of the door frame of the bottom of second door next to the door seal and then fix with self tapping screws.



DOOR ASSEMBLY 3 PANEL

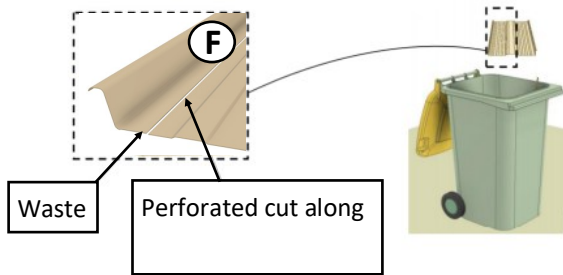

To remove the SMALL lip of the door sheet F, fold back and forth along the perforated pre-cut line. When removed put the waste section into the recycle bin. If too large carefully fold it in half.

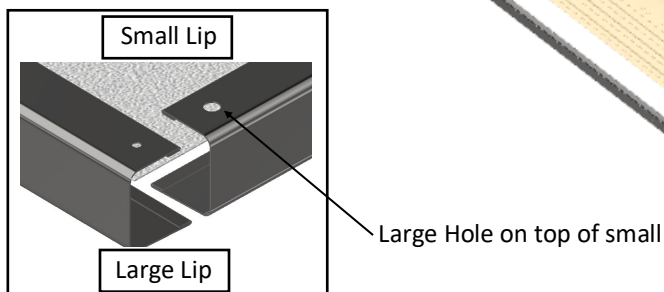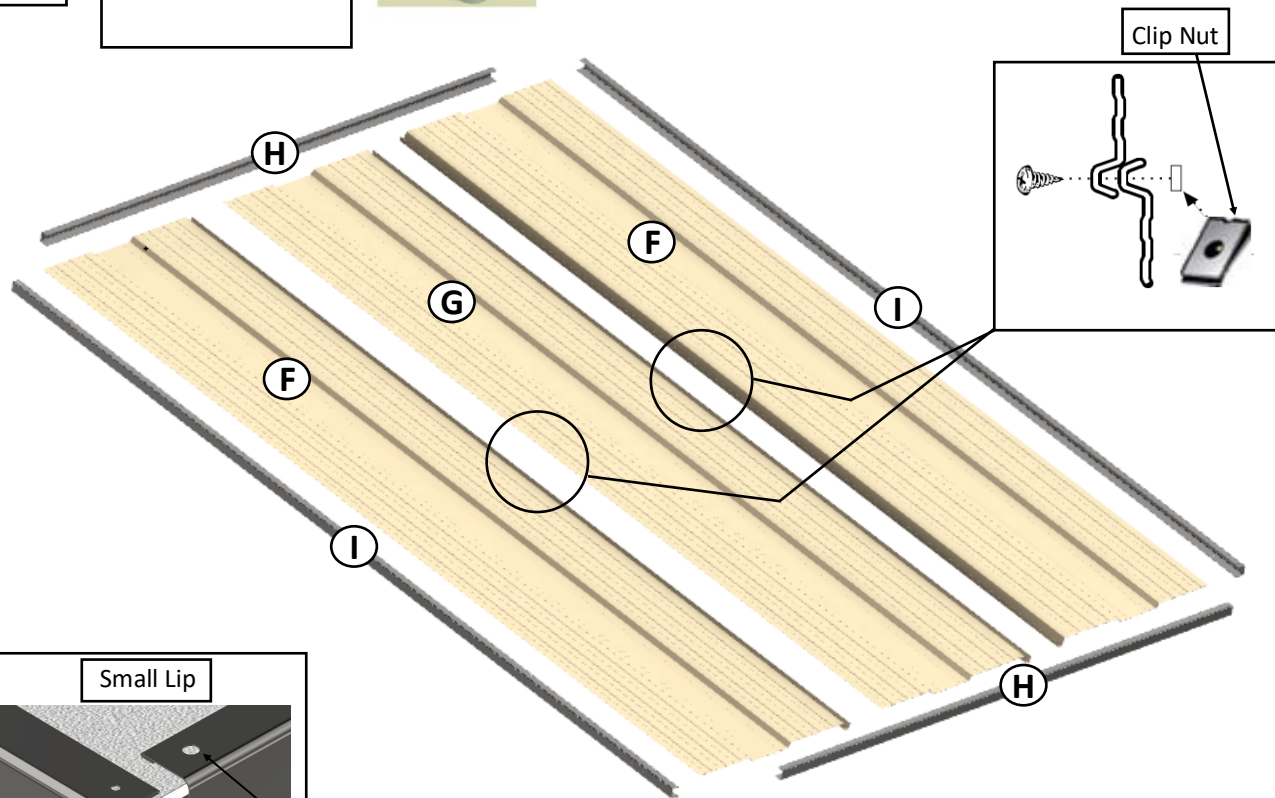

Large rib of the channel is placed to the outside face of the door.

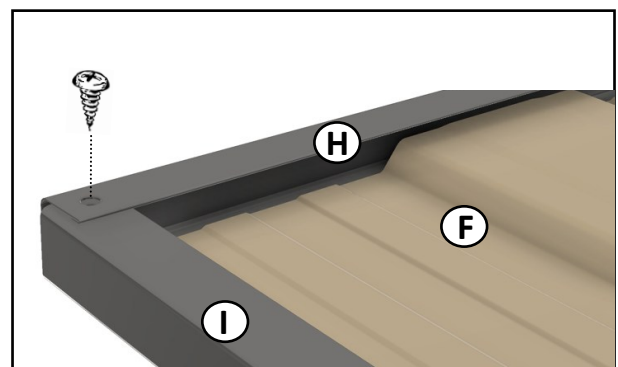
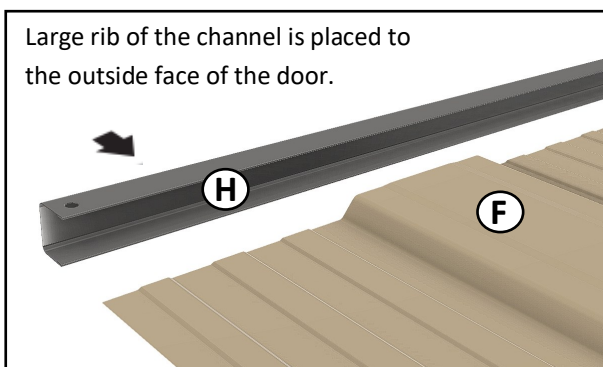


NB: Some channel holes may not align perfectly when the sheets are laid out. They can be easily manipulated into position and screw to the channel.


G1510 ASSEMBLY MANUAL

FASTTRAK


3 PANEL DOOR ASSEMBLY

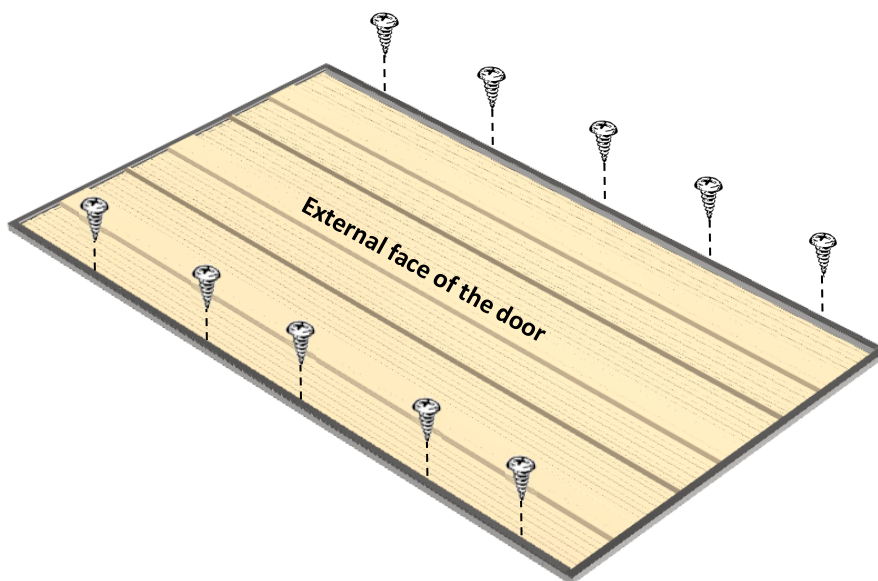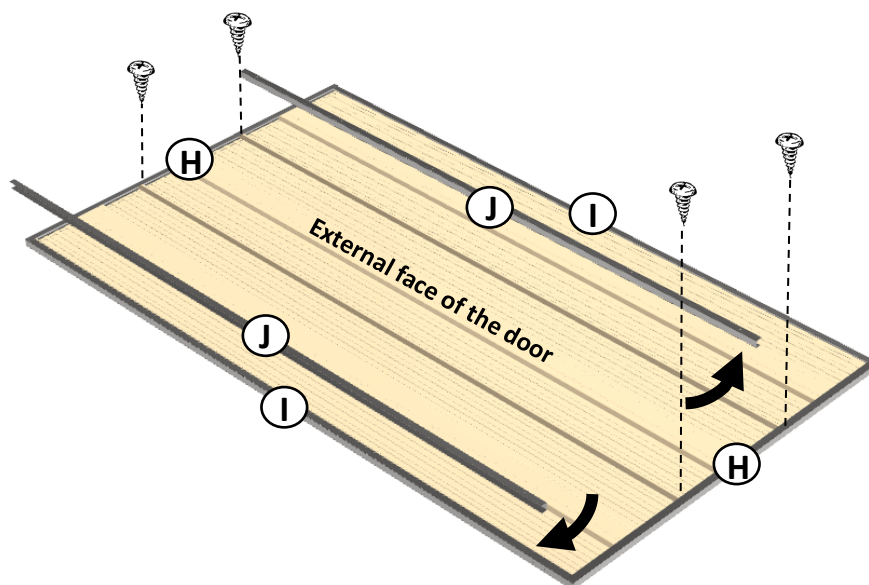

Leave an even gap at both ends of the boxing.
Place large lip of J over the small lip of I as shown

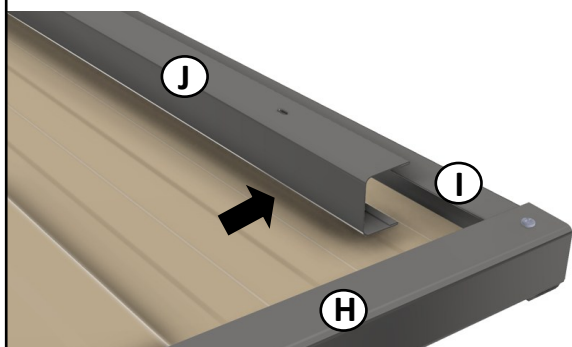


Fix both door boxing in place using six (6) screws.

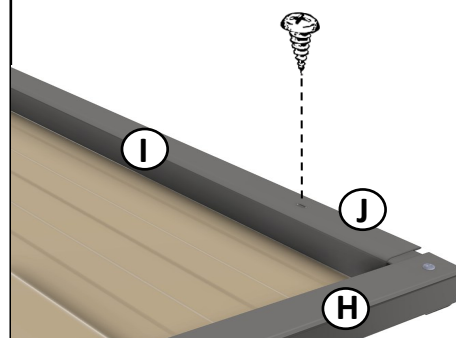

G1510 ASSEMBLY MANUAL



FASTTRAK

DOOR ASSEMBLY 3 PANEL

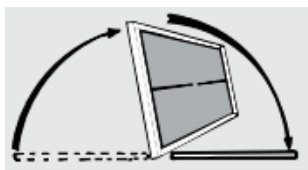

Detail B


Flip the door assembly over and fix with screws evenly spaced as shown above. Door bracing will also need to be fitted to the door to ensure sturdiness

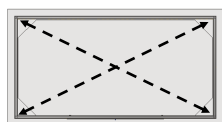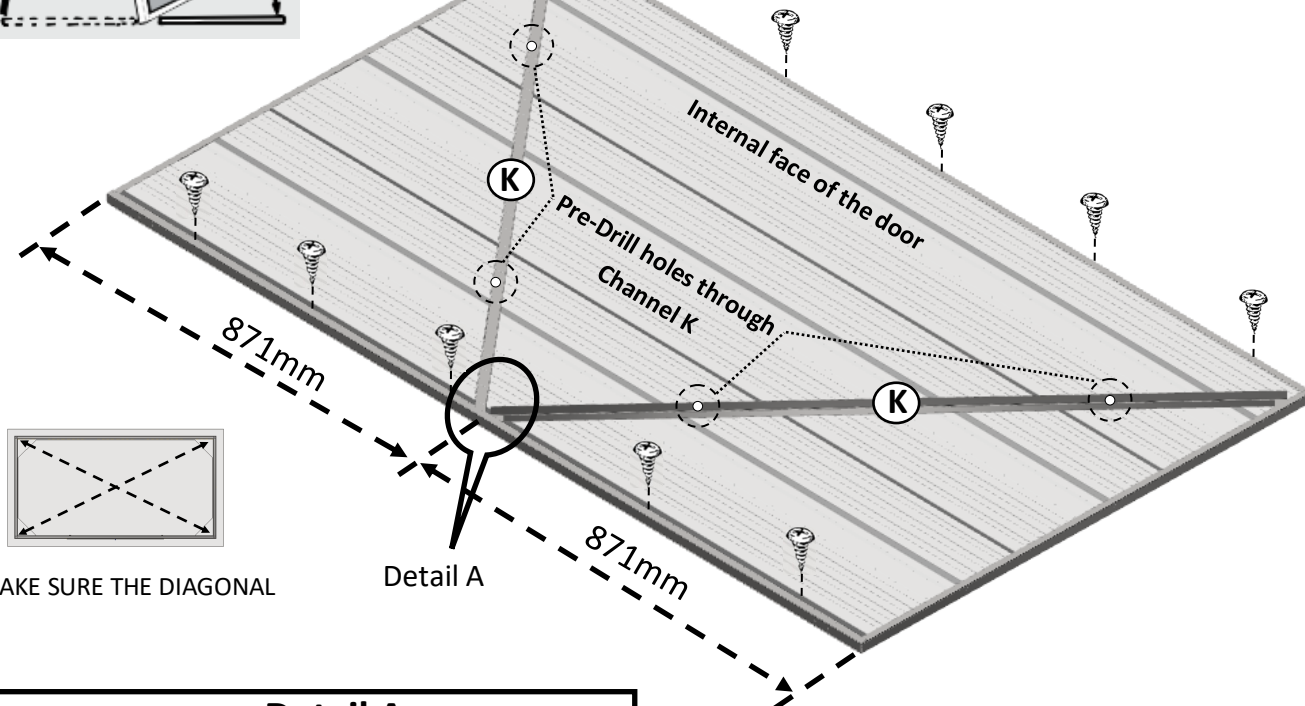

"MAKE SURE THE DIAGONAL

Detail A

Detail A

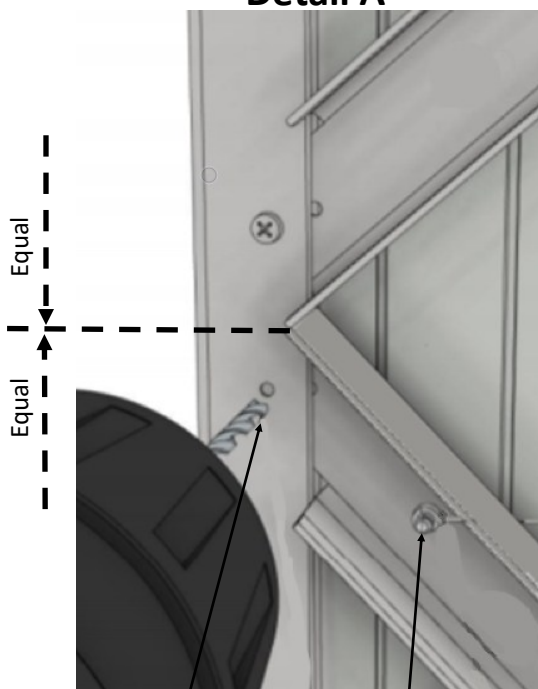


Carefully drill the pilot holes through the inside of the side door frame to catch the door bracing K channel tucked underneath.

Channel K fixed with screw from the front of the door panel.

Detail B

Drill pilot holes for door bracing top joint and fix with self tapping screw. N.B. Channel K brace only narrowly tucks under channels. Take care to drill through channel K with pilot hole.

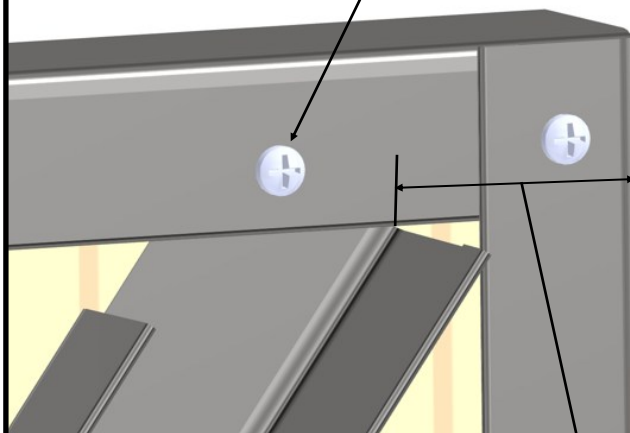



50mm typical at top and bottom door brace as well

G1510 ASSEMBLY MANUAL


FASTTRAK

DOOR ASSEMBLY 3 PANEL

** Shown 2 panel door, procedure is similar for 3 panel doors.

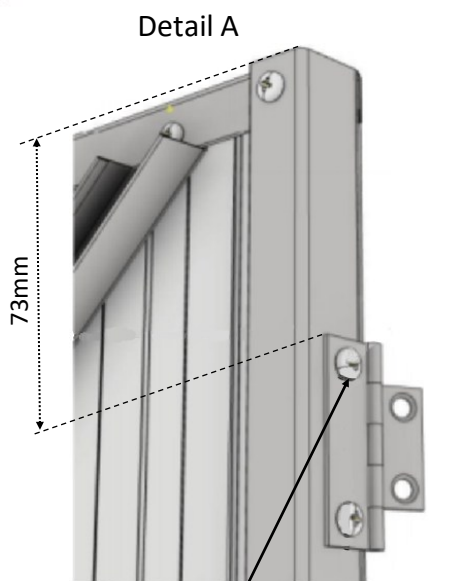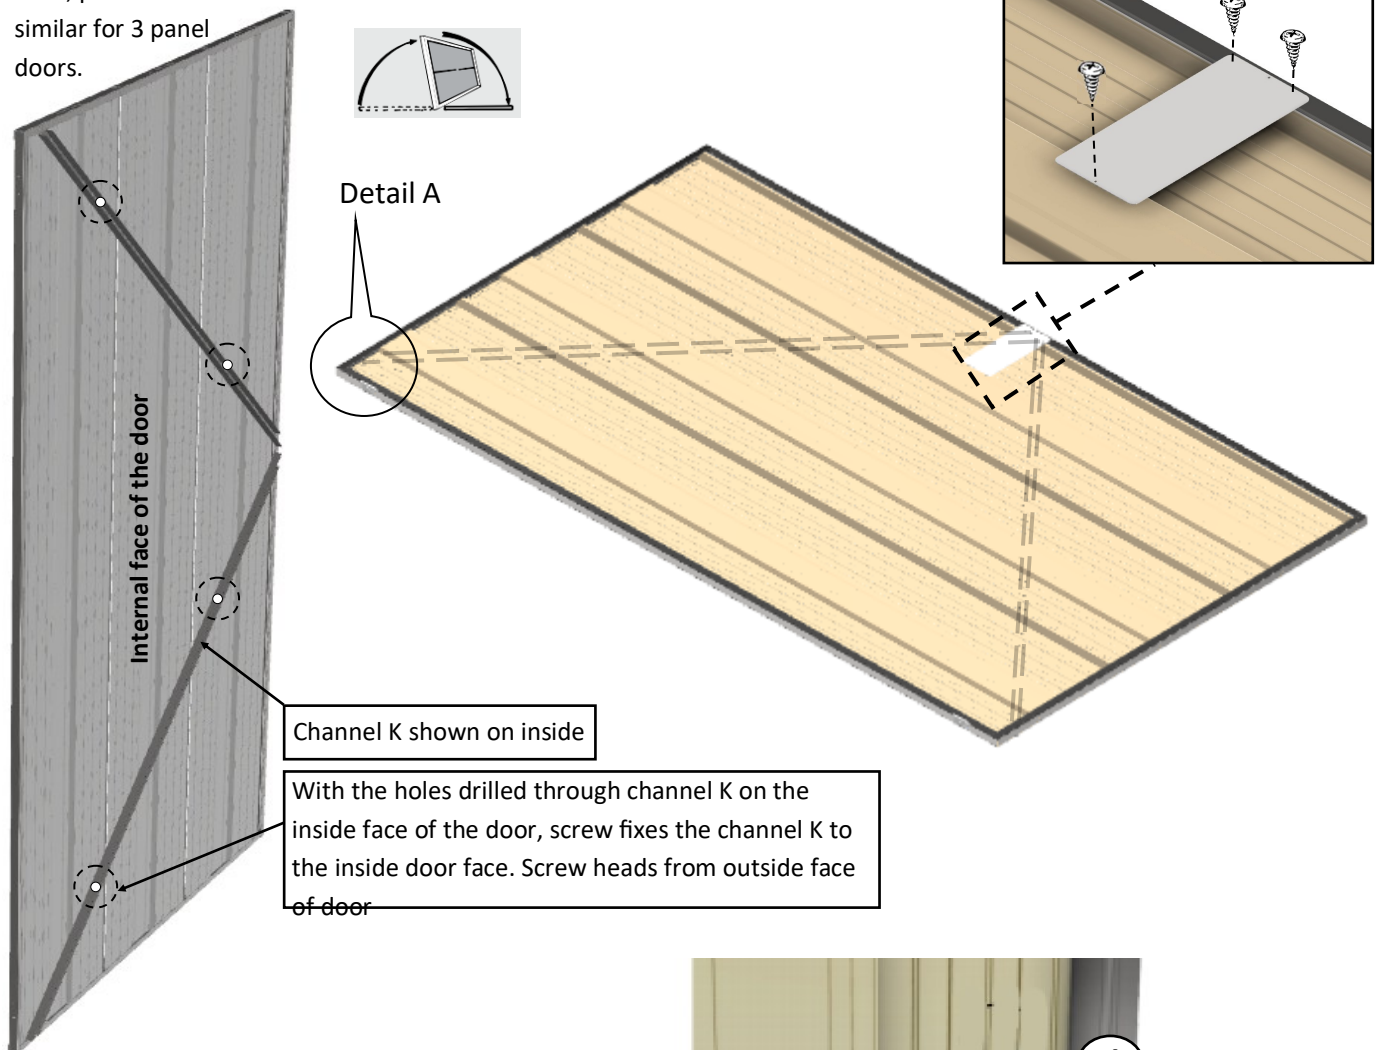


Screw fix the hinge to the side channel I through punched holes. Typical top and bottom

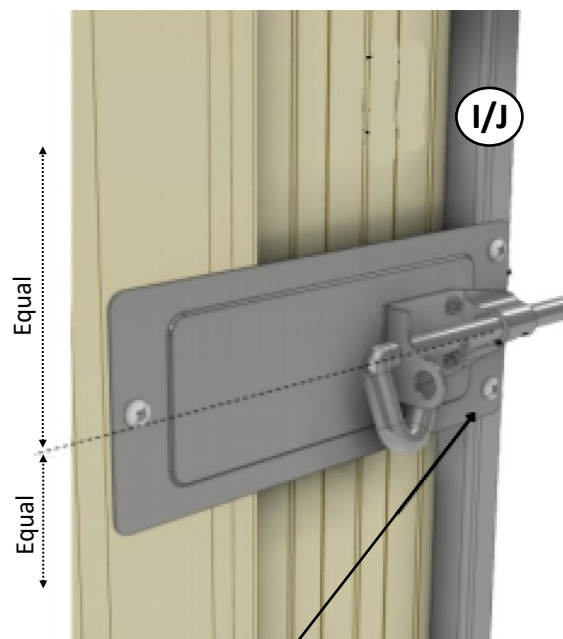

Position the door plate at the center point, using the door plate as a guide to drill pilot holes through channels I / J and door sheeting. Ensure the end of the plate does not protrude past the



Position the pad bolt level and screw fix the pad bolt to the door plate with the screws supplied. Fix the padbolt onto door 1 only.

DOOR ASSEMBLY 3 PANEL


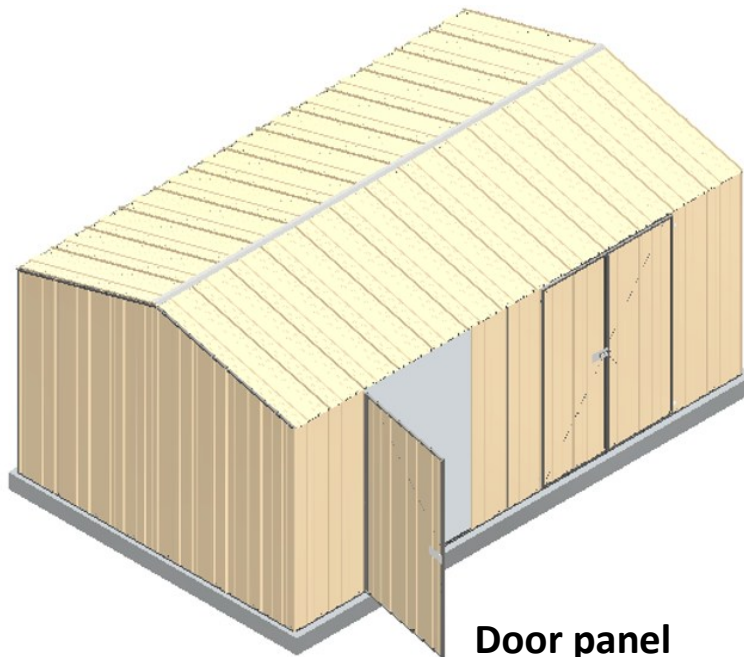


Door panel

Fit the door to the left or right by fixing the hinges to the pre-drilled holes in the door jambs then fit the padbolt keeper.

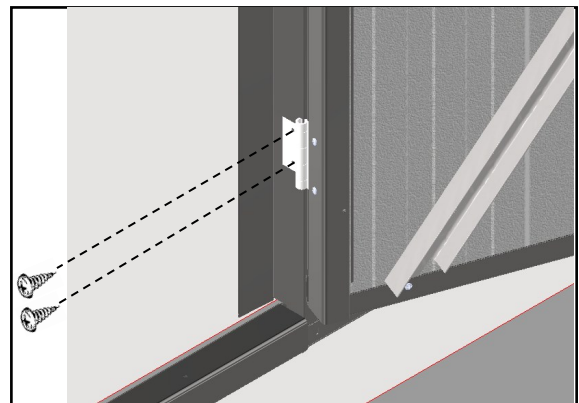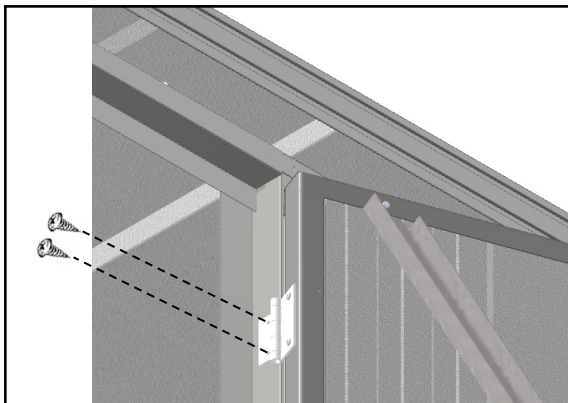

Fit the padbolt and keeper

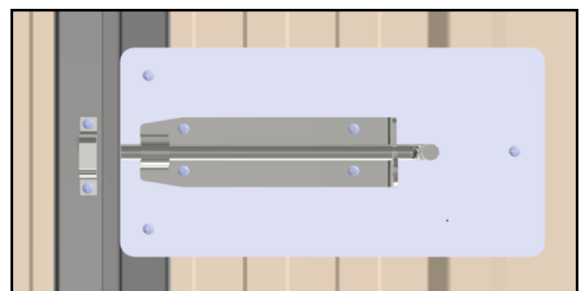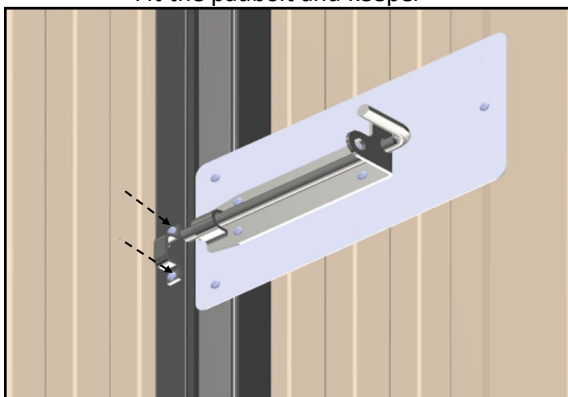

FIT SKYLIGHT (OPTIONAL)

The skylight must be fitted on top of the two adjacent sheets. Fit the steel roof sheets first then fit the skylight as shown below.




The skylight is fixed using two (2) screws at the top and bottom of the sheet. The inset shows a closeup of the overlap. Pilot holes will need to be drilled



G1510 ASSEMBLY MANUAL

FASTTRAK


ANCHORING SHED TO SLAB

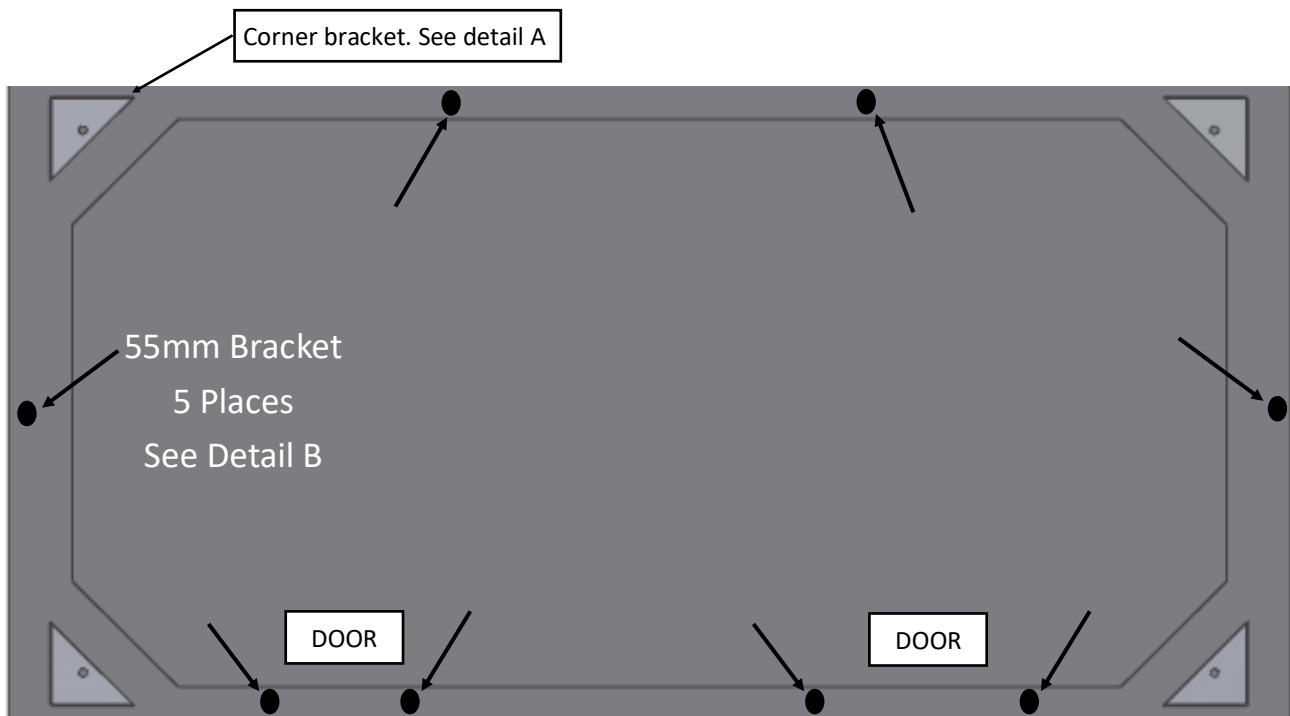

BRACKET FIXING TO SLAB LAYOUT


DETAIL A

Screw fixing corner bracket to wall bottom channels

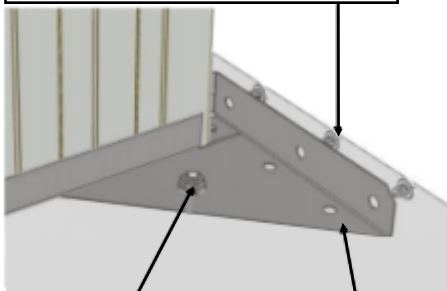

Masonry Anchor


Corner bracket

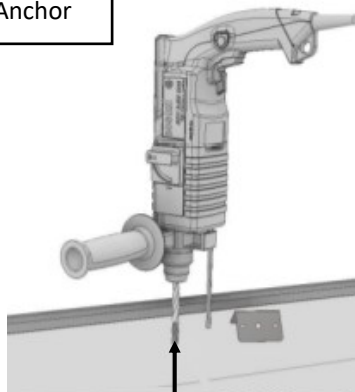

Drill to a depth of 50mm for a M8 Masonry Anchor.
Extract all the dust after drilling Drill size = 10mm Diameter


DETAIL B

DETAIL FROM OUTSIDE

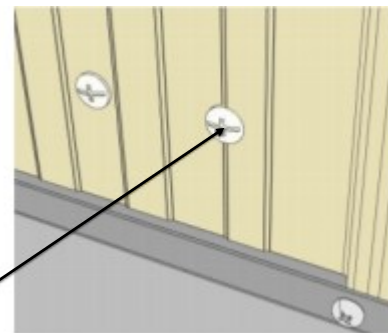

Ensure the bolt heads are to the bottom of the wall pan

DETAIL FROM INSIDE

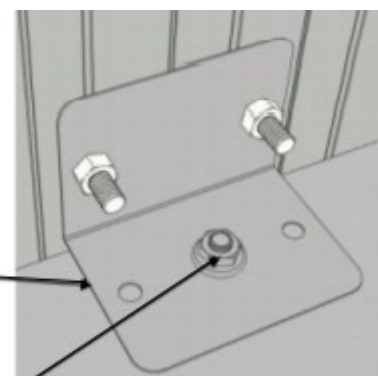

55mm HD Bracket

Masonry Anchor

CARE AND MAINTENANCE (15 YEARS WARRANTY)

Thank you for purchasing the FASTTRAK® system steel garden shed.

Your personal warranty is backed by Steel Sheds Australia, the manufacturer of FASTTRAK® system garden sheds, and our proven commitment to quality and customer service. Our goods come with guarantees that cannot be excluded under Australian consumer law. You are entitled to a replacement or refund of a major failure and compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Cost of claiming the warranty will be by the claimant. This warranty is in addition to other rights and remedies of the customer under law.

Eligibility

1. The 15-year warranty is eligible only to the original purchaser/owner of the shed as registered within 60 days from the date of purchase and is not transferable.
2. The warranty is valid for Australia.
3. The warranty is subject to location and local environmental conditions outlined in the warranty exclusions below.

What is covered under the warranty?

FASTTRAK® steel garden shed 15-year warranty is limited to the following specific cover.

1. Zinc and/or galvanized panel materials will not rust.
2. Colored panel materials will not rust, flake, peel, or blister.

Please note the 15-year warranty does not apply to any accessory items such as fasteners, hasp, pad bolts, also including flooring kits, shelving, hook sets, tool racks, etc.

Warranty Qualifications & Limitations

The FASTTRAK® 15-year warranty is subject to the following qualifications and limitations

1. Warranty does not apply to surface deterioration of the panels caused specifically by a. "Swarf" (tiny particles of steel debris left from cutting, grinding, or drilling operations) that have not been dutifully removed during the assembly construction process. b. As a result of contact with damp soil, chemicals, fertilizers, or other corrosive substances.
2. Warranty does not cover damage caused by storms, wind, rain, hail, snow, or any other adverse environmental event or "act of god".
3. Warranty only applies if the shed is used solely for domestic purposes and installation is in accordance and compliance with the FASTTRAK® instruction manual and manufacturer recommendations.
4. Warranty does not apply if the shed is installed/located in a. Ocean/surf locations (typically defined as within 1km from coastal or tidal locations), b. Severe industrial locations c. Unusually corrosive environments (e.g. Geothermal / Sulphuric conditions)
5. Warranty does not cover any damage as a result of a. Any impact b. Due to poor foundations c. Modifications d. The build-up of debris on or in roof or walls e. Poor assembly and/or construction.
6. The warranty will be void if the shed has been relocated from its original location/address.
7. The warranty is limited to the replacement and delivery of panels and specifically excludes any labour, installation, or removal/disposal costs.
8. Warranty applies to the exclusions of all other representations, guarantees, or warranties, either expressed or implied unless otherwise required by applicable legislation.
9. Your warranty registration certificate and supporting documentation must be completed and lodged within 60 days of the date of purchase.

Warranty Claims

All warranty claims should be made in writing sent directly to:

Steel Sheds Australia, PO Box 1581, Browns Plains, Queensland, 4118

Claims must include:

1. Original proof of purchase documentation.
2. Relevant contact information.
3. Product model.
4. Photographic evidence.
5. Description of the damage.

STRONG, QUICK & EASY

FASTTRAK

CARE AND MAINTENANCE (15 YEARS WARRANTY)

OWNERS DETAILS

Owners Name:	
Street Address:	
City:	
Post Code:	
Email Address:	

BUILDING DETAILS

Product Model Number:	
Colour:	
Place of Purchase:	
Purchase Date:	

Please attach here photocopy of proof of purchase. Retain the original for your records.

You must submit your warranty registration certificate within 60 days of the purchase date of your FASTTRAK® garden shed. Email / Post your certificate and supporting documentation to:

<https://spanbiltdirect.com.au/warranty-registration>

OR

Steel Sheds Australia

PO Box 1581.

Browns Plains,

Queensland,

4118

NOTE

FASTTRAK

STRONG, QUICK & EASY

Enquiries

07 3827 8000

Building Advice Line 1800 032 077

info@steelshedsaustralia.com.au

